



5481

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
NS	1589	865440H66	DRIVESHAFT HOUSING, Comple	1	(Bravo-I 1.36:1 Ratio)(Bravo-II 1.50:1 Ratio)	
NS	1589	865440H67	DRIVESHAFT HOUSING, Comple	1	(Bravo-I 1.50:1 Ratio)(Bravo-II 1.65:1 Ratio)	
NS	1589	865440H68	DRIVESHAFT HOUSING, Comple	1	(Bravo-I 1.65:1 Ratio)(Bravo-II 2.20:1 Ratio)	
-	1589	865440H70	HOUSING ASSEMBLY, Drivesha	1		
1		865441A02	COVER ASSEMBLY, Back	1		
2		12708	SEAL	1		17
3		14497A 2	DETENT ASSEMBLY	1		
4	10	98794	SCREW, (.375-16 x 1.00)	2		
5	10	87158	SCREW, (.375-16 x 1.875)	1		
6		805261A 1	WEAR PAD KIT	1		
7		12711	SHAFT	1		
8		806552A 1	YOKE AND CAM ASSEMBLY	1		
9		806552	YOKE	1		
10	10	805733	SCREW, (.250-28 x 1.00)	2		
11	23	12706	SPACER	2		
12	11	826713 9	NUT, (.250-28)	2		
13	10	865712	SCREW, (.250-28 x .930)	2		
14		861175A 2	SHIFT LINKAGE ASSEMBLY, Hi	1		
15		NSS	NOT SOLD SEPARATE, Shift L	1		
16	12	20583	WASHER	1		
17	18	26953	COTTER PIN	1		
18		86776	LATCH	1		
19		865425A03	UNIVERSAL JOINT ASSEMBLY	1		
20		866133A01	YOKE, Splined, Coupler End	1		
21	25	29845	O-RING, (.924 x .103)	2		17
22	25	35027	O-RING, (1.046)	1		17
23		866137T	CENTER SOCKET, Center	1		
24		866136A01	CROSS AND BEARING	2		
25		866134T	YOKE, Gear End	1		
26	11	862118A 2	RETAINER/SEAL KIT	1		
27	25	861844	O-RING	1		
28	26	807006	SEAL, Oil	1		
29	12	862134	WASHER	1		
30	31	86763A04	BEARING ASSEMBLY, Tapered Ri	1		
31	43	887906A 1	GEAR SET, (29/27)	1		
31	43	887903A 1	GEAR SET, (32/27)	1		
31	43	887909A 1	GEAR SET, (30/23)	1		
32	12	44539	WASHER	1		
33	11	97522	NUT, (.625-18)	1		
34		821630Q 1	ANODE PLATE ASSEMBLY	1		
35	10	65210	SCREW, (.375-16 x 1.00)	2		