



1216A

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
-		882481	STARTER ASSEMBLY, Complete	1		
1		882448	BRACKET, Center	1		
2		882446	HOLDER, Brush	1		
3	10	882389	SCREW	2		
4	87	889903	SOLENOID ASSEMBLY	1		
5		882522	GEAR, Starter Pinion	1		
6	12	882605	WASHER KIT, Starter	1		
7		882606	METAL KIT, Starter	1		
8	11	889904	NUT	3		