



FUEL INJECTION SYSTEM

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		882554	PUMP ASSEMBLY-Fuel Injection	1		
2	13	882641	LOCKWASHER	2		
3	12	882645	WASHER	2		
4		882557	BRACKET-Injection Pump	1		
5		882618	BRACKET-Injection Pump	1		
6	32	882733	PIPE-Injection	1		
7	32	882734	PIPE-Injection	1		
8	32	882735	PIPE-Injection	1		
9	32	882736	PIPE-Injection	1		
10	54	882660	CLIP-Hose	2		
11	32	882600	HOSE-Rubber, Fuel Leak	1		
12		882555	NOZZLE ASSEMBLY-Injection	4		
13	10	882498	SCREW	4		
14	27	882497	GASKET-Leak Off Pipe	8		2
15	27	882488	GASKET-Injection Nozzle	4		2,3
16	27	882418	GASKET-Injection Nozzle	4		2,3
17		882437	PIPE-Fuel, Nozzle Leak Off	1		
18		882568	PIPE-Fuel, Nozzle Leak Off	1		
19	54	882737	CLIP-Injection Pipe	1		
20	54	882738	CLIP-Injection Pipe	2		
21	54	882661	CLIP-Injection Pipe	4		
22	10	882309	SCREW w/Lockwasher (M10 x 16)	2		
23	10	882320	SCREW w/Lockwasher (M8 x 18)	2		
24	10	882333	SCREW	1		
25	10	882621	SCREW (M10 x 50)	2		
26	10	882624	SCREW (M10 x 28)	1		
27	12	882646	WASHER	2		
28	13	882640	LOCKWASHER	4		
29	10	882319	SCREW w/Lockwasher (M8 x 16)	2		
30		882438	BRACKET-Injection Nozzle	2		
31	12	882345	WASHER	2		
32	10	882434	SCREW (M5 x 22)	2		
33	10	882659	SCREW	2		
34	27	882651	GASKET-Leak Off Pipe	4		2,3
35	10	882290	SCREW-Flange (M6 x 10)	1		
36	11	882632	NUT (M8)	2		
37	11	882633	NUT (M10)	2		
38	17	882740	PIN	1		
39	32	882577	HOSE-Boost	1		
40	54	882660	CLIP-Hose	2		
41	54	882652	CLIP-Fuel Pipe	1		