



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		882528	PUMP ASSEMBLY-Oil	1		
2	25	882499	SEAL-Oil, Oil Pump	1		
3		882500	DOWEL-Oil Pump	2		
4		882532	ROTOR-Oil Pump	1		
5	10	882295	SCREW-Flange (M6 x 30)	1		
6	10	882293	SCREW-Flange (M6 x 20)	8		
7		882475	STRAINER AND PIPE ASSEMBLY	1		
8	10	882403	SCREW	1		
9	32	882430	HOSE-Rubber, Oil Strainer	1		
10	27	882382	GASKET	1		1