



- 1 - ECM / Fuel System Harness Connector
- 2 - Electrical Box
- 3 - Main Relay
- 4 - Start Relay
- 5 - Glow Plug Relay (Optional)
- 6 - Glow Plug Relay (Optional)
- 7 - 60 AMP Circuit Breaker
- 8 - 60 AMP Circuit Breaker
- 9 - 12 Volt Battery
- 10- Engine Ground Stud
- 11- Trim Position Sender, Starboard
- 12- Trim Limit Switch, Port
- 13- MerCathode Controller
- 14- 20 Amp Fuse and Holder
- 15- Starter
- 16- Engine Coolant Temperature Sender
- 17- Glow Plugs (If So Equipped)
- 18- Alternator
- 19- Gear Lube Monitor Bottle
- 20- Oil Pressure / Audio Warning Switch
- 21- Oil Pressure Sender
- 22- Diagnostic Connector
- 23- Instrument / Extension Harness Connector

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	855509	ENGINE HARNESS	1	(STERN DRIVE)	
1	84	803626	ENGINE HARNESS	1	(INBOARD)	
1	84	884005	ENGINE HARNESS	1	(STERN DRIVE OR INBOARD)	