



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	32	805741	HOSE-HEAT EXCHANGER TO TH	1		
2	54	815504220	CLAMP	4		
3		854164	BRACKET-HEAT EXCHANGER SL	1	(2.8L-0L343100 and below)(4.2L-4	
3		884002	BRACKET-HEAT EXCHANGER SL	1	(2.8L-0L343101 and up)	
4		854165	LIFTING EYE	1		
5	10	854166	SCREW (M10 X 35)	3		
6	13	40024	LOCKWASHER	3		
7		805681	HOUSING-THERMOSTAT	1	(2.8L-0L343100 and below)(4.2L-4	
7		884003	HOUSING-THERMOSTAT	1	(2.8L)(0L0363101 and up)	
8	10	40003 59	SCREW (M8 X 60)	2		
9	10	40003 63	SCREW (M8 X 100)	2		
10	13	40025	LOCKWASHER	4		
11	27	805723	GASKET	1		2,3,4,5
12		805947T	THERMOSTAT	1	(160 DEG.)	
13		805948	THERMOSTAT	1	(180 DEG.)	
14		854168	COVER-THERMOSTAT HOUSING	1		
15	10	40003 38	SCREW (M6 X 78)	5		
16	16	854169	STUD (M6 X 75)	1		
17	13	40025	LOCKWASHER	6		
18	23	854170	SPACER-ENGINE COVER	1		
19	32	805744	HOSE-THERMOSTAT HOUSING	1		
20	32	805739	HOSE-THERMOSTAT HOUSING	1		
21	54	815504348	CLAMP	2		
	27	855451	OVERHAUL GASKET SET	1	(2.8L)(0K144109 - 0L098058)	
	27	879684	OVERHAUL GASKET SET	1	(2.8L)(0L098059 and up)	1
	27	855448	OVERHAUL GASKET SET	1	(4.2L)(0K144114 - 0L098231)	
	27	881742	OVERHAUL GASKET SET	1	(4.2L)(0L098032 and up)	1