



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	429	853082A 1	CRANKSHAFT ASSEMBLY	1	(INCLUDES CONNECTING ROD	
2	23	853067	BEARING-Main (Standard)	4		
2	23	853068	BEARING-Main (.010)	AR		13
2	23	853069	BEARING-Main (.020)	AR		13
2	23	853070	BEARING-Main (.030)	AR		13
3	23	853071	BEARING-Rear Main (Standard)	1		
3	23	853072	BEARING-Rear Main (.010)	AR		13
3	23	853073	BEARING-Rear Main (.020)	AR		13
3	23	853074	BEARING-Rear Main (.030)	AR		13
4	43	853065	GEAR-Crankshaft	1		
5	28	853066	KEY-Crankshaft	2		
6	17	853081	PIN (3/8 x 1 in.)	1		
7	10	853061	BOLT (M16 x 60)	1		
8	12	853062	WASHER-Crankshaft	1		
9		853063	DAMPER ASSEMBLY	1		
10	23	853064	SLEEVE-Front Oil Seal/Wear	1		
11	222	853076	FLYWHEEL	1		
12	43	853075	GEAR-Flywheel Ring	1		
13		853079	RING-Reinforcement	1		
14	10	853080	BOLT	10		
15		853274	COUPLER PLATE	1		
16	10	802773	SCREW (5/16-18 x 1-1/4 in.)	6		
17	12	40023 17	WASHER	6		
18		805684A 2	COUPLER	1		
19	10	47461	SCREW (7/16-14 x 1)	6		