



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-		831002050	STARTER ASSEMBLY	1		11
-		831002051	STARTER ASSEMBLY	1		
-		831002052	STARTER ASSEMBLY	1		
1		831122180	BOLT-Housing Set	6		
2		831101080	HOUSING ASSEMBLY-Start Driv	1		
3		832521400	BEARING	1		
4		831381250	PACKING	1		
5		831681320	RING-Retainer	1		
6		831021090	STOPPER-Pinion Set	1		
7		830111440	CLUTCH ASSEMBLY-Start	1		
8		831122140	BOLT-Housing Set	4		
9		832191170	WASHER	4		
10		831681340	RING	1		
11		831122200	BOLT-Housing Set	2		
12		831191130	HOUSING-Gear	1	(FOR ?831002050! STARTER)	
12		831191160	HOUSING-Gear	1	(FOR ?831002051! and ?831002052!)	
13		831261510	BEARING-Center	1		
14		831371140	FELT-Oil	1		
15		831131270	LEVER-Pinion Drive	1		
16		831141090	PIN-Drive Lever Set	2		
17		831501790	SWITCH ASSEMBLY-Start Magn	1		
18		832201380	CORE ASSEMBLY-With Joint	1		
19		831122150	BOLT-Housing Set	1		
20		832411100	WASHER-Contact Plate Lock	1		
21		838731380	WASHER	1		
22		832311070	NUT	1		
23	84	831391120	LEADWIRE	1		
24		838731380	WASHER	1		
25		832311060	NUT	1		
26		832191120	WASHER	2		
27	11	832311040	NUT	1		
28		831391130	LEADWIRE	1		
29		832191310	WASHER	1		
30		832311140	NUT	1		
31		832481310	PLATE-Insul	1		
32		838304102	BOLT	1		
33		832191220	WASHER	4		
34		831601510	ARMATURE ASSEMBLY-Start	1		
35		831381410	PACKING	1		
36		832191320	WASHER	1		
37		831381390	PACKING	1		