



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		833001201	INTERCOOLER ASSEMBLY	1	(SEE INTERCOOLER ASSY 833001201)	
2		836975103	CLAMP	4		
3	32	830233363	HOSE-Air	1		
4	32	830233438	HOSE-Air	1		
5		831133301	PIPE-Intake	1		
6	10	839108252	BOLT	4		
7	25	835160102	O RING	1		
8	11	830006050	NUT	2		
9	10	830114300	BOLT	4		
10		839681360	BRACKET-Switch	1		
11		836006140	WASHER	2		
12		831006160	BOLT	2		
13		839108251	BOLT	2		
14		836911450	BRACKET-Solenoid	1		
15		836911221	BRACKET-Solenoid	1		
16	10	839108162	BOLT	4		
17		833021060	BRACKET ASSEMBLY-Intercooler	1		
18	12	835422150	WASHER	4		
19		830124317	BOLT	1		
20		832217120	PLUG	1		
21		830008070	NUT	4		
22	13	838008200	LOCKWASHER	4		
23	12	836008180	WASHER	6		
24		839041970	CLIP ASSEMBLY	2		
25		837802420	CLAMP	8		
26	32	830234114	HOSE-Water	3		
27		837916106	GROMMET	4		
28	32	832681500	PIPE-Coolant By Pass	1		
29	32	832681520	PIPE-Coolant By Pass	1		
30		837204321	CLEANER ASSEMBLY-Air	1	(SEE CLEANER ASSY -AIR 220H-)	
31		837711360	CLAMP-Air Cleaner	1		
32		831001980	TURBOCHARGER ASSEMBLY	1	(SEE TURBOCHARGER ASSY 831001980)	
33	16	836910106	STUD	2		
34	27	831351070	GASKET-Oil Outlet	1		
35		838110250	BOLT	2		
36	32	831071271	PIPE ASSEMBLY-Oil Outlet	1		
37	25	835131103	O RING	1		11
38		831921041	BRACKET-Oil Pipe Turbocharger	1		
39	10	838108200	BOLT	2		
40	10	831912179	BOLT	2		
41	12	835912111	WASHER	7		