



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	1547	2411A 1	DRIVE SHAFT HOUSING ASSEMBLY	1	
2	23	32632	BUSHING, DRIVE SHAFT HOUSING	1	
3	16	30929	STUD, DRIVE SHAFT HOUSING	2	
4	22	31704	PLUG, PIPE - DRIVE SHAFT HOUSING	1	
5	19	32652	WELCH PLUG, DRIVE SHAFT HOUSING	1	
6	27	35996	GASKET, DRIVE SHAFT HOUSING	1	
7	11	34933	NUT, GEAR HOUSING TO DRIVE SHAFT	3	
8		32589A 1	ARM ASSEMBLY, REVERSE HOUSING	1	
9		32520	HOOK, REVERSE	2	
10	10	32527	SCREW, REVERSE HOOKS TO HOUSING	1	
11	12	29245	WASHER, REVERSE HOOKS TO HOUSING	4	
12	11	33825	NUT, REVERSE HOOKS TO HOUSING	1	
13	24	33761	SPRING, TENSION - REVERSE	2	
14	10	32694	SCREW, REVERSE HOOK ARM TO HOUSING	1	
15	12	34016	WASHER, REVERSE HOOK ARM TO HOUSING	1	
16	24	32659	SPRING, TENSION - REVERSE HOOK ARM	1	
17		32588A 1	STOP ASSEMBLY, REVERSE HOUSING	1	
18	10	32524	SCREW, REVERSE HOOK ARM TO HOUSING	1	
19	11	33826	NUT, REVERSE HOOK ARM TO HOUSING	1	
20		32628	SHAFT, SHIFT - INTERMEDIATE	1	
21	12	32666	WASHER, INTERMEDIATE SHIFT	1	
22	18	32665	COTTER PIN, INTERMEDIATE SHIFT	1	
23		35970A 1	BELL HOUSING ASSEMBLY	1	
23	27	35996	GASKET, DRIVE SHAFT HOUSING	1	SEE REFERENCE #6
24	22	33066	CONNECTOR, WATER HOSE TO HOUSING	1	
25	22	32125	CONNECTOR, SHIFT ACTUATOR TO HOUSING	1	
26	10	25612	SCREW, DRIVE - BELL HOUSING	4	
27	23	35088	BUSHING, UPPER SHIFT SHAFT	1	
28	27	35982	GASKET, RUBBER - BELL HOUSING	1	
29	25	33504	"O" RING, BELL HOUSING	1	
30	16	35937	STUD, BELL HOUSING TO DRIVE SHAFT	6	
31	12	35935	WASHER, BELL HOUSING TO DRIVE SHAFT	6	
32	11	34933	NUT, BELL HOUSING TO DRIVE SHAFT	6	
33	10	36398	SCREW, PLUG - BELL HOUSING	2	
34	22	31345	FITTING, GREASE - BELL HOUSING	2	
35		29359	LUBRICAP, BELL HOUSING GREASE	2	
36		36223A 1	BELLOWS ASSEMBLY, UNIVERSAL JOINT	1	
37	54	31765	CLAMP, UNIVERSAL JOINT BELL HOUSING	1	
38	54	31765	CLAMP, UNIVERSAL JOINT BELL HOUSING	1	
39	32	32461	HOSE, WATER - BELL HOUSING	1	
40	54	32522	CLAMP, WATER HOSE TO BELL HOUSING	1	