



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1623	2406A 2	GEAR HOUSING ASSEMBLY, CO	1	SEE NOTE	
1	1623	2406A 1	GEAR HOUSING ASSEMBLY	1	SEE PAGE 11 FOR PARTS BRE	
51		36288	CAM, SHIFT	1		
52		35918	FOLLOWER, CAM	1		
53		30624	SLIDE, CROSS PIN	1		
54	24	37610A 1	SPRING ASSEMBLY, COMPRES	1		
55	12	20583	WASHER, CAM FOLLOWER S	AR		
56	15	35931A 1	SHIM, BEARING CUP TO GEAR	AR		
56	43	35930A 1	FORWARD GEAR ASSEMBLY, CC	1		
57	43	35930	FORWARD GEAR ASSEMBLY	1		
58	31	30895	BEARING, ROLLER - FORWARD GI	1		
59	31	35928A 1	TAPERED ROLLER FORWARD	1		
60	31	35927	CUP, TAPERED ROLLER BE	1		
61	52	35919	CLUTCH, SLIDING	1		
62	17	30632	PIN, CROSS - SLIDING CLUTCH	1		
63	24	30893	SSPRING, RETAINING - CROSS	1		
64	44	35920	SHAFT, PROPELLER	1		
64	43	35916A 1	REVERSE GEAR ASSEMBLY, C	1		
65	43	35916	REVERSE GEAR ASSEMBLY	1		
66		35915	RING, THRUST - BEARING C	1		
67	30	35914	BEARING, BALL - REVERSE G	1		
68	15	31535A 1	SHIM, THRUST RING TO GEAR	AR		
69	25	31534	"O" RING, BEARING CARRIER	1		
70		35913A 1	BEARING CARRIER ASSEMBLY	1		
71	31	30956	BEARING, ROLLER - BEARIN	1		
72	26	30550	OIL SEAL, BEARING CARRIER	2		
73	28	30281	KEY, LOCATING - BEARING C	1		
74	12	31536	WASHER, GEAR HOUSING CO	1		
75		35912	COVER, GEAR HOUSING	1		
76	12	31013	WASHER, THRUST - BEARING C	1		
77		35964A 1	THRUST HUB AND WASHER AS	1		
78	12	35965	WASHER, CUPPED - THRUST	1		
79	12	31211	WASHER, SPLINED - PROPELL	1		
80	14	31210	TAB WASHER, PROPELLER NUT	1		
81	11	29594	NUT, PROPELLER	1		
82		31640	TRIM TAB, GEAR HOUSING	1		
82		34127	TRIM TAB, GEAR HOUSING (LON	1		
83	10	32470	SCREW, TRIM TAB TO GEAR HO	1		
84	10	30206	SCREW, GEAR HOUSING TO DR	1		
85	11	34933	NUT, DRIVE SHAFT HOUSING TC	2		