



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		53042A	2 PLATE ASSEMBLY, TRANSM - (1		
2		34762A	1 PLATE ASSEMBLY, INHIBITOR	1		
3	10	34763	1 SCREW, INHIBITOR PLATE T	2		
4		31636	1 SEAL, RUBBER - OUTER TRAN	1		
5		53723	1 PLATE, TRANSM - INNER	1		
6	10	35624	8 SCREW, OUTER TRANSM PLA	8		
7	12	32660	8 WASHER, RUBBER - OUTER TRA	8		
8	12	21900	8 WASHER, OUTER TRANSM PL	8		
9	11	34087	8 NUT, OUTER TRANSM PLATE	8		
10	10	47467	2 SCREW, INNER TRANSM PLAT	2		
11	12	47475	2 WASHER, INNER TRANSM PLA	2		
12	12	47466	4 WASHER, FIBER - INNER TRAN	4		
13	13	34846	2 LOCKWASHER, INNER TRANSM	2		
14	12	33171	2 WASHER, INNER TRANSM PLA	2		
15	11	22339	1 NUT, INNER TRANSM PLATE S	1		
16		52757	1 CLAMP NUT, STEERING LEVER	1		
17	10	53809	2 SCREW, LOCKING - CLAMP NUT	2		
18	11	21612	2 NUT, LOCKING SCREW	2		
19	16	47360	2 STUD, SHIFT CABLE TO TRANSC	2		
20	12	39143	2 WASHER, SHIFT CABLE STUD	2		
21	23	31866	1 SLEEVE, SHIFT CABLE STUD	1		
22	11	20361	1 NUT, SHIFT CABLE STUD	1		
23	54	23568	3 CLIP, SWITCH HARNESS TO TRA	3		
24	10	22794	3 SCREW, SWITCH HARNESS CLIF	3		
25		22789	3 "D" WASHER, HARNESS CLIP SC	3		
26		49646A	1 SWITCH ASSEMBLY, CUT-OUT -	1		
27	10	30902	2 SCREW, CUT-OUT SWITCH TO II	2		
28		53721A	1 ARM ASSEMBLY, SHIFT CABLE M	1		
29	16	25385	1 STUD, LINK ROD TO MOUNTIN	1		
30	16	47360	1 STUD, SHIFT CABLE TO MOUN	1		
31	23	53811	1 SPACER, SHIFT CABLE STUD	1		
32	12	31760	3 WASHER, SHIFT CABLE STUD	3		
33	11	20361	1 NUT, SHIFT CABLE STUD	1		
34	16	34069	1 STUD, SHIFT ACTUATING CABLE	1		
35	12	31760	3 WASHER, SHIFT ACTUATING CA	3		
36	11	20361	2 NUT, SHIFT ACTUATING CABLE	2		
37	16	32698	1 STUD, MOUNTING ARM TO INNE	1		
38	23	31758	1 SPACER, MOUNTING ARM STUD	1		
39	12	26825	2 WASHER, MOUNTING ARM STUI	2		
40	11	35814	1 NUT, MOUNTING ARM STUD	1		
41		53208	1 LINK ROD	1		