



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1		45060A	HYDRAULIC PUMP ASSEMBLY (E	1			
2	25	21720	"O" RING, HYDRAULIC PUMP T	4			
3	10	46318	SCREW, VENT - HYDRAULIC PI	1			
4	13	46317	LOCKWASHER, SEALING - VEN	1			
5	10	28634	SCREW, FILLER - HYDRAULIC I	1			
6	12	20260	WASHER, SEALING - HYDRAUL	1			
7	54	37282	CLAMP, HYDRAULIC PUMP HAR	1			
8		37821	"O" WASHER, HYDRAULIC PUM	1			
9	38	45372	DECAL, INSTRUCTIONS - HYDRA	1			
10		48077A	CONTROL VALVE ASSEMBLY	1			
10	25	21720	"O" RING, HYDRAULIC PUMP T	4			
11	22	48169	ELBOW, CONTROL VALVE	1			
12	10	F2191	SCREW, CONTROL VALVE TO H	4			
13	13	26992	LOCKWASHER, CONTROL VALVE	4			
14		48498	BRACKET, MOUNTING - HYDRAL	1			
15	10	21477	SCREW, MOUNTING BRACKET T	4			
16	13	21804	LOCKWASHER, MOUNTING BRA	4			
17	10	26066	SCREW, HYDRAULIC PUMP TO H	4			
18	12	20546	WASHER, HYDRAULIC PUMP SC	4			
19	11	21528	NUT, HYDRAULIC PUMP SCREW	4			
20		45325	CONNECTOR AND HARNESS	1			
21		45559	TERMINAL BLOCK, HYDRAULIC	1			
22	10	28192	SCREW, TERMINAL BLOCK TO H	2			
23	10	30663	SCREW, HARNESS LEADS TO TE	2			
24		52752	JUMPER WIRE, STARTER SOLEI	1			
25		25661	STARTER SOLENOID	1			
26	13	26996	LOCKWASHER, STARTER SOLEI	2			
27	11	20645	NUT, STARTER SOLENOID TERM	2			
28	13	26993	LOCKWASHER, STARTER SOLEI	2			
29	11	20083	NUT, STARTER SOLENOID TERM	2			
30		46265	BOOT, RUBBER - STARTER SOLI	2			
31	10	34290	SCREW, STARTER SOLENOID TI	2			
32	13	26992	LOCKWASHER, STARTER SOLEI	2			
33	11	21825	NUT, STARTER SOLENOID SCRE	2			
34		45321	BRACKET, MOUNTING - STARTE	1			
35	10	21140	SCREW, MOUNTING BRACKET T	2			
36	13	26992	LOCKWASHER, MOUNTING BRA	2			
37	13	27660	LOCKWASHER, HYDRAULIC PUM	1			
38	11	20645	NUT, MOUNTING BRACKET TO F	1			
38		48413A	CONTROL PANEL ASSEMBLY, CC	1		GREEN, WHITE AND YELLOW F	
38		48413A	CONTROL PANEL ASSEMBLY, CC	1		RED/GREEN, WHITE AND RED	