



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		45060A 7	HYDRAULIC PUMP ASSEMBLY (E	1		
2	25	21720	"O" RING, HYDRAULIC PUMP T	4		
3	10	46318	SCREW, VENT - HYDRAULIC PI	1		
4	13	46317	LOCKWASHER, SEALING - VEN	1		
5	10	28634	SCREW, FILLER - HYDRAULIC I	1		
6	12	20260	WASHER, SEALING - HYDRAUL	1		
7	54	37282	CLAMP, HYDRAULIC PUMP HAR	1		
8		37821	"D" WASHER, HYDRAULIC PUM	1		
9	38	55823	DECAL, INSTRUCTIONS - HYDRA	1		
10		48077A 4	CONTROL VALVE ASSEMBLY	1		
11	25	21720	"O" RING, HYDRAULIC PUMP T	4		
12	22	52666	ELBOW, CONTROL VALVE	1		
13	10	21091	SCREW, CONTROL VALVE TO H	4		
14	13	26992	LOCKWASHER, CONTROL VALVE	4		
15		48498	BRACKET, MOUNTING - HYDRAL	1		
16	10	21477	SCREW, MOUNTING BRACKET T	4		
17	13	21804	LOCKWASHER, MOUNTING BRA	4		
18	10	26066	SCREW, HYDRAULIC PUMP TO F	4		
19	12	20546	WASHER, HYDRAULIC PUMP SC	4		
20	11	35814	NUT, HYDRAULIC PUMP SCREW	4		
21		45325	CONNECTOR AND HARNESS	1		
22		45559	TERMINAL BLOCK, HYDRAULIC	1		
23	10	35519	SCREW, TERMINAL BLOCK TO H	2		
24	10	30663	SCREW, HARNESS LEADS TO TE	2		
25		52752	JUMPER WIRE, STARTER SOLEI	1		
26		25661	STARTER SOLENOID	1		
27	13	26996	LOCKWASHER, STARTER SOLEI	2		
28	11	20645	NUT, STARTER SOLENOID TERM	2		
29	13	26993	LOCKWASHER, STARTER SOLEI	2		
30	11	20083	NUT, STARTER SOLENOID TERM	2		
31		46265	BOOT, RUBBER - STARTER SOLI	2		
32	10	34290	SCREW, STARTER SOLENOID TI	2		
33	13	26992	LOCKWASHER, STARTER SOLEI	2		
34	11	21825	NUT, STARTER SOLENOID SCRE	2		
35		45321	BRACKET, MOUNTING - STARTE	1		
36	10	21140	SCREW, MOUNTING BRACKET T	2		
37	13	26992	LOCKWASHER, MOUNTING BRA	2		
38	13	27660	LOCKWASHER, HYDRAULIC PUM	1		
39	11	20645	NUT, MOUNTING BRACKET TO F	1		
40		55642A 3	CONTROL PANEL ASSEMBLY, CC	1		
41		55642A 1	PANEL ASSEMBLY, CONTROL	1		