

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		860234A	1 HEAT EXCHANGER	1		
NS		814875	COVER-END	2		
NS	27	803644	GASKET-END COVER	2		
NS	10	814877	BOLT	2		
NS	25	814878	O-RING	2		
NS	36	814879	1 CAP-PRESSURE	1		
2		860326A	1 BRACKET ASSEMBLY-HEAT EXC	1		
3		18431	PAD	2		
4		71587A10	RECOVERY KIT-COOLANT	1	(SEE NOTE)	
5		71587A11	BOTTLE-COOLANT RECOVERY	1		
6		72058	CAP	1		
7		861188A	1 HOUSING-THERMOSTAT	1		
8	25	807134	1 SEAL	1		2
9	23	52020	SLEEVE	1		
10	22	32803	PLUG-PIPE (3/8 IN.)	1		
11		99155	1 THERMOSTAT	1		
12		807075A	1 COVER-THERMOSTAT	1		
13	10	29198	SCREW & LOCKWASHER (5/16-1	2		
14	10	58640	SCREW (3/8-16 X 1 1/4 IN.)	2		
15	22	32802	2 PLUG-PIPE (1/8 IN.)	1		
16	27	53045	1 GASKET-THERMOSTAT HOUSIN	1		2
17	32	860331	HOSE-THERMOSTAT BY-PASS	1		
18	32	862125	HOSE-Heat Exchanger	1	(PORT)	
18	32	860421	HOSE-Heat Exchanger	1	(STARBOARD)	
19	32	860419	HOSE-THERMOSTAT HOUSING	1		
20	32	861059	HOSE-WATER PUMP TO HEAT E	1		
21	32	42850	69 HOSE-HEAT EXCHANGER TO HE	1		
22	32	860332	HOSE-HEAT EXHCHANGER TO F	1		
23	32	808045	HOSE-FUEL COOLER TO TRANSI	1		
24	32	860482	HOSE-WATER PUMP TO INTAKE	1		
25	22	860346	ELBOW-90 DEG. (3/4 IN)	1		
26	22	808042	ELBOW-90 DEG. (1/2 IN)	1		
27	32	808044	1 HOSE-TRANSMISSION OIL COOL	1		
28	54	815504388	CLAMP-HEAT EXCHANGER MOU	2		
29	54	815504220	CLAMP	12		
30	54	815504222	CLAMP	2		
31	54	815504232	CLAM	2		
32	54	815504212	CLAMP	2		
NS	19	807992	3 COVER-HOSE CLAMP END	AR		
.	27	883242A	1 GASKET SET	1		

