



A = FUEL LINE FROM FUEL PUMP

Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		861260T	INJECTOR-FUEL	8	
2	25	851889	O-RING	16	2
3		860373A 4	INTAKE MANIFOLD	1	
4	27	807473A 1	GASKET SET	1	2
5	22	37372	PLUG-PIPE (1/2")	2	
6	22	805408	VALVE-RAIL PRESSURE SERVICE	1	
7	22	805515	CAP	1	
8	10	808010	SCREW (5/16-18 X 1-3/8 IN.)	8	
9		861804T 1	FUEL RAIL	2	
10	10	86885	SCREW (1/4-20 X 1-1/2 IN.)	4	
11		861805	TUBE-FUEL CROSS OVER	2	
12	22	73379	PLUG-PIPE (1/4-18 HEX SOCKET	2	
13	22	32802 2	PLUG-PIPE (1/8" HEX HEAD)	1	
14		807399T	SENSOR-PRESSURE	1	
15	22	33821	CONNECTOR-FUEL LINE	1	
16		861249A 1	SENSOR-M.A.P.	1	
17		805223T	SENSOR-M.A.T.	1	
18		861198	CLIP-MAP SENSOR	1	
19	10	806826	SCREW (#8-32 X 1/4 IN.)	1	
20	25	862053	O-RING	8	
21	27	883242A 1	GASKET SET-ENGINE OVERHAU	1	