



9798

| Parts List | | | | | | |
|------------|-------|-----------|-------------------------|-----|---------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | 50 | 863007A 1 | STARTER MOTOR ASSEMBLY | 1 | | |
| 2 | | 809463A 1 | SOLENOID KIT, Starter | 1 | | |
| 3 | | 805343 2 | SCREW, (.375-16 x 4.33) | 2 | | |
| 4 | | 806949 | NUT, (M8-1.5) | 1 | | |
| 5 | | 806949 | NUT, (M8-1.5) | 1 | | |
| 6 | | 26996 | LOCKWASHER, (#10) | 1 | | |
| 7 | | 79695 | BOOT, Insulator (Black) | 1 | | |
| 8 | | 79023A91 | FUSE, (90 Amp) (90 Amp) | 1 | | |
| 9 | | 826711 9 | NUT, (.250-28) | 1 | | |
| 10 | | 40024 7 | LOCKWASHER, (M8) | 1 | | |
| 11 | | NA | NOT AVAILABLE | 1 | | |
| 12 | | 40021 1 | NUT, (M5) | 2 | | |