



- | | |
|---|---|
| 1 -Fuel Pump | 13 -Water Temperature Sender |
| 2 -Throttle Body | 14 -Fuel Pump Relay |
| 3 -Distributor | 15 -Ignition/Fuel System Relay |
| 4 -Coil | 16 -Fuses (15 Amp) Fuel Pump, (15 Amp) ECM/DLC/Battery, (10 Amp) ECM/Injector/Ignition/Knock Module |
| 5 -Manifold Air Temperature Sensor (MAT) | 17 -Oil Pressure Sensor |
| 6 -Data Link Connector (DLC) | 18 -Harness Connector To Starting/Charging Harness |
| 7 -Manifold Absolute Pressure (MAP) Sensor | 19 - Positive (+) Power Wire To Engine Circuit Breaker |
| 8 -Knock Sensor | 20 -Shift Plate |
| 9 -Idle Air Control (IAC) | 21 -Gear Lube Monitor |
| 10 -Throttle Position (TP) Sensor | 22 -Fuel Pressure Switch |
| 11 -Engine Coolant Temperature (ECT) Sensor | 23 -Water Temperature Sender |
| 12 -Electronic Control Module (ECM) | 24 -Water Temperature Sender |

19360

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
-	84	861159T 1	WIRING HARNESS	1	(350 MAG MPI & HORIZON)	