



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		14336A20	HYDRAULIC PUMP ASSEMBLY	1		
2	84	79138A 9	BATTERY CABLE, BLACK (NEGA)	1		
3	10	90285	SCREW, GROUND	1		
4	12	56720	WASHER, GROUND SCREW	1		
5	11	68292	NUT, GROUND SCREW	1		
6	84	79147A 3	HARNES ASSEMBLY, HYDRAUL	1		
7	88	79091	FUSE (20 AMP.)	1		
8	84	95084A 2	WIRE, FUSE	1		
9		88075	RETAINER, HARNESS TO MOUN	1		
10	89	96158T	SOLENOID, TRIM PUMP	2		
11	10	41508	SCREW, STARTER SOLENOID TI	4		
12	11	26419	NUT, STARTER SOLENOID TERM	4		
13	13	26992	LOCKWASHER, STARTER SOLE	4		
14	11	94330	NUT, STARTER SOLENOID TERM	4		
15	85	861680	BOOT, RUBBER - STARTER SOLI	1		
16	10	48409	SCREW, SOLENOID INSULATOR	1		
17		94275	CONNECTOR, SOLENOID TO SOI	1		
18	84	86322A15	WIRE, SOLENOID TO SOLENOID	2		
19	84	79139A12	BATTERY CABLE, RED (POSTIVE	1		
20	88	79023A10	FUSE (110 AMP.)	1		
21	12	96457	WASHER, FUSE TERMINAL	1		
22	11	21825	NUT, FUSE TERMINAL	1		
23		862548A 1	BRACKET ASS'Y, MOUNTING - H	1		
24		58491	BUMPER, RUBBER - PUMP MD	2		
25	10	59784	SCREW, PUMP MOUNTING BR.	6		
26	12	29245	WASHER, PUMP MOUNTING B	6		
27	10	35386	SCREW, HYDRAULIC PUMP TC	2		
28	13	39107	LOCKWASHER, HYDRAULIC PL	2		
29	84	86322A24	WIRE ASSEMBLY (BLACK)	1		
-		14336A17	COMPLETE HYDRAULIC PUMP	-	(INCLUDES ALL PARTS ON THIS	