



1403

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
--	1646	5321A14	GEAR HSG ASSY, COMPLETE (L)	1		
--	1646	5321A13	GEAR HSG ASSY, COMPLETE (R)	1		
1	1646	5321A 6	GEAR HOUSING ASSEMBLY	1		
2	16	57982	STUD, GEAR HOUSING (1-7/8")	1		
3	31	68290A 1	ROLLER BRG, DRIVE SHAFT	1		
4	10	79953	SCREW, VENT - GEAR HOUSING	1		
5	12	20260	WASHER SEAL - VENT SCREW	1		
6	43	70934	PINION GEAR (16 TEETH)	1		
7	12	54048	WASHER PINION GEAR TO DRIVE	1		
8	11	55819	NUT, PINION GEAR TO DRIVE	1		
9	45	66666T	DRIVE SHAFT	1		
10	15	66672A 1	SHIM ASSY, ROLLER BEARING	AR		
11	31	66670A 1	TAPERED ROLLER BEARING A	1		
12	31	68266A 1	TAPERED ROLLER BEARING A	1		
13	25	54030	"O" RING, GEAR HOUSING	1		
14		31640A 1	TRIM TAB ASSEMBLY, GEAR H	1		
15	10	41350	SCREW, TRIM TAB TO GEAR H	1		
16	15	47397A 1	SHIM ASSY, ROLLER BEARING	AR		
17	31	35928A 1	TAPERED ROLLER BEARING A	1		
18	44	92327	PROPELLER SHAFT (LEFT HA)	1		
19	31	66668A 1	TAPERED ROLLER BEARING A	1		
16	15	39899A 1	SHIM ASSY, ROLLER BEARING	AR		
17	31	68266A 1	TAPERED ROLLER BEARING A	1		
18	44	92328	PROPELLER SHAFT (RIGHT H)	1		
19	31	35928A 1	TAPERED ROLLER BEARING A	1		
20	43	70933	DRIVE GEAR (18 TEETH)	1		
21	12	66667	THRUST RING	1		
22		67440T	LOAD RING, THRUST RING	1		
23	25	31534	"O" RING, BEARING CARRIER	1		
24		66663A 1	BEARING CARRIER ASSEMBLY	1		
25	31	30956	ROLLER BEARING, BEARING	1		
26	26	76868	OIL SEAL, BEARING CARRIER	2		
27	28	30281	KEY, LOCATING - BEARING CARRIER	1		
28	14	79447	TAB WASHER, GEAR HOUSING	1		
29		79448	COVER, GEAR HOUSING	1		
30		92950	THRUST HUB	1	(USE WITH RUBBER HUB CLEARANCE)	
32	12	31211A 2	WASHER, BEARING HUB	1	(USE WITH RUBBER HUB CLEARANCE)	
33	14	31210	TAB WASHER, PROPELLER NUT	1	USE WITH RUBBER HUB CLEARANCE	
34	11	52707A 1	NUT, PROPELLER	1		
35	25	54029	"O" RING, GEAR HOUSING	1		
36	10	47557	SCREW, GEAR HOUSING (1.12")	1		