



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		830491031	BRACKET ASSEMBLY-OIL PUMP	1		
2		831045130	BRACKET ASSEMBLY-ACCEL COI	1		
3		831913590	BRACKET-ACCEL WIRE SUPPOR	1		
4		836911670	PIPE-COOLANT	1		
5	10	831110602	BOLT	2		
6		830873140	PIPE ASSEMBLY-COOLANT BY-P.	1		
7		836945101	CLAMP	10		
8		830234133	HOSE-WATER	1		
10	27	831041090	GASKET ASSEMBLY-EXHAUST M	1		
11		831401212	MANIFOLD ASSEMBLY-EXHAUST	1		
12	16	836910103	STUD	6		
13		830108180	STUD	2		
14	10	838108200	BOLT	28		
15	36	834011290	CAP ASSEMBLY-RAD	1		
16		835851020	SEAT-FILLER PIPE	1		
17	27	834131040	GASKET-FILLER PIPE	1		
18		831414001	MANIFOLD-EXHAUST	1		
19		832651260	COVER-WATER GALLERY	1		
20		832226170	PLUG	1		
21		839108251	BOLT	6		
22	25	830115222	GASKET	1		
23		831691150	PLATE	3		
25	22	830511090	COCK ASSEMBLY-COOLANT	1		
26		830108180	STUD	2		
27	13	838008200	LOCKWASHER	2		
28	11	830108070	NUT	2		
30		831691150	PLATE	3		
32	10	839108401	BOLT	2		
33		832651250	COVER-WATER GALLERY	1		
34	25	830115222	GASKET	1		
35		834051080	ELEMENT ASSEMBLY-HEAT EX	1		
36	10	832910229	BOLT	6		
37	12	836010180	WASHER-PLAIN	6		
38		838010250	LOCKWASHER	6		
39		831910111	BOLT	6		
40		831131620	PIPE-COOLANT PUMP SUCTION	1		
41		834404535	O RING	1		
42	13	838008200	LOCKWASHER	2		
43	11	830108070	NUT	2		
44		832910102	PLUG	1		
45		832910189	BOLT	1		