



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		833111330	PLATE-Timing Cover	1		
2	27	833121170	GASKET-Plate	1		
3		833223120	COVER-Timing Gear	1		
4		833512842	HOUSING-Flywheel-Front	1		
5		833513481	HOUSING-Flywheel-Rear	1		
6		833611250	COVER-Inspection	1		
7		834991060	PLATE-Seal	1		
8		833011341	BRACKET-Engine Mtg.-Front	2		
9		833031332	BRACKET-Engine Mtg.-Right Rear	1		
10		833251530	BRACKET-Engine Mtg.-Left Rear	1		
11		836901101	CASE ASSEMBLY-Bearing Holder	1		
12		834999983	CASE-Bearing Holder	1		
13		833911330	POINTER-Timing	1		
14		833011050	PIPE-Coolant	1		
15		830211235	FLANGE	1		
16		838108650	BOLT-Cover	5		
17	10	838108850	BOLT-Cover	3		
18		838108900	BOLT-Cover	2		
19		838108750	BOLT-Cover	1		
20	10	838108200	BOLT-Cover	4		
21		838908110	BOLT-Plate	4		
22	10	839108202	BOLT-Flange	2		
23	10	839108351	BOLT-Housing	6		
24	10	839108252	BOLT-Case	3		
25		835114350	STUD-Starter	1		
26	10	830110250	BOLT-Plate	2		
27		830210300	BOLT-Bracket	6		
28		831114402	BOLT-Housing	8		
29	10	831110401	BOLT- Housing	6		
30	10	831210301	BOLT-Bracket	4		
31	10	831910118	BOLT-Bracket	4		
32	19	832910115	PLUG HOUSING	1		
33	19	833922105	PLUG-Cup	1		
34		833932102	PLUG-Cup	1		
35	25	834402135	O-RING	1		
36		831372250	RING-Retaining	1		
37	26	832800109	SEAL-Oil	1		
38	26	832858104	SEAL-Oil	1		
39	25	835181102	O-RING	1		
40		830062070	BEARING	1		
42		830211990	MOUNT-Linker-Front	2		