

Section 1 - Two Stroke Models

Table of Contents

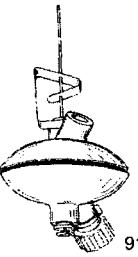
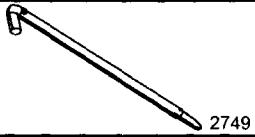
| | | | |
|---|---|--|----|
| Installation and Maintenance..... | 2 | Powerhead..... | 11 |
| Maintenance Tool Application Chart..... | 2 | Powerhead Tool Application Chart..... | 11 |
| Maintenance Tools..... | 2 | Powerhead Tools..... | 13 |
| Electrical..... | 3 | Mid-Section..... | 17 |
| Electrical Tool Application Chart..... | 3 | Mid-Section Tool Application Chart..... | 17 |
| Electrical Tools..... | 4 | Mid-Section Tools..... | 18 |
| Fuel System..... | 8 | Lower Unit..... | 20 |
| Fuel System Tool Application Chart..... | 8 | Gear Housing Tool Application Chart..... | 20 |
| Fuel System Tools..... | 9 | Gear Housing Tools..... | 23 |

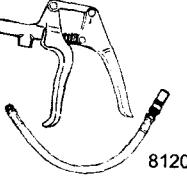
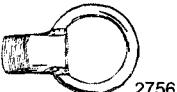
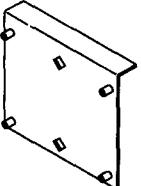
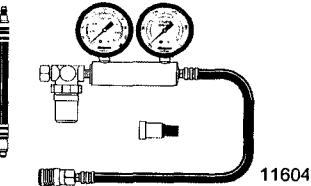
Installation and Maintenance

Maintenance Tool Application Chart

| Part No. | Description | 2.5/3.3 | 4/5 102 cc | 6-15 | 20/25 20 Jet | 30/40 2 Cyl. | 40-60 30/40 Jet | 75-125 65/80 Jet | 135-200 | 150-200 EFI | 200-250 EFI 3.0L Work |
|---------------------|-----------------------------|---------|---------------|------|-----------------|-----------------|--------------------|---------------------|---------|-------------|--------------------------|
| 44357Q2 | Flushing Device | | X | | X | X | X | X | X | X | X |
| 888462A1 | Data Cable Puller | | | | | | | | | X | X |
| 17-49930A1 | Stainless Steel Tilt Pin | | | | | | | X | X | X | X |
| 91-12612T2 | Flushing Device | | | X | | | | | | | |
| 91-37299Q2 | Grease Gun | X | X | X | X | X | X | X | X | X | X |
| 91-66274 | Torque Wrench, lb. in. | X | X | X | X | X | X | X | X | X | X |
| 91-90455-1 | Lifting Eye | | | | | X | X | X | X | X | X |
| 91-98234A2 | Transom Drilling Fixture | | | | | X | X | X | X | X | X |
| Snap-On EEPV303B | Compression Tester | X | X | X | X | X | X | X | X | X | X |
| Snap-On EEPV309A | Cylinder Leakage Tester | X | X | X | X | X | X | X | X | X | X |

Maintenance Tools

| | |
|---|---|
| Flushing Device | 44357Q 2 |
|  9192 | Attaches to the water intakes; provides a fresh water connection when flushing the cooling system or operating the engine. |
| Data Cable Puller | 888462A1 |
|  4618 | Attaches to end of DTS data harness to aid in pulling harness through boat. Prevents damage to DTS data harness. |
| Stainless Steel Tilt Pin | 17-49930A 1 |
|  2749 | Limits the down trim angle of the power trim equipped engines, or aids in determining the trim out angle on non-power trim engines. |
| Flushing Device | 91-12612T 2 |
|  13497 | Attaches to the water intakes; provides a fresh water connection when flushing the cooling system or operating the engine. |

| | |
|---|--|
| Grease Gun | 91-37299Q 2 |
|  8120 | Aids in the lubrication of key areas on the engine. Allows easy access to grease fittings. |
| Torque Wrench, lb. in. | 91-66274 |
|  10829 | Dial type torque wrench that sets torque from 9 to 150 lb. in.; 3/8 in. drive. |
| Lifting Eye | 91-90455-1 |
|  2756 | Threads into the flywheel to remove the powerhead assembly from the driveshaft housing, or to lift entire engine for removal/installation. |
| Transom Drilling Fixture | 91-98234A2 |
|  5489 | Aids in engine installation by acting as a template for engine mounting holes. |
| Compression Tester with Adapter | Snap-On EEPV303B |
|  8511 | Checks cylinder compression. Use with M14 x 1.25 adapter. |
| Cylinder Leakage Tester | Snap-On EEPV309A |
|  11604 | Aids in checking cylinder leakdown. |

Electrical

Electrical Tool Application Chart

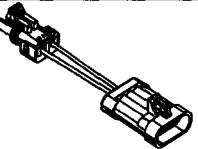
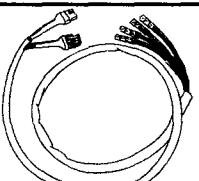
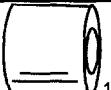
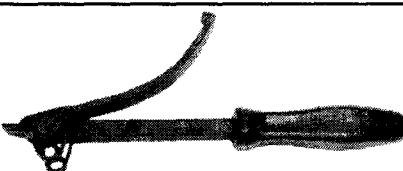
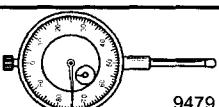
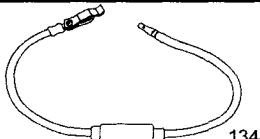
| Part No. | Description | 2.5/3.3 | 4/5 102 cc | 6-15 | 20/25 20 Jet | 30/40 2-Cyl. | 40-60 30/40 Jet | 75-125 65/80 Jet | 135-200 | 150-200 EFI | 200-250 EFI 3.0L Work |
|--------------|-------------------------------|---------|---------------|------|-----------------|-----------------|--------------------|---------------------|---------|----------------|-----------------------------|
| 84-822560A5 | Adapter Harness | | | | | | | | X | X | X |
| 84-822560T12 | 2 to 4 Pin Harness Adapter | | | | | | | | X | X | X |

Section 1 - Two Stroke Models

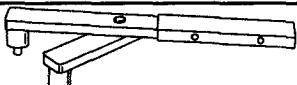
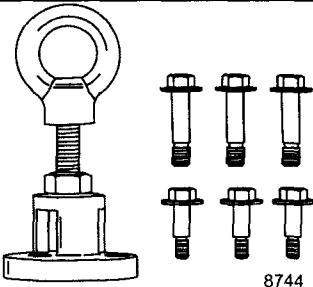
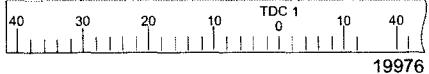
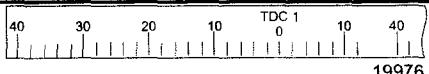
| Part No. | Description | 2.5/3.3 | 4/5 102 cc | 6-15 | 20/25 20 Jet | 30/40 2-Cyl. | 40-60 30/40 Jet | 75-125 65/80 Jet | 135-200 | 150-200 EFI | 200-250 EFI 3.0L Work |
|-------------------|---|---------|---------------|------|-----------------|-----------------|--------------------|---------------------|---------|----------------|-----------------------------|
| 84-825207A2 | TPS/CDM Test Harness | | | | | X | X | X | X | | |
| 91-24161 | Protector Cap | | | | X | X | X | X | X | X | X |
| 91-24937A1 | Flywheel Holder Strap | X | X | X | | | | | | | |
| 91-52024A1 | Remote Starter Switch | | | X | X | X | X | X | X | X | X |
| 91-52344 | Flywheel Holding Tool | | | X | X | X | X | X | X | X | X |
| 91-58222A1 | Dial Indicator | | X | X | X | X | X | X | X | X | X |
| 91-63998A1 | Spark Gap Tester | X | X | X | X | X | X | X | X | X | X |
| 91-802650-1 | Clamp-on Current Probe | | | X | X | X | X | X | X | X | X |
| 91-818812A1 | Ignition Timing Cable | | | | | X | | | | | |
| 91-83163M | Flywheel Holder | X | | | | | | | | | |
| 91-83164M | Flywheel Puller/Lifting Ring | X | X | X | X | | | | | | |
| 91-849154T1 | Flywheel Puller | | | | | X | X | X | X | X | X |
| 91-850439T1 | Spark Gap Tester | | | X | X | X | X | X | X | | |
| 91-853883-1 | Timing Decal | | | | | | X | X | X | X | X |
| 91-853883-3 | Timing Decal | | | | | | | X | X | X | X |
| 91-859199 | Throttle Position Sensor (TPS) Test Harness | | | | | | | | | X | |
| 91-881828 | Tamper-Proof Screw Torx Bit Set | | | | | | | | | X | X |
| 91-89045 1 | Direct Voltage Adapter | | X | X | X | X | X | X | X | | |
| 91-892647A01 | DMT 2004 Digital Multimeter | X | X | X | X | X | X | X | X | X | X |
| 91-99379 | Timing Light | | X | X | X | X | X | X | X | | |
| 91-99750A1 | DVA/Multimeter Kit | X | X | X | X | X | X | X | X | X | X |
| Order through SPX | Computer Diagnostic System (CDS) | | | | | | | | | X | X |

Electrical Tools

| | | |
|---|--|---|
| Adapter Harness | | 84-822560A5 |
|  4009 | | Data link harness between engine and Computer Diagnostic System (CDS) or Digital Diagnostic Terminal (DDT) on engines with a 2 pin diagnostic connection. |

| | |
|---|---|
| 2 to 4 Pin Harness Adapter | 84-822560T12 |
|  4679 | Adapts the 2 pin Digital Diagnostic Terminal harness to the 4 pin connector on the engine. |
| TPS/CDM Test Harness | 84-825207A 2 |
|  13429 | Test harness used for capacitor discharge module and throttle position sensor. Aids in testing primary ignition voltage and performing various resistance checks. |
| Protector Cap | 91-24161 |
|  13445 | Protects the crankshaft when removing the flywheel; use with flywheel puller (91-849154T 1) |
| Flywheel Holder Strap | 91-24937A 1 |
|  13466 | Holds the flywheel on manual start engines when removing the flywheel nut. |
| Remote Starter Switch | 91-52024A1 |
|  10882 | Provides a remote starter button to crank the engine when performing service procedures. |
| Flywheel Holding Tool | 91-52344 |
|  4738 | Holds and/or turns the flywheel while making engine repairs, also used to torque the flywheel or the engine coupler. |
| Dial Indicator | 91-58222A1 |
|  9479 | Used to obtain a variety of measurements including gear backlash, pinion gear location, and TDC. |
| Spark Gap Tester | 91-63998A 1 |
|  13488 | Provides a visual indication of spark/coil efficiency. |

Section 1 - Two Stroke Models

| | |
|---|---|
| Clamp-on Current Probe | 91-802650-1 |
|  4006 | Measures the current output of battery charging systems or current draw of electric motors. |
| Ignition Timing Cable | 91-818812A 1 |
|  13427 | Locks the electronic spark trigger ignition system in base timing mode to set the initial ignition timing; also used as a jumper lead for testing various circuits. |
| Flywheel Holder | 91-83163M |
|  8742 | Holds and/or turns the flywheel while making engine repairs, also used to torque the flywheel or the engine coupler. |
| Flywheel Puller/Lifting Ring | 91-83164M |
|  8744 | Removes flywheel from engine. Used for lifting powerhead/engine. |
| Flywheel Puller | 91-849154T 1 |
|  7617 | Removes the flywheel from the crankshaft. |
| Spark Gap Tester | 91-850439T 1 |
|  7513 | Provides a visual indication of spark/coil efficiency. |
| Timing Decal | 91-853883 1 |
|  19976 | Aids in troubleshooting ignition timing on three cylinder engines by determining the timing of individual cylinders. |
| Timing Decal | 91-853883 3 |
|  19976 | Aids in troubleshooting ignition timing on six cylinder engines by determining the timing of individual cylinders. |

Section 1 - Two Stroke Models

Table of Contents

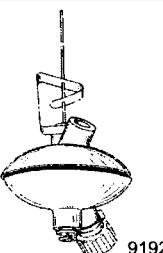
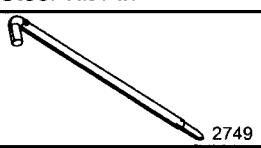
| | | | |
|---|---|--|----|
| Installation and Maintenance..... | 2 | Powerhead..... | 11 |
| Maintenance Tool Application Chart..... | 2 | Powerhead Tool Application Chart..... | 11 |
| Maintenance Tools..... | 2 | Powerhead Tools..... | 13 |
| Electrical..... | 3 | Mid-Section..... | 17 |
| Electrical Tool Application Chart..... | 3 | Mid-Section Tool Application Chart..... | 17 |
| Electrical Tools..... | 4 | Mid-Section Tools..... | 18 |
| Fuel System..... | 8 | Lower Unit..... | 20 |
| Fuel System Tool Application Chart..... | 8 | Gear Housing Tool Application Chart..... | 20 |
| Fuel System Tools..... | 9 | Gear Housing Tools..... | 23 |

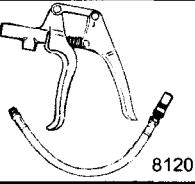
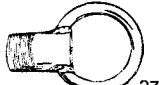
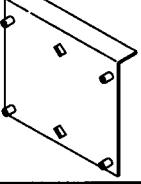
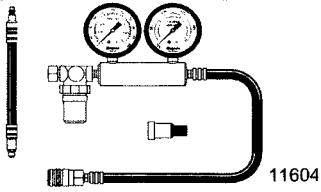
Installation and Maintenance

Maintenance Tool Application Chart

| Part No. | Description | 2.5/3.3 4/5 102 cc | 4/5 102 cc | 6-15 20/25 20 Jet | 30/40 2 Cyl. | 40-60 30/40 Jet | 75-125 65/80 Jet | 135-200 | 150-200 EFI | 200-250 EFI 3.0L Work |
|---------------------|-----------------------------|--------------------------|---------------|-------------------------|-----------------|--------------------|---------------------|---------|-------------|--------------------------|
| 44357Q2 | Flushing Device | | X | | X | X | X | X | X | X |
| 888462A1 | Data Cable Puller | | | | | | | | X | X |
| 17-49930A1 | Stainless Steel Tilt Pin | | | | | | X | X | X | X |
| 91-12612T2 | Flushing Device | | | X | | | | | | |
| 91-37299Q2 | Grease Gun | X | X | X | X | X | X | X | X | X |
| 91-66274 | Torque Wrench, lb. in. | X | X | X | X | X | X | X | X | X |
| 91-90455-1 | Lifting Eye | | | | | X | X | X | X | X |
| 91-98234A2 | Transom Drilling Fixture | | | | | X | X | X | X | X |
| Snap-On EEPV303B | Compression Tester | X | X | X | X | X | X | X | X | X |
| Snap-On EEPV309A | Cylinder Leakage Tester | X | X | X | X | X | X | X | X | X |

Maintenance Tools

| | |
|---|---|
| Flushing Device | 44357Q 2 |
|  9192 | Attaches to the water intakes; provides a fresh water connection when flushing the cooling system or operating the engine. |
| Data Cable Puller | 888462A1 |
|  4618 | Attaches to end of DTS data harness to aid in pulling harness through boat. Prevents damage to DTS data harness. |
| Stainless Steel Tilt Pin | 17-49930A 1 |
|  2749 | Limits the down trim angle of the power trim equipped engines, or aids in determining the trim out angle on non-power trim engines. |
| Flushing Device | 91-12612T 2 |
|  13497 | Attaches to the water intakes; provides a fresh water connection when flushing the cooling system or operating the engine. |

| | |
|---|--|
| Grease Gun | 91-37299Q 2 |
|  8120 | Aids in the lubrication of key areas on the engine. Allows easy access to grease fittings. |
| Torque Wrench, lb. in. | 91-66274 |
|  10829 | Dial type torque wrench that sets torque from 9 to 150 lb. in.; 3/8 in. drive. |
| Lifting Eye | 91-90455-1 |
|  2756 | Threads into the flywheel to remove the powerhead assembly from the driveshaft housing, or to lift entire engine for removal/installation. |
| Transom Drilling Fixture | 91-98234A2 |
|  5489 | Aids in engine installation by acting as a template for engine mounting holes. |
| Compression Tester with Adapter | Snap-On EEPV303B |
|  8511 | Checks cylinder compression. Use with M14 x 1.25 adapter. |
| Cylinder Leakage Tester | Snap-On EEPV309A |
|  11604 | Aids in checking cylinder leakdown. |

Electrical

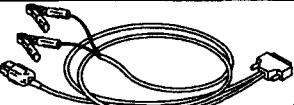
Electrical Tool Application Chart

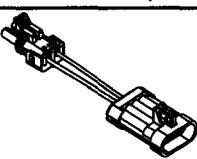
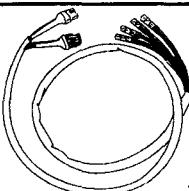
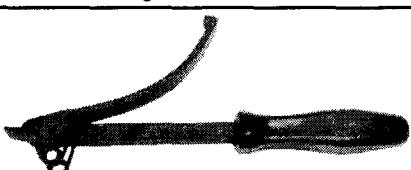
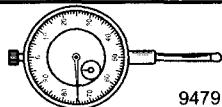
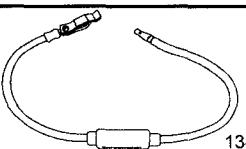
| Part No. | Description | 2.5/3.3 | 4/5 102 cc | 6-15 | 20/25 20 Jet | 30/40 2-Cyl. | 40-60 30/40 Jet | 75-125 65/80 Jet | 135-200 | 150-200 EFI | 200-250 EFI 3.0L Work |
|--------------|-------------------------------|---------|---------------|------|-----------------|-----------------|--------------------|---------------------|---------|----------------|-----------------------------|
| 84-822560A5 | Adapter Harness | | | | | | | | X | X | X |
| 84-822560T12 | 2 to 4 Pin Harness Adapter | | | | | | | | X | X | X |

Section 1 - Two Stroke Models

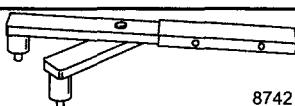
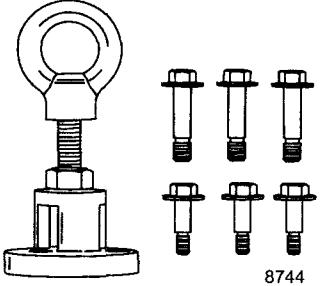
| Part No. | Description | 2.5/3.3 | 4/5 102 cc | 6-15 | 20/25 20 Jet | 30/40 2-Cyl. | 40-60 30/40 Jet | 75-125 65/80 Jet | 135-200 | 150-200 EFI | 200-250 EFI 3.0L Work |
|-------------------|---|---------|---------------|------|-----------------|-----------------|--------------------|---------------------|---------|----------------|-----------------------------|
| 84-825207A2 | TPS/CDM Test Harness | | | | | X | X | X | X | | |
| 91-24161 | Protector Cap | | | | X | X | X | X | X | X | X |
| 91-24937A1 | Flywheel Holder Strap | X | X | X | | | | | | | |
| 91-52024A1 | Remote Starter Switch | | | X | X | X | X | X | X | X | X |
| 91-52344 | Flywheel Holding Tool | | | X | X | X | X | X | X | X | X |
| 91-58222A1 | Dial Indicator | | X | X | X | X | X | X | X | X | X |
| 91-63998A1 | Spark Gap Tester | X | X | X | X | X | X | X | X | X | X |
| 91-802650-1 | Clamp-on Current Probe | | | X | X | X | X | X | X | X | X |
| 91-818812A1 | Ignition Timing Cable | | | | | X | | | | | |
| 91-83163M | Flywheel Holder | X | | | | | | | | | |
| 91-83164M | Flywheel Puller/Lifting Ring | X | X | X | X | | | | | | |
| 91-849154T1 | Flywheel Puller | | | | | X | X | X | X | X | X |
| 91-850439T1 | Spark Gap Tester | | | X | X | X | X | X | X | | |
| 91-853883-1 | Timing Decal | | | | | | X | X | X | X | X |
| 91-853883-3 | Timing Decal | | | | | | | X | X | X | X |
| 91-859199 | Throttle Position Sensor (TPS) Test Harness | | | | | | | | | X | |
| 91-881828 | Tamper-Proof Screw Torx Bit Set | | | | | | | | | X | X |
| 91-89045 1 | Direct Voltage Adapter | | X | X | X | X | X | X | X | | |
| 91-892647A01 | DMT 2004 Digital Multimeter | X | X | X | X | X | X | X | X | X | X |
| 91-99379 | Timing Light | | X | X | X | X | X | X | X | | |
| 91-99750A1 | DVA/Multimeter Kit | X | X | X | X | X | X | X | X | X | X |
| Order through SPX | Computer Diagnostic System (CDS) | | | | | | | | | X | X |

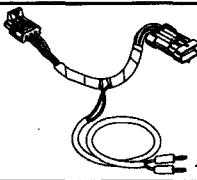
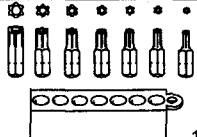
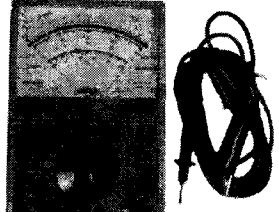
Electrical Tools

| | |
|--|---|
| Adapter Harness | 84-822560A5 |
|  4009 | Data link harness between engine and Computer Diagnostic System (CDS) or Digital Diagnostic Terminal (DDT) on engines with a 2 pin diagnostic connection. |

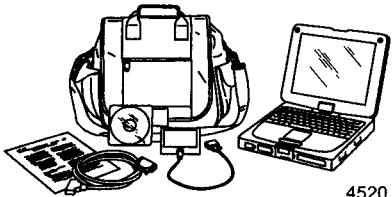
| | |
|---|---|
| 2 to 4 Pin Harness Adapter | 84-822560T12 |
|  4679 | Adapts the 2 pin Digital Diagnostic Terminal harness to the 4 pin connector on the engine. |
| TPS/CDM Test Harness | 84-825207A 2 |
|  13429 | Test harness used for capacitor discharge module and throttle position sensor. Aids in testing primary ignition voltage and performing various resistance checks. |
| Protector Cap | 91-24161 |
|  13445 | Protects the crankshaft when removing the flywheel; use with flywheel puller (91-849154T 1) |
| Flywheel Holder Strap | 91-24937A 1 |
|  13446 | Holds the flywheel on manual start engines when removing the flywheel nut. |
| Remote Starter Switch | 91-52024A1 |
|  10882 | Provides a remote starter button to crank the engine when performing service procedures. |
| Flywheel Holding Tool | 91-52344 |
|  4738 | Holds and/or turns the flywheel while making engine repairs, also used to torque the flywheel or the engine coupler. |
| Dial Indicator | 91-58222A1 |
|  9479 | Used to obtain a variety of measurements including gear backlash, pinion gear location, and TDC. |
| Spark Gap Tester | 91-63998A 1 |
|  13488 | Provides a visual indication of spark/coil efficiency. |

Section 1 - Two Stroke Models

| | |
|--|---|
| Clamp-on Current Probe | 91-802650-1 |
|  4006 | Measures the current output of battery charging systems or current draw of electric motors. |
| Ignition Timing Cable | 91-818812A 1 |
|  13427 | Locks the electronic spark trigger ignition system in base timing mode to set the initial ignition timing; also used as a jumper lead for testing various circuits. |
| Flywheel Holder | 91-83163M |
|  8742 | Holds and/or turns the flywheel while making engine repairs, also used to torque the flywheel or the engine coupler. |
| Flywheel Puller/Lifting Ring | 91-83164M |
|  8744 | Removes flywheel from engine. Used for lifting powerhead/engine. |
| Flywheel Puller | 91-849154T 1 |
|  7617 | Removes the flywheel from the crankshaft. |
| Spark Gap Tester | 91-850439T 1 |
|  7513 | Provides a visual indication of spark/coil efficiency. |
| Timing Decal | 91-853883 1 |
|  19976 | Aids in troubleshooting ignition timing on three cylinder engines by determining the timing of individual cylinders. |
| Timing Decal | 91-853883 3 |
|  19976 | Aids in troubleshooting ignition timing on six cylinder engines by determining the timing of individual cylinders. |

| | |
|--|--|
| Throttle Position Sensor (TPS) Test Harness | 91-859199 |
|  13470 | Links between the throttle position sensor and the main engine harness to check the throttle position sensor signal. |
| Tamper-Proof Screw Torx Bit Set | 91-881828 |
|  11782 | Aids in the removal of tamper-proof fasteners. |
| Direct Voltage Adapter | 91-89045 1 |
|  11613 | Use with a multimeter to check peak voltage on various engine components. |
| DMT 2004 Digital Multimeter | 91-892647A01 |
|  4516 | Measures RPM on spark ignition (SI) engines, ohms, amperes, AC and DC voltages; records maximums and minimums simultaneously, and accurately reads in high RFI environments. |
| Timing Light | 91-99379 |
|  11561 | Allows a technician to check ignition timing. |
| DVA/Multimeter Kit | 91-99750A 1 |
|  3460 | Tests the electrical and ignition systems; consists of a VOA meter with built-in direct voltage adapter. |

Section 1 - Two Stroke Models

| Computer Diagnostic System (CDS) | | Order through SPX | | | | | | | | | |
|---|--|---|--|--|--|--|--|--|--|--|--|
|  4520 | | Monitors all electrical systems for proper function, diagnostics, and calibration purposes. For additional information, pricing, or to order the Computer Diagnostic System contact: SPX Corporation 28635 Mound Rd. Warren, MI 48092 or call: USA - 1-800-345-2233 Canada - 800-345-2233 Europe - 49 6182 959 149 Australia - (03) 9544-6222 | | | | | | | | | |

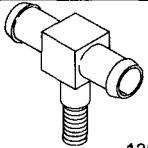
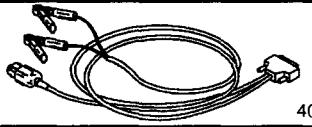
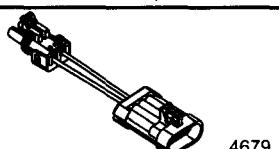
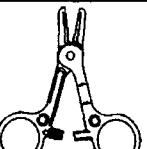
Fuel System

Fuel System Tool Application Chart

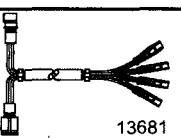
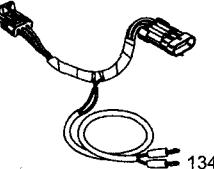
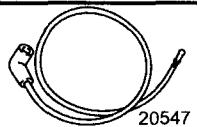
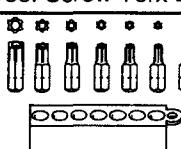
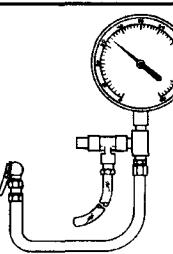
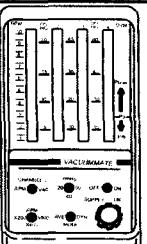
| Part No. | Description | 2.5/3.3 | 4/5 102 cc | 6/15 | 20/25 20 Jet | 30/40 2-Cyl. | 40-60 30/40 Jet | 75-125 65/80 Jet | 135-200 | 150-200 EFI | 200-250 3.0L Work EFI |
|--------------|---|---------|---------------|------|-----------------|-----------------|-----------------------|---------------------|---------|----------------|-----------------------------|
| 22-849606 | Schrader Valve Tee | | | | | | | | | X | X |
| 84-822560A5 | Adapter Harness | | | | | | | | X | X | X |
| 84-822560T12 | 2 to 4 Pin Harness Adapter | | | | | | | | X | X | X |
| 91-24937A1 | Flywheel Holder Strap | X | X | X | | | | | | | |
| 91-52024A1 | Remote Starter Switch | | | X | X | X | X | X | X | X | X |
| 91-804063 | Tubing Clamp | | | | | | | | X | X | X |
| 91-833169A1 | Injector Test Harness | | | | | | | | | X | |
| 91-850439T1 | Spark Gap Tester | | | X | X | X | X | X | X | | |
| 91-859199 | Throttle Position Sensor (TPS) Test Harness | | | | | | | | | | X |
| 91-877870A1 | Spark Plug Extension Kit | X | X | X | X | X | X | X | X | X | X |
| 91-881828 | Tamper Proof Screw Torx Bit Set | | | | | | | | | X | X |
| 91-881833A03 | Fuel Pressure Gauge Kit | | | | | | | X | X | X | X |
| 91-889236 | New Style Vacuumate Carburetor Tuner | X | X | X | X | X | X | X | X | | |
| 91-892647A01 | DMT 2004 Digital Multimeter | X | X | X | X | X | X | X | X | X | X |
| 91-99379 | Timing Light | X | X | X | X | X | X | X | X | X | X |

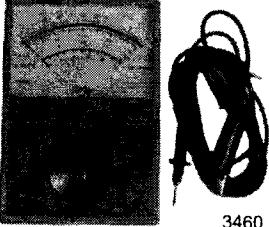
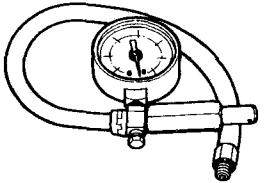
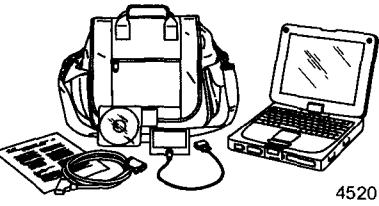
| Part No. | Description | 2.5/3.3 | 4/5 102 cc | 6/15 | 20/25 20 Jet | 30/40 2-Cyl. | 40-60 30/40 Jet | 75-125 65/80 Jet | 135-200 | 150-200 EFI | 200-250 3.0L Work EFI |
|----------------------|--|---------|---------------|------|-----------------|-----------------|-----------------------|---------------------|---------|----------------|-----------------------------|
| 91-99750A1 | DVA/ Multimeter Kit | X | X | X | X | X | X | X | X | X | X |
| FT8950 | Leakage Tester Kit | | | | | | | | | X | X |
| Order through SPX | Computer Diagnostic System (CDS) | | | | | | | | X | X | X |

Fuel System Tools

| | |
|---|---|
| Schrader Valve Tee | 22-849606 |
|  13678 | Aids in checking fuel pressure when using a fuel pressure gauge with a screw on schrader valve connector. |
| Adapter Harness | 84-822560A5 |
|  4009 | Data link harness between engine and Computer Diagnostic System (CDS) or Digital Diagnostic Terminal (DDT) on engines with a 2 pin diagnostic connection. |
| 2 to 4 Pin Harness Adapter | 84-822560T12 |
|  4679 | Adapts the 2 pin Digital Diagnostic Terminal harness to the 4 pin connector on the engine. |
| Flywheel Holder Strap | 91-24937A 1 |
|  13446 | Holds the flywheel on manual start engines when removing the flywheel nut. |
| Remote Starter Switch | 91-52024A1 |
|  10882 | Provides a remote starter button to crank the engine when performing service procedures. |
| Tubing Clamp | 91-804063 |
|  13688 | Compresses a fuel or vacuum hose for troubleshooting the fuel system or synchronizing a multiple carburetor engine. |

Section 1 - Two Stroke Models

| | |
|--|---|
| Injector Test Harness | 91-833169A 1 |
|  13681 | Connects between the injector harness and the engine harness to verify voltage supplied to injectors, and perform injector resistance tests. |
| Spark Gap Tester | 91-850439T 1 |
|  7513 | Provides a visual indication of spark/coil efficiency. |
| Throttle Position Sensor (TPS) Test Harness | 91-859199 |
|  13470 | Links between the throttle position sensor and the main engine harness to check the throttle position sensor signal. |
| Spark Plug Extension Kit | 91-877870A 1 |
|  20547 | Connects between the spark plug leads and Spark Gap Tester (91-850439T) to provide additional length to the spark plug leads when testing ignition spark. |
| Tamper-Proof Screw Torx Bit Set | 91-881828 |
|  11782 | Aids in the removal of tamper-proof fasteners. |
| Fuel Pressure Gauge Kit | 91-881833A03 |
|  rms32 | Tests the fuel pump pressure; can be used to relieve fuel pressure. |
| New Style Vacuumate Carburetor Tuner | 91-889236 |
|  11630 | Allows the technician to balance the carburetors. |

| | | |
|--|---|-------------------|
| DMT 2004 Digital Multimeter | | 91-892647A01 |
|  4516 | Measures RPM on spark ignition (SI) engines, ohms, amperes, AC and DC voltages; records maximums and minimums simultaneously, and accurately reads in high RFI environments. | |
| Timing Light | | 91-99379 |
|  11561 | Allows a technician to check ignition timing. | |
| DVA/Multimeter Kit | | 91-99750A 1 |
|  3460 | Tests the electrical and ignition systems; consists of a VOA meter with built-in direct voltage adapter. | |
| Leakage Tester Kit | | FT8950 |
|  ob01632 | Checks gear housing for leakage prior to filling with gear lubricant. Also used to pressurize the oil injection system. | |
| Computer Diagnostic System (CDS) | | Order through SPX |
|  4520 | Monitors all electrical systems for proper function, diagnostics, and calibration purposes. For additional information, pricing, or to order the Computer Diagnostic System contact: SPX Corporation 28635 Mound Rd. Warren, MI 48092 or call: USA - 1-800-345-2233 Canada - 800-345-2233 Europe - 49 6182 959 149 Australia - (03) 9544-6222 | |

Powerhead

Powerhead Tool Application Chart

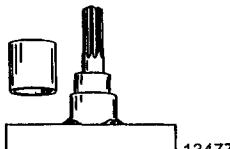
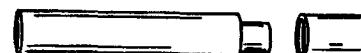
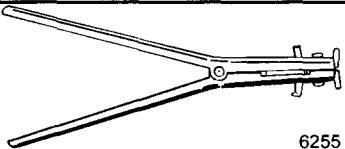
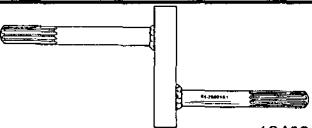
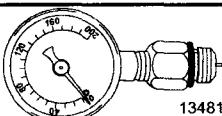
| Part No. | Description | 2.5/3.3 | 4/5 102 cc | 6-15 | 20/25 20 Jet | 30/40 2-Cyl. | 40-60 30/40 Jet | 75-125 65/80 Jet | 135-200 | 150-200 EFI | 200-250 3.0L Work EFI |
|------------|-----------------|---------|---------------|------|-----------------|-----------------|--------------------|---------------------|---------|-------------|-----------------------------|
| 91-13662T1 | Powerhead Stand | | | X | | | | | | | |
| 91-13663T1 | Piston Pin Tool | | | X | | | | | | | |

Section 1 - Two Stroke Models

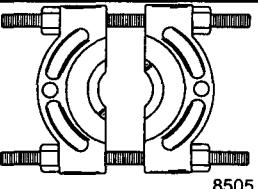
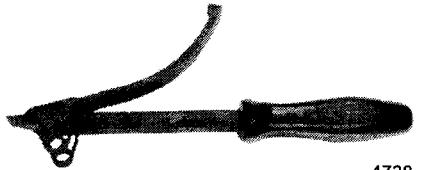
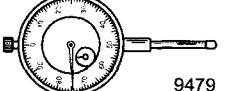
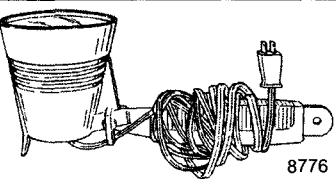
| Part No. | Description | 2.5/3.3 | 4/5 102 cc | 6-15 | 20/25 20 Jet | 30/40 2-Cyl. | 40-60 30/40 Jet | 75-125 65/80 Jet | 135-200 | 150-200 EFI | 200-250 3.0L Work EFI |
|--------------|------------------------------|---------|---------------|------|-----------------|-----------------|--------------------|---------------------|---------|-------------|-----------------------------|
| 91-24161 | Protector Cap | | X | | | | | X | X | X | X |
| 91-24697 | Piston Ring Expander | X | X | X | X | X | X | X | X | X | X |
| 91-24937A1 | Flywheel Holder Strap | X | X | X | | | | | | | |
| 91-25821T1 | Powerhead Stand | | | | X | | X | | | | |
| 91-29287 | Compression Tester | X | X | X | X | X | X | X | X | X | X |
| 91-30591T1 | Powerhead Stand | | | | | | | | | X | X |
| 91-34569A1 | Slide Hammer | X | X | X | X | X | X | X | X | X | X |
| 91-37241 | Universal Puller Plate | X | X | X | X | X | X | X | X | X | X |
| 91-52344 | Flywheel Holding Tool | | | X | X | X | X | X | X | X | X |
| 91-52952T1 | Lockring Removal Tool | | | | | X | X | X | X | X | X |
| 91-58222A1 | Dial Indicator | X | X | X | X | X | X | X | X | X | X |
| 91-63209 | Torch Lamp | X | X | X | X | X | X | X | X | X | X |
| 91-66274 | Torque Wrench lb. in. | X | X | X | X | X | X | X | X | X | X |
| 91-74607A3 | Piston Pin Tool | | | | | X | X | X | X | X | |
| 91-76160A2 | Piston Pin Tool | | | | X | | | | | | |
| 91-77109A3 | Lockring Installation Tool | | | | | X | X | X | X | X | |
| 91-79250A2 | Water Pressure Gauge | | | X | X | X | X | X | X | X | X |
| 91-812549T | Powerhead Stand | | | | | | | X | X | X | X |
| 91-818773T | Piston Ring Compressor | | | | | | | | | X | |
| 91-823237T | Piston Ring Compressor | | | | | | | | | | X |
| 91-827001A1 | Powerhead Stand | | | | | X | X | | | | |
| 91-83163M | Flywheel Holder | X | | X | X | | | | | | |
| 91-83164M | Flywheel Puller/Lifting Ring | X | | X | X | X | | | | | |
| 91-83165T | Bearing Puller Assembly | | X | | | | | | | | |
| 91-83166M | Bearing Mandrel Kit | | X | | | | | | | | |
| 91-849154T1 | Flywheel Puller | | | | | X | X | X | X | X | X |
| 91-892647A01 | DMT 2004 Digital Multimeter | X | X | X | X | X | X | X | X | X | X |
| 91-90455-1 | Lifting Eye | | | | | X | X | X | X | X | X |
| 91-92973A1 | Piston Pin Tool | | | | | | | | | | X |
| 91-93004A2 | Lockring Installation Tool | | | | | | | | | | X |

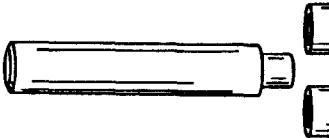
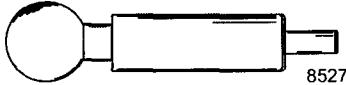
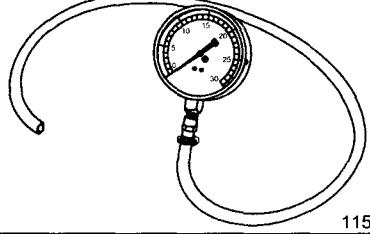
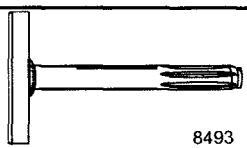
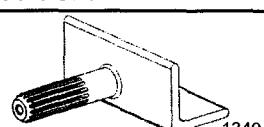
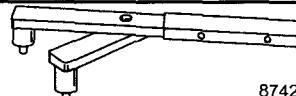
| Part No. | Description | 2.5/3.3 | 4/5 102 cc | 6-15 | 20/25 20 Jet | 30/40 2-Cyl. | 40-60 30/40 Jet | 75-125 65/80 Jet | 135-200 | 150-200 EFI | 200-250 3.0L Work EFI |
|--------------|------------------|---------|---------------|------|-----------------|-----------------|--------------------|---------------------|---------|-------------|-----------------------------|
| Snap-On SRP4 | Lock-Ring Pliers | | | | | | | X | X | X | X |

Powerhead Tools

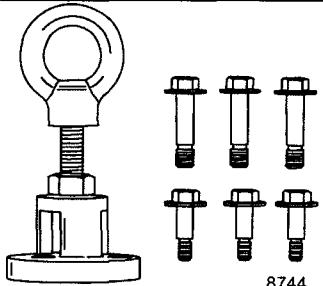
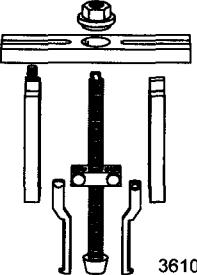
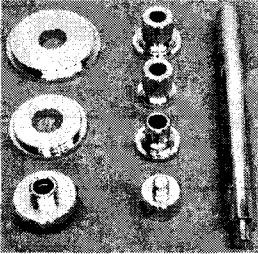
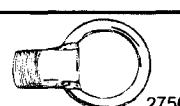
| | |
|---|---|
| Powerhead Stand | 91-13662T 1 |
|  13477 | Used to secure and rotate the powerhead during disassembly and assembly. |
| Piston Pin Tool | 91-13663T 1 |
|  11564 | Aids in the removal and installation of the piston pins. |
| Protector Cap | 91-24161 |
|  13445 | Protects the crankshaft when removing the flywheel; use with flywheel puller (91-849154T 1) |
| Piston Ring Expander | 91-24697 |
|  6255 | Expands piston rings for removal and installation. |
| Flywheel Holder Strap | 91-24937A 1 |
|  13446 | Holds the flywheel on manual start engines when removing the flywheel nut. |
| Powerhead Stand | 91-25821T 1 |
|  13480 | Used to secure and rotate the powerhead during disassembly and assembly. |
| Compression Tester | 91-29287 |
|  13481 | Measures engine cylinder compression. |

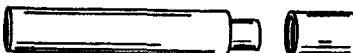
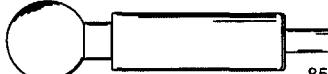
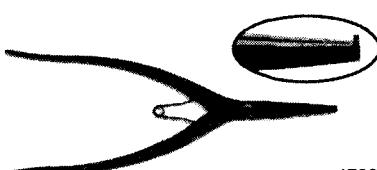
Section 1 - Two Stroke Models

| | |
|---|--|
| Powerhead Stand | 91-30591T 1 |
|  8493 | Used to secure and rotate the powerhead during disassembly and assembly. |
| Slide Hammer | 91-34569A 1 |
|  6761 | Aids in the removal of various engine components. Use with puller jaws. |
| Universal Puller Plate | 91-37241 |
|  8505 | Removes bearings from gears and the driveshaft. |
| Flywheel Holding Tool | 91-52344 |
|  4738 | Holds and/or turns the flywheel while making engine repairs, also used to torque the flywheel or the engine coupler. |
| Lockring Removal Tool | 91-52952T 1 |
|  8500 | Removes the lockrings securing the piston wrist pin. |
| Dial Indicator | 91-58222A1 |
|  9479 | Used to obtain a variety of measurements including gear backlash, pinion gear location, and TDC. |
| Torch Lamp | 91-63209 |
|  8776 | Heats surfaces to aid in the removal and installation of interference fit engine components. |
| Torque Wrench, lb. in. | 91-66274 |
|  10829 | Dial type torque wrench that sets torque from 9 to 150 lb. in.; 3/8 in. drive. |
| Piston Pin Tool | 91-74607A3 |
|  20637 | Aids in the removal and installation of the piston wrist pin. |

| | |
|---|--|
| Piston Pin Tool | 91-76160A 2 |
|  13489 | Aids in the removal and installation of the piston pins. |
| Lockring Installation Tool | 91-77109A3 |
|  8527 | Installs the lockrings to secure the piston wrist pin in piston. |
| Water Pressure Gauge | 91-79250A 2 |
|  11598 | Aids in checking the engine water pressure. |
| Powerhead Stand | 91-812549T |
|  8493 | Used to secure and rotate the powerhead during disassembly and assembly. |
| Piston Ring Compressor | 91-818773T |
|  4739 | Compresses piston rings into piston ring grooves to ease piston rod assembly into cylinder block. |
| Piston Ring Compressor | 91-823237T |
|  4739 | Compresses piston rings into piston ring grooves to ease piston rod assembly into cylinder block. |
| Powerhead Stand | 91-827001A 1 |
|  13494 | Used to secure and rotate the powerhead during disassembly and assembly. |
| Flywheel Holder | 91-83163M |
|  8742 | Holds and/or turns the flywheel while making engine repairs, also used to torque the flywheel or the engine coupler. |

Section 1 - Two Stroke Models

| | |
|---|--|
| Flywheel Puller/Lifting Ring | 91-83164M |
|  | Removes flywheel from engine. Used for lifting powerhead/engine. |
| Bearing Puller Assembly | 91-83165T |
|  | Removes bearings, races and bearing carriers |
| Bearing Mandrel Kit | 91-83166M |
|  | Aids in the removal and installation of bearings and bearing races. |
| Flywheel Puller | 91-849154T 1 |
|  | Removes the flywheel from the crankshaft. |
| DMT 2004 Digital Multimeter | 91-892647A01 |
|  | Measures RPM on spark ignition (SI) engines, ohms, amperes, AC and DC voltages; records maximums and minimums simultaneously, and accurately reads in high RFI environments. |
| Lifting Eye | 91-90455--1 |
|  | Threads into the flywheel to remove the powerhead assembly from the driveshaft housing, or to lift entire engine for removal/installation. |

| | | |
|---|--|---------------|
| Piston Pin Tool | | 91-92973A 1 |
|  11564 | Aids in the removal and installation of the piston pins. | |
| Lockring Installation Tool | | 91-93004A 2 |
|  8527 | Installs the lockrings to secure the piston wrist pin in piston. | |
| Lock-Ring Pliers | | Snap-On SRP-4 |
|  4799 | Aids in the removal of lock rings. | |

Mid-Section

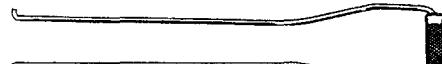
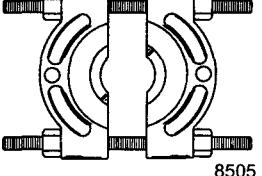
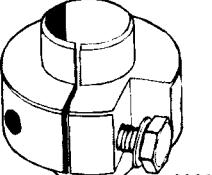
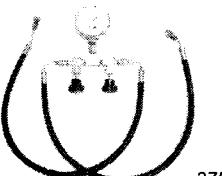
Mid-Section Tool Application Chart

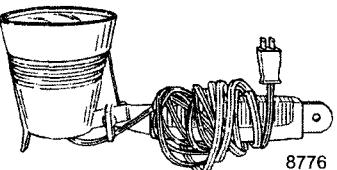
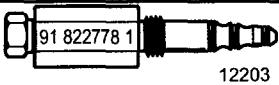
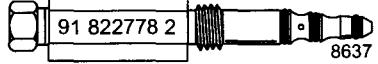
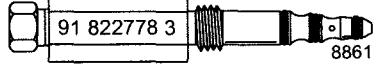
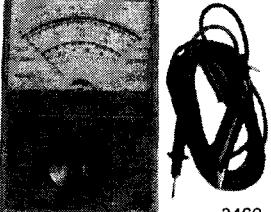
| Part No. | Description | 2.5/3.3 | 6-15 | 30/40 2-Cyl. | 40-60 30/40 Jet | 75-125 65/80 Jet | 135-200 | 150-200 EFI | 200-250 EFI 3.0L Work |
|-----------------|--------------------------------------|---------|------|--------------|--------------------|---------------------|---------|-------------|--------------------------|
| 91-11230-1 | Alignment Tool | | | | | | X | X | X |
| 91-27780 | Puller | X | | | | | | | |
| 91-34569A1 | Slide Hammer | X | | | | | | | |
| 91-37241 | Universal Puller Plate | X | | | | | | | |
| 91-44486A1 | Trim Rod Removal Tool | | | | | | X | X | X |
| 91-44487T1 | Trim Rod Guide Removal Tool | | | | | | X | X | X |
| 91-52915A6 | Power Trim Test Gauge Kit | | | X | X | X | X | X | X |
| 91-63209 | Torch Lamp | X | X | X | X | X | X | X | X |
| 91-74951 | Spanner Wrench | | | X | X | X | X | X | X |
| 91-822778A1 | Adapter Fitting | | | X | X | X | | | |
| 91-822778A2 | Adapter Fitting | | | | | | X | X | X |
| 91-822778A3 | Adapter Fitting | | | X | X | X | X | X | X |
| 91-875215 | Driveshaft Bushing Installation Tool | | | | | X | | | |
| 91-892647A01 | DMT 2004 Digital Multimeter | | X | X | X | X | X | X | X |
| 91-99750A1 | DVA/Multimeter Kit | | X | X | X | X | X | X | X |
| Snap-On CG40-4 | Expanding Rod | X | | | | | | | |
| Snap-On CG41-11 | Expanding Rod | | | X | X | X | | | |
| Snap-On CG41-14 | Collet | | | X | X | X | | | |
| Snap-On SRP2 | Lock-Ring Pliers | X | X | X | X | X | X | X | X |

Section 1 - Two Stroke Models

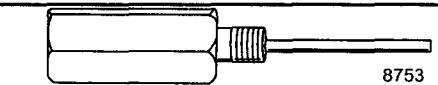
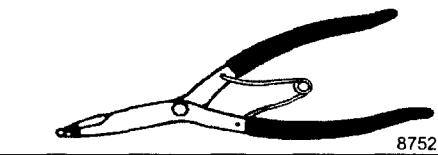
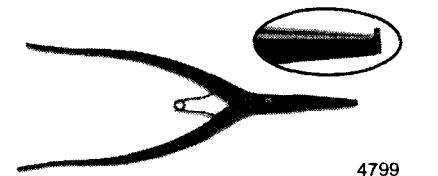
| Part No. | Description | 2.5/3.3 | 6-15 | 30/40 2-Cyl. | 40-60 30/40 Jet | 75-125 65/80 Jet | 135-200 | 150-200 EFI | 200-250 EFI 3.0L Work |
|---------------|------------------|---------|------|--------------|--------------------|---------------------|---------|-------------|--------------------------|
| Snap-On SRP-4 | Lock-Ring Pliers | | | | X | X | | | X |

Mid-Section Tools

| | |
|--|---|
| Alignment Tool | 91-11230--1 |
|  9078 | Aligns the tilt ram with housing to aid installation of the pivot pin. |
| Puller | 91-27780 |
|  8760 | Removes gears, bearings and races. |
| Slide Hammer | 91-34569A 1 |
|  6761 | Aids in the removal of various engine components. Use with puller jaws. |
| Universal Puller Plate | 91-37241 |
|  8505 | Removes bearings from gears and the driveshaft. |
| Trim Rod Removal Tool | 91-44486A 1 |
|  9089 | Aids in the removal of the trim rod from the trim cylinders. |
| Trim Rod Guide Removal Tool | 91-44487T 1 |
|  9086 | Aids in the removal of the trim rod from the trim cylinders. |
| Power Trim Test Gauge Kit | 91-52915A6 |
|  3753 | Tests circuit pressures for various trim pumps. |

| | |
|---|--|
| Torch Lamp | 91-63209 |
|  8776 | Heats surfaces to aid in the removal and installation of interference fit engine components. |
| Spanner Wrench | 91-74951 |
|  8775 | Removes and installs trim cylinder end caps. |
| Adapter Fitting | 91-822778A 1 |
|  12203 | Measures the internal pressure in the up mode for a single cylinder trim system. |
| Adapter Fitting | 91-822778A 2 |
|  8637 | Install in place of the manual release valve to measure the internal pressure of the power trim pump in the up mode. |
| Adapter Fitting | 91-822778A 3 |
|  8861 | Install in place of the manual release valve to measure the internal pressure of the power trim pump in the down mode. |
| Driveshaft Bushing Installation Tool | 91-875215 |
|  12202 | Aids in the installation of driveshaft bushings. |
| DMT 2004 Digital Multimeter | 91-892647A01 |
|  4516 | Measures RPM on spark ignition (SI) engines, ohms, amperes, AC and DC voltages; records maximums and minimums simultaneously, and accurately reads in high RFI environments. |
| DVA/Multimeter Kit | 91-99750A 1 |
|  3460 | Tests the electrical and ignition systems; consists of a VOA meter with built-in direct voltage adapter. |

Section 1 - Two Stroke Models

| | |
|--|---|
| Expanding Rod | Snap-On CG40-4 |
|  12538 | Aids in the removal of gears and bearings; use with collet. |
| Expanding Rod | Snap-On CG41-11 |
|  8753 | Aids in the removal of the spool from the power trim pump. |
| Collet | Snap-On CG41-14 |
|  8754 | Aids in the removal of the spool from the power trim pump. |
| Lock-Ring Pliers | Snap-On SRP2 |
|  8752 | Removes and installs external snap rings and piston rings. |
| Lock-Ring Pliers | Snap-On SRP-4 |
|  4799 | Aids in the removal of lock rings. |

Lower Unit

Gear Housing Tool Application Chart

| Part No. | Description | 2.5/3.3 | 4/5 102 cc | 6-15 | 20/25 20 Jet | 30/40 2 Cyl. | 40-60 30/40 Jet | 75-125 65/80 Jet | 135-200 | 150-200 EFI | 200-250 EFI 3.0L Work |
|-------------|-----------------------------------|---------|---------------|------|-----------------|-----------------|--------------------|---------------------|---------|-------------|--------------------------|
| 12-34961 | Washer | | | | X | X | X | | | | X |
| 12-37429 | Load Washer | X | | | | | | | | | |
| 12-54048 | Belleville Washer | | | | | | | | | | X |
| 44-93003 | Propeller Shaft Tool | | | | | | | | X | X | X |
| 91-12349A05 | Pinion Gear Locating Tool | | | | | | X | X | X | X | X |
| 91-13658T | Mandrel | | | X | | | | | | | |
| 91-13945 | Bearing Installation Driver | | | | | | X | X | | | |
| 91-13949 | Oil Seal Driver | | | | | | X | X | | | |
| 91-14308T02 | Bearing Race Driver | | | | | | X | X | | | |

Section 1 - Two Stroke Models

| Part No. | Description | 2.5/3.3 | 4/5 102 cc | 6-15 | 20/25 20 Jet | 30/40 2 Cyl. | 40-60 30/40 Jet | 75-125 65/80 Jet | 135-200 | 150-200 EFI | 200-250 EFI 3.0L Work |
|-------------|---------------------------------------|---------|---------------|------|-----------------|-----------------|--------------------|---------------------|---------|-------------|--------------------------|
| 91-14309T02 | Bearing Installation Puller | | | | | | X | X | | | |
| 91-14310T1 | Wear Sleeve Driver | | | | | | X | X | | | |
| 91-14311A04 | Bearing Preload Tool | | | | | | X | X | X | X | X |
| 91-15755T | Needle Bearing Driver | | | | | | X | X | X | X | X |
| 91-18605A2 | Bearing Cup/Adapter Installation Tool | | | | | | | | X | X | X |
| 91-19660-1 | Backlash Indicator | | | | | | X | X | | | |
| 91-27780 | Puller | X | X | | X | X | X | | | | |
| 91-31106T | Bearing Cup Driver | | | | | | X | X | X | X | X |
| 91-31107T | Shift Shaft Bushing Tool | | | | | | | | X | X | |
| 91-31108T | Oil Seal Driver | | | | | | X | X | X | X | X |
| 91-31229A7 | Bearing Removal and Installation Kit | X | | | X | X | X | | X | X | X |
| 91-33491 | Needle Bearing Driver | | | | | | | | | | X |
| 91-34569A1 | Slide Hammer | X | | X | X | X | X | X | X | X | X |
| 91-36569T | Driver Head | | | | | | X | X | | | X |
| 91-36571T | Pilot Washer | | | | X | X | X | | X | X | X |
| 91-37241 | Universal Puller Plate | X | | X | X | X | X | X | X | X | X |
| 91-37312T | Driveshaft Bearing Driver Head | X | | | | X | X | | | | |
| 91-37323 | Driver Rod | X | | | | X | X | X | X | X | X |
| 91-37350T | Pilot Mandrel | | | | | | X | X | | | |
| 91-38628T | Puller/Driver Head | X | | | | | | | X | X | X |
| 91-43506T | Driveshaft Bearing Retainer Wrench | | | | | | X | | X | X | X |
| 91-46086A1 | Puller Jaws Assembly | | | | | | X | X | X | X | X |
| 91-53459 | Backlash Indicator Rod | | | | | | | | | | X |
| 91-55919 | Driver Head | | | | X | X | | X | X | | |
| 91-56775T | Driveshaft Holding Tool | | | | | X | X | | | | X |

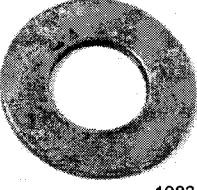
Section 1 - Two Stroke Models

| Part No. | Description | 2.5/3.3 | 4/5 102 cc | 6-15 | 20/25 20 Jet | 30/40 2 Cyl. | 40-60 30/40 Jet | 75-125 65/80 Jet | 135-200 | 150-200 EFI | 200-250 EFI 3.0L Work |
|--------------|--|---------|---------------|------|-----------------|-----------------|--------------------|---------------------|---------|-------------|--------------------------|
| 91-58222A1 | Dial Indicator | | | | | | X | X | X | X | X |
| 91-61067A04 | Pinion Nut Wrench | | | | | | | | | | X |
| 91-61069T | Bearing Carrier Retainer Nut Wrench | | | | | | | | X | X | X |
| 91-61077T | Propeller Shaft/ Driveshaft Adapter | | | | | | | | | | X |
| 91-66274 | Torque Wrench, lb.in. | | | | | | | | | | X |
| 91-74776T | Pinion Height Tool | | | | | | | | X | X | |
| 91-78473 | Backlash Indicator Rod | | | | | X | X | X | X | X | |
| 91-804776A1 | Driveshaft Holding Tool | | | | | | X | | | | |
| 91-815850 | Forward Gear Assembly Tube | | | | | | | | X | X | X |
| 91-816242 | Puller Jaws | | | | | | | | | | X |
| 91-816243 | Guide Plate | | | | | | | | | | X |
| 91-816244 | Reverse Gear Needle Bearing Driver | | | | | | | | | | X |
| 91-816245 | Needle Bearing Removal Tool | | | | | | | | | | X |
| 91-816292 | Needle Bearing Driver | | | | | | | | | | X |
| 91-817005 | Forward Gear Bearing Installer | | | | | X | | | | | |
| 91-817006 | Water Pump Base Seal Installer | | | | | | X | | | | |
| 91-817007T | Bearing Carrier Seal Installer | | | | X | X | | | | | |
| 91-817008A2 | Pinion Gear Location Tool | | | | | | X | | | | |
| 91-817009T | Forward Gear Bearing Race Driver Cup | | | | | | X | | | | |
| 91-817011T | Needle Bearing Installer | | | | X | X | | | | | |
| 91-817057A02 | Bearing Preload Tool Update Kit | | | | | | X | | | | |
| 91-817058A1 | Lower Driveshaft Bearing Driver Assembly | | | | | | X | | | | |

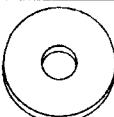
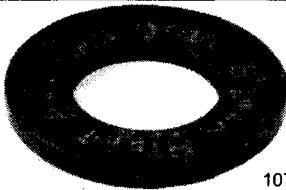
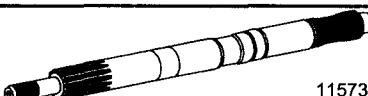
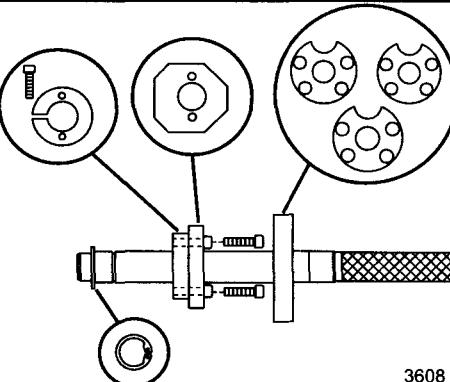
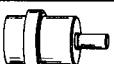
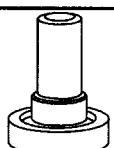
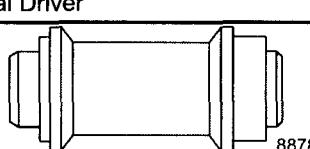
Section 1 - Two Stroke Models

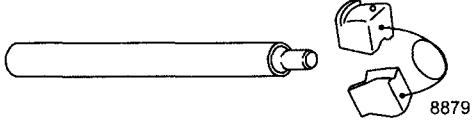
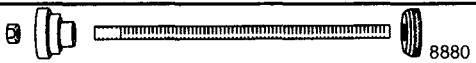
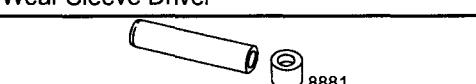
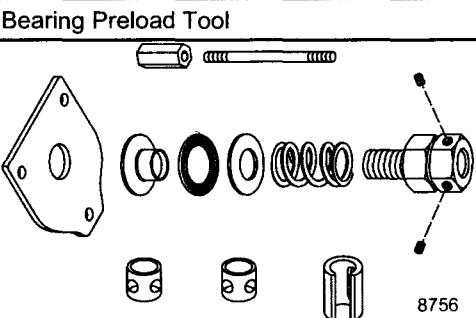
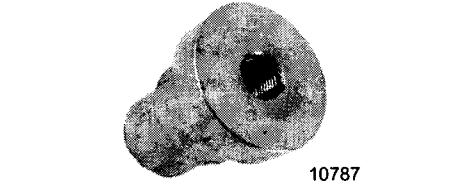
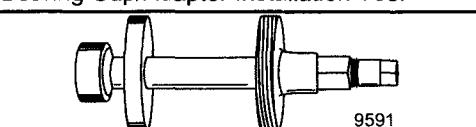
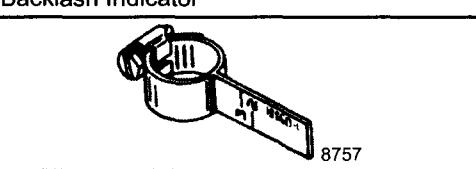
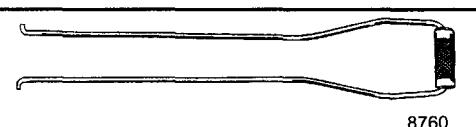
| Part No. | Description | 2.5/3.3 | 4/5 102 cc | 6-15 | 20/25 20 Jet | 30/40 2 Cyl. | 40-60 30/40 Jet | 75-125 65/80 Jet | 135-200 | 150-200 EFI | 200-250 EFI 3.0L Work |
|-----------------|-------------------------------------|---------|---------------|------|-----------------|-----------------|--------------------|---------------------|---------|-------------|--------------------------|
| 91-817070 | Driveshaft Holding Tool | | | | | | X | X | | | |
| 91-817569T | Carrier Seal Driver | | | | | | | | | | X |
| 91-821571A1 | Water Pump Alignment Pins | | | | | | | | | | X |
| 91-824785T1 | Seal/Bushing Installer | | | X | | | | | | | |
| 91-825200A1 | Spring Hook | | | | X | X | | | | | |
| 91-826872 | Driver | | | | X | X | | | | | |
| 91-83155 | Dial Indicator Adapter | | | | | | X | X | | | X |
| 91-83165T | Bearing Puller Assembly | | X | X | | | X | X | | | |
| 91-840388 | Bearing Carrier Installation Tool | | | | | | | | | | X |
| 91-840393 | Bearing Carrier Retainer Nut Wrench | | | | | | | | | | X |
| 91-856875A1 | Bearing Driver | | | | | | X | | | | |
| 91-86642 | Cross Pin Tool | | | | | | | X | X | | |
| 91-86943T | Guide Plate | | | | | | | X | X | X | |
| 91-87120T | Bearing Cup Driver | | | | | | | | | | X |
| 91-877321A1 | Bearing Driver | | | | | | X | | | | X |
| 91-89897 | Dial Indicator Holding Tool | | | | | | | X | X | X | |
| 91-90094 | Driveshaft Holding Tool | | | | | | | X | X | | |
| 91-92788T | Pinion Bearing Driver | | | | | | | X | X | X | |
| FT8950 | Leakage Tester Kit | | | X | X | X | X | | | | X |
| Snap On CG40-4 | Expanding Rod | X | | X | | | | | | | |
| Snap On CG41-11 | Expanding Rod | X | | | | | | | | | |

Gear Housing Tools

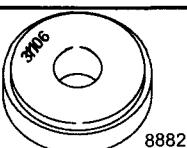
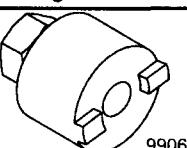
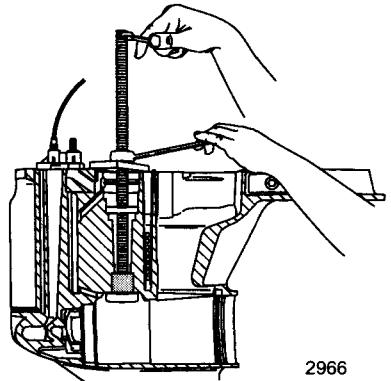
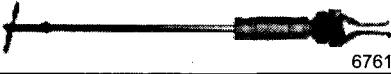
| | |
|---|--|
| Washer | 12-34961 |
|  | Use on the threaded puller rod between the nut and plate when removing bearings. |

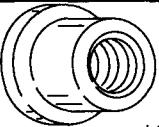
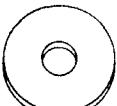
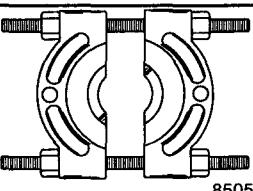
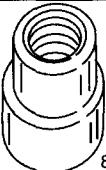
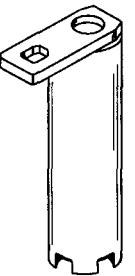
Section 1 - Two Stroke Models

| | |
|--|---|
| Load Washer | 12-37429 |
|  ob01619 | Creates a load on the forward gear when taking forward gear backlash measurements for counter rotation gearcases. |
| Belleville Washer | 12-54048 |
|  10772 | Use with the Pinion Nut Adaptor (91-61067A3) and a propeller nut to check the reverse gear backlash. |
| Propeller Shaft Tool | 44-93003 |
|  11573 | Acts as a dummy propeller shaft when taking forward gear backlash measurements for counter rotation gearcases. |
| Pinion Gear Locating Tool | 91-12349A05 |
|  3608 | Measures pinion gear height. |
| Mandrel | 91-13658T |
|  13513 | Aids in the installation of bushings, bearings and races into the gearcase. |
| Bearing Installation Driver | 91-13945 |
|  8877 | Installs reverse gear needle bearing into prop shaft carrier. |
| Oil Seal Driver | 91-13949 |
|  8878 | Installs oil seals into water pump base. |

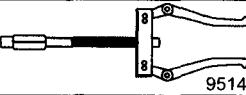
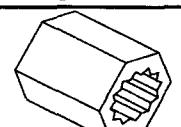
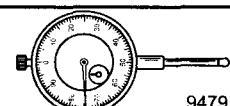
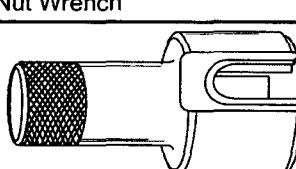
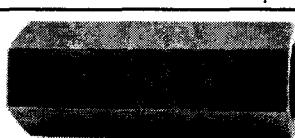
| | |
|---|---|
| Bearing Race Driver | 91-14308T02 |
|  | Removes pinion bearing race. |
| Bearing Installation Puller | 91-14309T02 |
|  | Installs pinion bearing into gearcase. |
| Wear Sleeve Driver | 91-14310T 1 |
|  | Installs wear sleeve onto driveshaft. |
| Bearing Preload Tool | 91-14311A04 |
|  | Simulates a load on the driveshaft for accurate pinion height and backlash measurements. |
| Needle Bearing Driver | 91-15755T |
|  | Installs needle bearings into bearing carriers. |
| Bearing Cup/Adapter Installation Tool | 91-18605A 2 |
|  | Installs the forward gear bearing race on a standard gearcase. Presses the reverse gear bearing adapter into the gear housing on a counter rotating gearcase. |
| Backlash Indicator | 91-19660--1 |
|  | Measures gear backlash. |
| Puller | 91-27780 |
|  | Removes gears, bearings and races. |

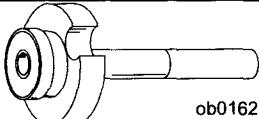
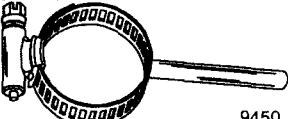
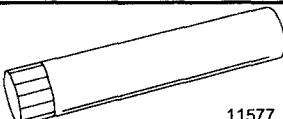
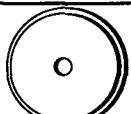
Section 1 - Two Stroke Models

| | |
|---|---|
| Bearing Cup Driver | 91-31106T |
|  | Installs the driven gear bearing cup. |
| Shift Shaft Bushing Tool | 91-31107T |
|  | Aids in the removal and installation of the shift shaft bushing. |
| Oil Seal Driver | 91-31108T |
|  | Installs bearing carrier oil seals. |
| Bearing Removal and Installation Kit | 91-31229A7 |
|  | <p>Installs and removes the bearings in all gearcases. 91-31229A7 tool assembly includes the following components:</p> <ul style="list-style-type: none"> 11-24156 Hex Nut 12-34961 Washer 91-15755T Bearing Carrier 91-29310 Plate 91-29610 Pilot Plate 91-30366T1 Mandrel 91-31229 Puller Shaft 91-32325T Driver Head 91-32336 Driver Needle Bearing 91-36379 Puller/Head Gear 91-36569T Driver Head 91-36571T Pilot Washer 91-37292 Roller Bearing 91-37311 Driver Head 91-37312 -Driver Head 91-37323 Driver Head Rod 91-37324 Pilot Washer 91-38628T Puller/Driver Head 91-52393 Driver Needle Bearing 91-52394 Head Pull Rod |
| Needle Bearing Driver | 91-33491 |
|  | Installs the needle bearing in the forward gear. Removes and installs the seals and bearing in the gimbal housing. |
| Slide Hammer | 91-34569A 1 |
|  | Aids in the removal of various engine components. Use with puller jaws. |

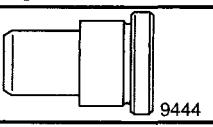
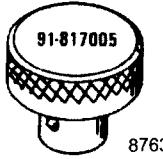
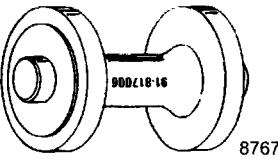
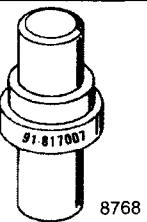
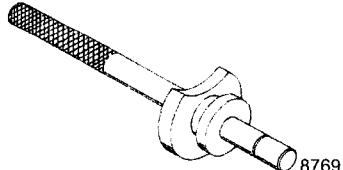
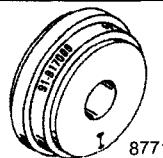
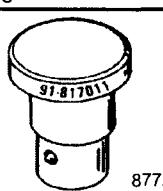
| | | |
|--|---|-----------|
| Driver Head | | 91-36569T |
|  ob01634 | Used in pinion gear and bearing installation. | |
| Pilot Washer | | 91-36571T |
|  ob01619 | Used in pinion gear and pinion bearing installation. | |
| Universal Puller Plate | | 91-37241 |
|  8505 | Removes bearings from gears and the driveshaft. | |
| Driveshaft Bearing Driver Head | | 91-37312T |
|  8762 | Removes bearings from gears and bearing carrier. | |
| Driver Rod | | 91-37323 |
|  25431 | Used in pinion gear and pinion bearing installation. | |
| Pilot Mandrel | | 91-37350T |
|  8884 | Presses on inner race of forward gear roller bearing. | |
| Puller/Driver Head | | 91-38628T |
|  ob01622 | Used in pinion gear and pinion bearing installation. | |
| Driveshaft Bearing Retainer Wrench | | 91-43506T |
|  9520 | Removes and installs the threaded bearing retainer. | |

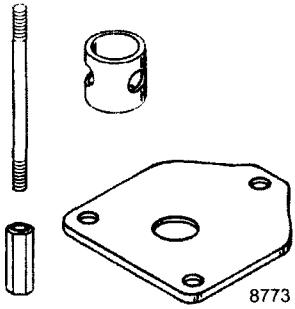
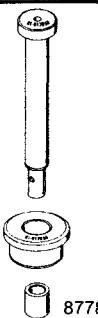
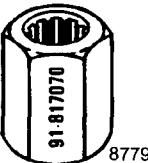
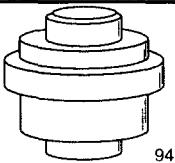
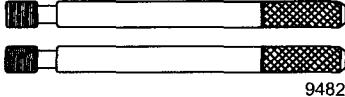
Section 1 - Two Stroke Models

| | | |
|---|---|-------------|
| Puller Jaws Assembly | | 91-46086A1 |
|  9514 | Removes bearing carrier and bearing races; use with Puller Bolt (91-85716). | |
| Backlash Indicator Rod | | 91-53459 |
|  10452 | Aids in checking gear backlash. | |
| Driver Head | | 91-55919 |
|  10476 | Removes bearings and seals; installs needle bearings into the bearing carrier. | |
| Driveshaft Holding Tool | | 91-56775T |
|  9448 | Provides a wrench surface to turn the driveshaft. Also used to hold driveshaft for pinion gear installation. | |
| Dial Indicator | | 91-58222A1 |
|  9479 | Used to obtain a variety of measurements including gear backlash, pinion gear location, and TDC. | |
| Pinion Nut Wrench | | 91-61067A04 |
|  9593 | Holds the pinion nut when removing the pinion gear and driveshaft. Also, use with Belleville washer and propeller nut to check the reverse gear lash. | |
| Bearing Carrier Retainer Nut Wrench | | 91-61069T |
|  ob01615 | Installs and removes the bearing carrier retainer nuts. | |
| Propeller Shaft/Driveshaft Adapter | | 91-61077T |
|  10805 | Provides a wrench surface to turn the propeller shaft or the driveshaft. | |

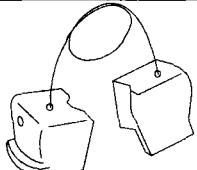
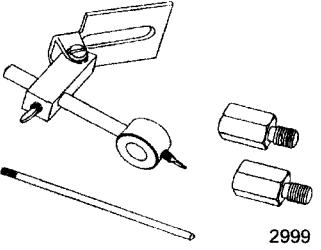
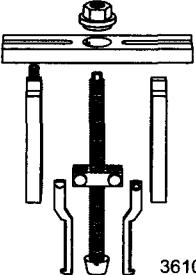
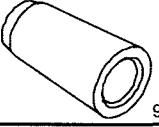
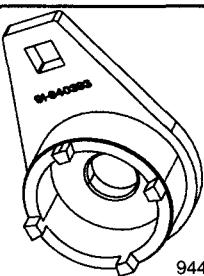
| | |
|---|---|
| Torque Wrench, lb. in. | 91-66274 |
|  10829 | Dial type torque wrench that sets torque from 9 to 150 lb. in.; 3/8 in. drive. |
| Pinion Height Tool | 91-74776T |
|  ob01627 | Checks pinion gear height. |
| Backlash Indicator Rod | 91-78473 |
|  9450 | Aids in checking gear backlash. |
| Driveshaft Holding Tool | 91-804776A1 |
|  12376 | Holds driveshaft while removing or torquing the pinion nut. |
| Forward Gear Assembly Tube | 91-815850 |
|  11577 | Removes and installs the forward gear/bearing adapter assembly for counter rotation gearcases. |
| Puller Jaws | 91-816242 |
|  10681 | Use with either the two prong or three prong puller on all drive units. |
| Guide Plate | 91-816243 |
|  4481 | Centers the rod used to drive in the forward gear bearing on a standard rotation gearcase, and the reverse gear bearing on a counter rotation gearcase. |
| Reverse Gear Needle Bearing Driver | 91-816244 |
|  10810 | Installs the needle bearings into the reverse gear of a counter rotating gearcase. |
| Needle Bearing Removal Tool | 91-816245 |
|  10793 | Removes the needle bearings from the back adaptor of a counter rotating gearcase. |

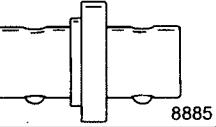
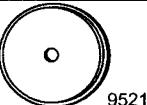
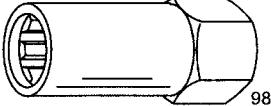
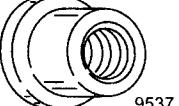
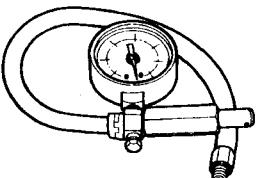
Section 1 - Two Stroke Models

| | |
|---|--|
| Needle Bearing Driver | 91-816292 |
|  | Installs the needle bearing onto the forward gear. |
| Forward Gear Bearing Installer | 91-817005 |
|  | Aids in the installation of the forward gear needle bearing. |
| Water Pump Base Seal Installer | 91-817006 |
|  | Installs upper and lower water pump base seals. |
| Bearing Carrier Seal Installer | 91-817007T |
|  | Installs upper and lower bearing carrier seals. |
| Pinion Gear Location Tool | 91-817008A 2 |
|  | Checks gearcase pinion gear height. |
| Forward Gear Bearing Race Driver Cup | 91-817009T |
|  | Aids in the installation of forward gear bearing race. |
| Needle Bearing Installer | 91-817011T |
|  | Installs needle bearing in the bearing carrier. |

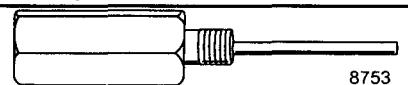
| | |
|---|--|
| Bearing Preload Tool Update Kit | 91-817057A02 |
|  | Use to update Bearing Preload Tool (91-14311A1). |
| Lower Driveshaft Bearing Driver Assembly | 91-817058A 1 |
|  | Removes and installs lower driveshaft bearing. |
| Driveshaft Holding Tool | 91-817070 |
|  | Holds driveshaft while removing pinion nut. |
| Carrier Seal Driver | 91-817569T |
|  | Removes and installs the bearing carrier seals. Installs seals in the driveshaft seal carrier. |
| Water Pump Alignment Pins | 91-821571A 1 |
|  | Aligns the water pump during installation. |
| Seal/Bushing Installer | 91-824785T 1 |
|  | Aids in the installation of the bushing into the bearing carrier. |

Section 1 - Two Stroke Models

| | |
|--|---|
| Spring Hook | 91-825200A 1 |
|  13666 | Aids in the removal of the pinion bearing race from the gearcase; use with driver (91-13779). |
| Driver | 91-826872 |
|  13667 | Aids in the installation of the propeller shaft needle bearing into the forward gear. |
| Dial Indicator Adapter | 91-83155 |
|  2999 | Attaches the dial indicator to the gearcase when checking backlash. |
| Bearing Puller Assembly | 91-83165T |
|  3610 | Removes bearings, races and bearing carriers |
| Bearing Carrier Installation Tool | 91-840388 |
|  9518 | Installs the bearing carrier on heavy duty propeller shafts. |
| Bearing Carrier Retainer Nut Wrench | 91-840393 |
|  9449 | Installs the bearing carrier retainer nut on heavy duty propeller shafts. |

| | | |
|-----------------------------|---|---|
| Bearing Driver | | 91-856875A 1 |
| |  | Installs prop shaft needle bearing into 3 jaw or 6 jaw forward gear. |
| Cross Pin Tool | | 91-86642 |
| |  | Aids in the installation of the cross pin into the clutch dog assembly. |
| Guide Plate | | 91-86943T |
| |  | Guides the forward gear bearing during installation. |
| Bearing Cup Driver | | 91-87120T |
| |  | Installs the forward gear bearing cup. |
| Bearing Driver | | 91-877321A 1 |
| |  | Installs prop shaft needle bearing into 6 jaw forward gear. |
| Dial Indicator Holding Tool | | 91-89897 |
| |  | Secures the dial indicator to gear housing when checking backlash. |
| Driveshaft Holding Tool | | 91-90094 |
| |  | Assists in pinion gear installation. |
| Pinion Bearing Driver | | 91-92788T |
| |  | Aids in the removal and installation of the pinion bearing. |
| Leakage Tester Kit | | FT8950 |
| |  | Checks gear housing for leakage prior to filling with gear lubricant. Also used to pressurize the oil injection system. |

Section 1 - Two Stroke Models

| | |
|---|---|
| Expanding Rod | Snap-On CG40-4 |
|  12538 | Aids in the removal of gears and bearings; use with collet. |
| Expanding Rod | Snap-On CG41-11 |
|  8753 | Aids in the removal of the spool from the power trim pump. |

Section 2 - FourStroke Models

Table of Contents

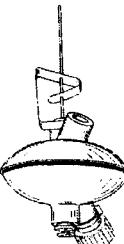
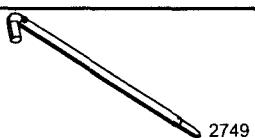
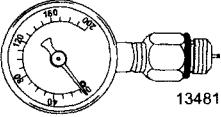
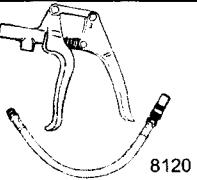
| | | | |
|---|----|--|----|
| Installation and Maintenance..... | 36 | Powerhead..... | 48 |
| Maintenance Tool Application Chart..... | 36 | Powerhead Tool Application Chart..... | 48 |
| Maintenance Tools..... | 37 | Powerhead Tools..... | 49 |
| Electrical and Ignition..... | 40 | Mid-Section..... | 54 |
| Electrical Tool Application Chart..... | 40 | Mid Section Tool Application Chart..... | 54 |
| Electrical Tools..... | 41 | Mid-Section Tools..... | 55 |
| Fuel System..... | 45 | Lower Unit..... | 56 |
| Fuel System Tool Application Chart..... | 45 | Gear Housing Tool Application Chart..... | 56 |
| Fuel System Tools..... | 46 | Gear Housing Tools..... | 61 |

Installation and Maintenance

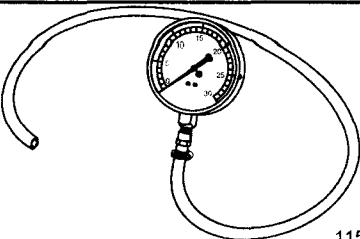
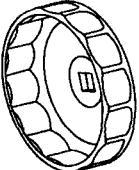
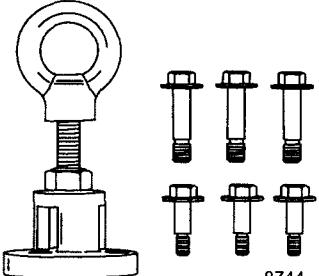
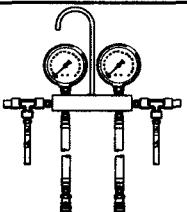
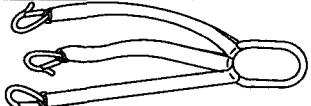
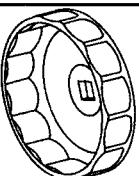
Maintenance Tool Application Chart

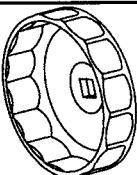
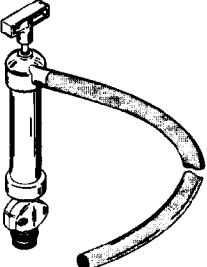
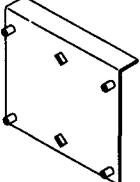
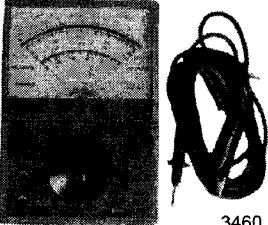
| Part No. | Description | 4/5/6 | 8/9.9 9.9 BigFoot | 9.9/15 | 25 BigFoot | 25/30 EFI | 30/40 EFI | 40-60 EFI | 50/60 | 75/90 | 75/90 EFI | 115 EFI | 75-115 EFI 1.7 L | 225 EFI |
|------------------|----------------------------------|-------|-------------------------|--------|---------------|--------------|--------------|--------------|-------|-------|--------------|------------|------------------------|------------|
| 44357Q2 | Flushing Device | | X | X | X | X | X | X | X | X | X | X | X | X |
| 17-49930A 1 | Stainless Steel Tilt Pin | | | | | | | X | X | X | X | X | X | |
| 22-86306A01 | Adapter Bushing | | | | | | | | | X | X | X | | |
| 22-89772 | Connector | | | | | | | | | X | X | X | | |
| 91-29287 | Compression Tester | X | X | X | X | X | X | X | X | | | | | X |
| 91-37299Q2 | Grease Gun | X | X | X | X | X | X | X | X | X | X | X | X | X |
| 91-52024A1 | Remote Starter Switch | | X | X | X | X | X | X | X | X | X | X | X | X |
| 91-79250A 2 | Water Pressure Gauge | | | X | X | X | X | X | X | X | X | X | X | X |
| 91-802653Q02 | Oil Filter Wrench | | | X | X | | | X | X | X | X | X | | |
| 91-83164M | Flywheel Puller/Lifting Ring | | X | X | X | X | X | X | X | X | X | X | | X |
| 91-881834A1 | Dual Fuel/Air Pressure Gauge Kit | | | | | X | X | X | | | X | X | X | X |
| 91-883705T01 | Lifting Strap | | | | | | | | | | | | | X |
| 91-889277002 | Oil Filter Wrench | | | | | | | | | | | | | X |
| 91-889277Q01 | Oil Filter Wrench | | | | | | | | | | | | | X |
| 91-895343T02 | Flywheel Puller/Lifting Ring | | | | | | | | | | | | | X |
| 91-90265A5 | Crankcase Oil Pump | | | | X | | X | X | X | X | X | X | X | X |
| 91-98234A2 | Transom Drilling Fixture | | | | | | | | | X | X | X | X | X |
| 91-99750A1 | DVA/Multimeter Kit | X | X | X | X | X | X | X | X | X | X | X | X | X |
| Snap-On EEPV303B | Compression Tester with Adapter | X | X | X | X | X | X | X | X | X | X | X | X | X |
| Snap-On EEPV309A | Cylinder Leakage Tester | X | X | X | X | X | X | X | X | X | X | X | X | X |

Maintenance Tools

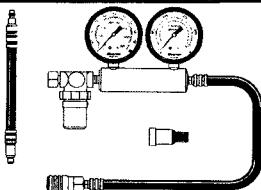
| | |
|--|---|
| Flushing Device | 44357Q 2 |
|  9192 | Attaches to the water intakes; provides a fresh water connection when flushing the cooling system or operating the engine. |
| Stainless Steel Tilt Pin | 17-49930A 1 |
|  2749 | Limits the down trim angle of the power trim equipped engines, or aids in determining the trim out angle on non-power trim engines. |
| Adapter Bushing | 22-86306A01 |
|  11600 | Reduces thread size to install connector for checking cylinder block water pressure. |
| Connector | 22-89772 |
|  11601 | Fitting for checking cylinder block water pressure. |
| Compression Tester | 91-29287 |
|  13481 | Measures engine cylinder compression. |
| Grease Gun | 91-37299Q 2 |
|  8120 | Aids in the lubrication of key areas on the engine. Allows easy access to grease fittings. |
| Remote Starter Switch | 91-52024A1 |
|  10882 | Provides a remote starter button to crank the engine when performing service procedures. |

Section 2 - FourStroke Models

| | |
|---|--|
| Water Pressure Gauge | 91-79250A 2 |
|  11598 | Aids in checking the engine water pressure. |
| Oil Filter Wrench | 91-802653Q02 |
|  5221 | Assists in removal of oil filter. |
| Flywheel Puller/Lifting Ring | 91-83164M |
|  8744 | Removes flywheel from engine. Used for lifting powerhead/engine. |
| Dual Fuel/Air Pressure Gauge Kit | 91-881834A 1 |
|  5822 | Tests fuel and air pressure; the dual gauges allow the viewing of both pressures simultaneously. |
| Lifting Strap | 91-883705T01 |
|  25496 | Aids in the removal and installation of the F225 engine. |
| Oil Filter Wrench | 91-889277002 |
|  5221 | Aids in the removal of the oil filter. |

| | |
|--|--|
| Oil Filter Wrench | 91-889277Q01 |
|  5221 | Aids in the removal of the oil filter. |
| Flywheel Puller/Lifting Ring | 91-895343T02 |
|  14869 | Removes flywheel from engine. Used for lifting powerhead/engine. |
| Crankcase Oil Pump | 91-90265A 5 |
|  11591 | Aids in the removal of engine oil without draining the crankcase. |
| Transom Drilling Fixture | 91-98234A2 |
|  5489 | Aids in engine installation by acting as a template for engine mounting holes. |
| DVA/Multimeter Kit | 91-99750A 1 |
|  3460 | Tests the electrical and ignition systems; consists of a VOA meter with built-in direct voltage adapter. |
| Compression Tester with Adapter | Snap-On EEPV303B |
|  8511 | Checks cylinder compression. Use with M14 x 1.25 adapter. |

Section 2 - FourStroke Models

| Cylinder Leakage Tester | Snap-On EEPV309A |
|--|--------------------------------------|
|  11604 | Aids in checking cylinder breakdown. |

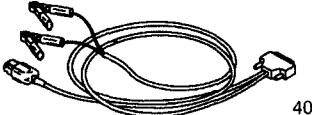
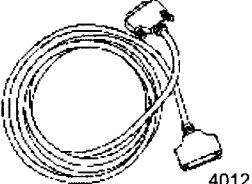
Electrical and Ignition

Electrical Tool Application Chart

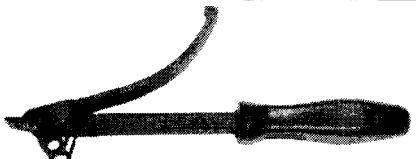
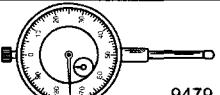
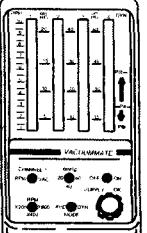
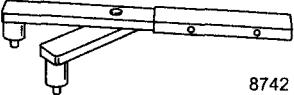
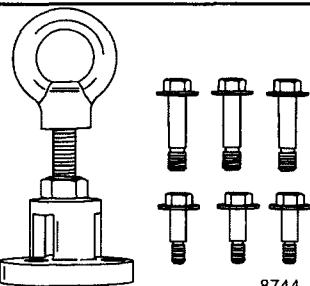
| Part No. | Description | 4/5/6 | 8/9.9 9.9 Bigfoot | 9.9/15 | 25 Bigfoot | 25/30 EFI | 30/40 EFI | 40-60 EFI | 50/60 | 75/90 | 75/90 EFI | 115 EFI | 75-115 EFI 1.7 L | 225 EFI |
|--------------|---------------------------------------|-------|-------------------------|--------|---------------|--------------|--------------|--------------|-------|-------|--------------|------------|------------------------|------------|
| 84-822560A5 | Adapter Harness | | | | X | | X | X | X | | | | | |
| 84-822560A13 | Adapter Harness | | | | | | | | | | | | X | |
| 84-825003A1 | Extension Cable | | | | X | | X | X | X | | | | X | X |
| 91-24937A1 | Flywheel Holder Strap | X | | | | | | | | | | | | |
| 91-52344 | Flywheel Holding Tool | | | | | | | | | | | | X | |
| 91-58222A1 | Dial Indicator | X | X | X | X | X | X | X | X | X | X | X | | X |
| 91-8026501 | Clamp-on Current Probe | | X | X | X | X | X | X | X | X | X | X | X | X |
| 91-809871 2 | New Style Vacuumate Carburetor Turner | | | | | | | | | X | X | X | X | X |
| 91-83163M | Flywheel Holder | | X | | X | X | X | X | X | X | X | X | | |
| 91-83164M | Flywheel Puller/Lifting Ring | X | X | | X | X | X | X | X | X | X | X | | |
| 91-850439T1 | Spark Gap Tester | X | X | X | X | X | X | X | X | X | X | X | X | X |
| 91-875216 | Brush Holder | | | | | | | | | | | X | X | |
| 91-881824001 | Malfunction Indicator Lamp | | | | | | | | | | | X | X | X |
| 91-881824004 | Stator Coil Harness | | | | | | | | | | | X | X | |
| 91-881825 | Crank Position Sensor Test Harness | | | | | | | | | | | | X | |
| 91-881826 | ECM (Coil Primary) Test Harness | | | | | | | | | | | X | | |

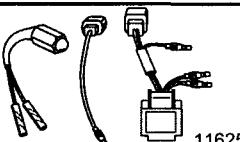
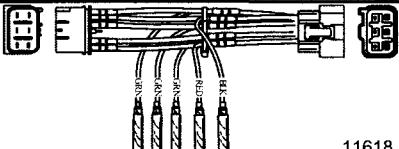
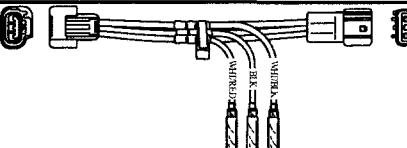
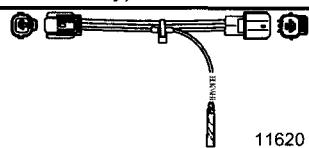
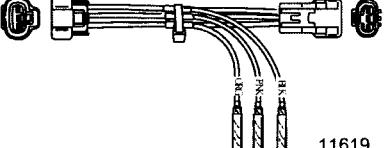
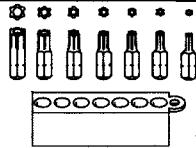
| Part No. | Description | 4/5/6 | 8/9.9 9.9 Bigfoot | 9.9/15 | 25 Bigfoot | 25/30 EFI | 30/40 EFI | 40-60 EFI | 50/60 | 75/90 | 75/90 EFI | 115 EFI | 75-115 EFI 1.7 L | 225 EFI |
|-------------------|---------------------------------------|-------|-------------------------|--------|---------------|--------------|--------------|--------------|-------|-------|--------------|------------|------------------------|------------|
| 91-881827 | Throttle Position Sensor Test Harness | | | | | | | | | | | X | | |
| 91-881828 | Tamper-Proof Screw Torx Bit Set | | | | | | X | X | | | X | X | | X |
| 91-89045 1 | Direct Voltage Adapter | X | X | X | X | X | X | X | X | X | X | X | | X |
| 91-892647A01 | DMT 2004 Digital Multimeter | X | X | X | X | X | X | X | X | X | X | X | X | X |
| 91-895190 | Flywheel Remover | X | X | | | X | | | | | | | | |
| 91-895191 | Crankshaft Holding Tool | | X | | | | | | | | | | | |
| 91-895343T02 | Flywheel/Puller/Lifting Ring | | | | | | | | | | | | | X |
| 91-99379 | Timing Light | X | X | X | X | X | X | X | X | X | X | X | X | X |
| 91-99750A1 | DVA/Multimeter Kit | X | X | | | | | | | | X | X | X | X |
| Order through SPX | Computer Diagnostic System (CDS) | | | | X | X | X | X | X | | | | X | X |

Electrical Tools

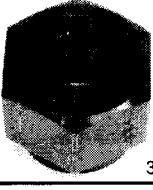
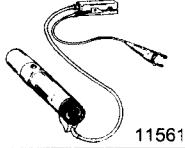
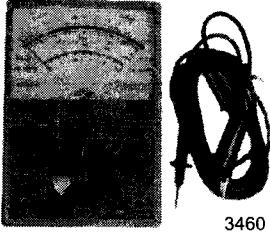
| | |
|--|---|
| Adapter Harness | 84-822560A5 |
|  4009 | Data link harness between engine and Computer Diagnostic System (CDS) or Digital Diagnostic Terminal (DDT) on engines with a 2 pin diagnostic connection. |
| Adapter Harness | 84-822560A13 |
|  5826 | Data link harness between engine and Computer Diagnostic System (CDS). |
| Extension Cable | 84-825003A1 |
|  4012 | Data link extension harness (3.05 m[10 ft.]) between adapter harness and Digital Diagnostic Terminal |

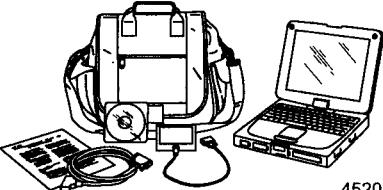
Section 2 - FourStroke Models

| | |
|---|--|
| Flywheel Holder Strap | 91-24937A 1 |
|  13446 | Holds the flywheel on manual start engines when removing the flywheel nut. |
| Flywheel Holding Tool | 91-52344 |
|  4738 | Holds and/or turns the flywheel while making engine repairs, also used to torque the flywheel or the engine coupler. |
| Dial Indicator | 91-58222A1 |
|  9479 | Used to obtain a variety of measurements including gear backlash, pinion gear location, and TDC. |
| Clamp-on Current Probe | 91-802650-1 |
|  4006 | Measures the current output of battery charging systems or current draw of electric motors. |
| New Style Vacuumate Carburetor Tuner | 91-809871 2 |
|  11630 | Allows the technician to balance the carburetors. |
| Flywheel Holder | 91-83163M |
|  8742 | Holds and/or turns the flywheel while making engine repairs, also used to torque the flywheel or the engine coupler. |
| Flywheel Puller/Lifting Ring | 91-83164M |
|  8744 | Removes flywheel from engine. Used for lifting powerhead/engine. |

| | |
|---|--|
| Spark Gap Tester | 91-850439T 1 |
|  7513 | Provides a visual indication of spark/coil efficiency. |
| Brush Holder | 91-875216 |
|  11621 | Holds the starter motor brushes in place when installing the armature. |
| Malfunction Indicator Lamp | 91-881824001 |
|  11625 | Aids in engine diagnostics by displaying basic engine fault codes. |
| Stator Coil Harness | 91-881824004 |
|  11618 | Links between the stator coil or the voltage regulator/rectifier and the main engine harness to check peak voltage. |
| Crank Position Sensor Test Harness | 91-881825 |
|  11617 | Links between the crank position sensor and the main engine harness to check the crank position sensor signal. |
| ECM (Coil Primary) Test Harness | 91-881826 |
|  11620 | Links between the ignition coil and the main engine harness to measure the peak voltage going from the Electronic Control Module to the ignition coil. |
| Throttle Position Sensor Test Harness | 91-881827 |
|  11619 | Links between the throttle position sensor and the main engine harness to check the throttle position sensor signal. |
| Tamper-Proof Screw Torx Bit Set | 91-881828 |
|  11782 | Aids in the removal of tamper-proof fasteners. |

Section 2 - FourStroke Models

| | |
|---|--|
| Direct Voltage Adapter | 91-89045 1 |
|  11613 | Use with a multimeter to check peak voltage on various engine components. |
| DMT 2004 Digital Multimeter | 91-892647A01 |
|  4516 | Measures RPM on spark ignition (SI) engines, ohms, amperes, AC and DC voltages; records maximums and minimums simultaneously, and accurately reads in high RFI environments. |
| Flywheel Remover | 91-895190 |
|  3458 | Aids in the removal of the flywheel. |
| Crankshaft Holding Tool | 91-895191 |
|  3455 | Holds crankshaft while servicing the powerhead. |
| Flywheel Puller/Lifting Ring | 91-895343T02 |
|  14869 | Removes flywheel from engine. Used for lifting powerhead/engine. |
| Timing Light | 91-99379 |
|  11561 | Allows a technician to check ignition timing. |
| DVA/Multimeter Kit | 91-99750A 1 |
|  3460 | Tests the electrical and ignition systems; consists of a VOA meter with built-in direct voltage adapter. |

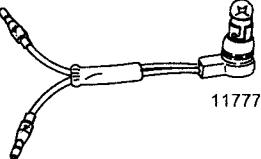
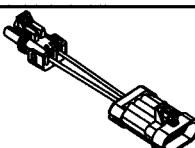
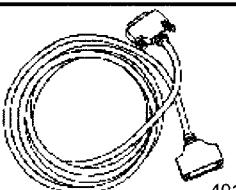
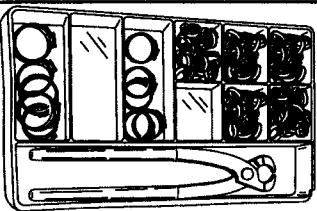
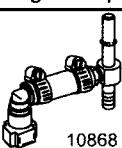
| Computer Diagnostic System (CDS) | Order through SPX |
|---|---|
|  4520 | <p>Monitors all electrical systems for proper function, diagnostics, and calibration purposes. For additional information, pricing, or to order the Computer Diagnostic System contact:</p> <p>SPX Corporation 28635 Mound Rd. Warren, MI 48092 or call: USA - 1-800-345-2233 Canada - 800-345-2233 Europe - 49 6182 959 149 Australia - (03) 9544-6222</p> |

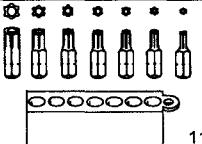
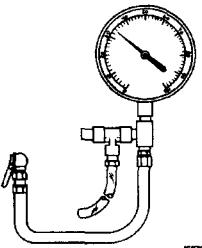
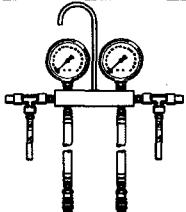
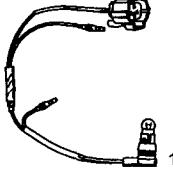
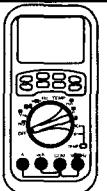
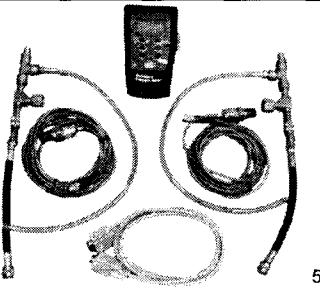
Fuel System

Fuel System Tool Application Chart

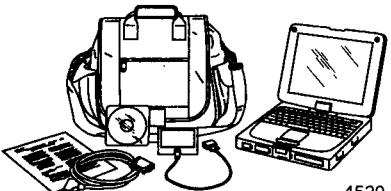
| Part No. | Description | 25 Bigfoot | 25/30 EFI | 30/40 EFI | 40-60 EFI | 50/60 | 75/90 | 75/90 EFI | 115 EFI | 75-115 EFI 1.7 L | 225 EFI |
|-------------------|----------------------------------|------------|-----------|-----------|-----------|-------|-------|-----------|---------|------------------|---------|
| 99056A1 | Malfunction Indicator Lamp | | | | | | | | X | | X |
| 84-822560A5 | Adapter Harness | | | X | X | | | | | X | |
| 84-822560A13 | Adapter Harness | | | | | | | | | X | |
| 84-822560T12 | 2 to 4 Pin Harness Adapter | | | X | X | | | | | X | |
| 84-825003A1 | Extension Cale | X | | X | X | X | | | | X | |
| 91-803146A04 | Hose Clamp Tool Kit | X | X | X | X | X | | | | X | X |
| 91-881824003 | Fuel Pressure Gauge Adapter | | | | | | | X | | | |
| 91-881828 | Tamper-Proof Screw Torx Bit Set | | | X | X | | | X | X | | X |
| 91-881833A03 | Fuel Pressure Gauge Kit | | X | X | X | | | X | X | X | X |
| 91-881834A1 | Dual Fuel/Air Pressure Gauge Kit | | X | X | X | | | X | X | X | X |
| 91-884793A1 | Diagnostic Lamp | | | | | | | | X | | |
| 91-892647A01 | DMT 2004 Digital Multimeter | X | X | X | X | X | X | X | X | X | X |
| 91-892651A01 | Digital Pressure Meter | | X | X | X | | | X | X | X | X |
| Order through SPX | Computer Diagnostic System (CDS) | X | X | X | X | X | | X | X | X | |

Fuel System Tools

| | |
|---|---|
| Malfunction Indicator Lamp | 99056A 1 |
|  11777 | Aids in engine diagnostics by displaying basic engine fault codes. |
| Adapter Harness | 84-822560A5 |
|  4009 | Data link harness between engine and Computer Diagnostic System (CDS) or Digital Diagnostic Terminal (DDT) on engines with a 2 pin diagnostic connection. |
| Adapter Harness | 84-822560A13 |
|  5826 | Data link harness between engine and Computer Diagnostic System (CDS). |
| 2 to 4 Pin Harness Adapter | 84-822560T12 |
|  4679 | Adapts the 2 pin Digital Diagnostic Terminal harness to the 4 pin connector on the engine. |
| Extension Cable | 84-825003A1 |
|  4012 | Data link extension harness (3.05 m[10 ft.]) between the adapter harness and the Digital Diagnostic Terminal or Computer Diagnostic System (CDS). |
| Hose Clamp Tool Kit | 91-803146A04 |
|  5819 | Aids in the installation of high pressure (Oetiker ®) hose clamps. |
| Fuel Pressure Gauge Adapter | 91-881824003 |
|  10868 | Connects the fuel pressure gauge to the fuel rail when checking fuel pressure. |

| | |
|---|--|
| Tamper-Proof Screw Torx Bit Set | 91-881828 |
|  11782 | Aids in the removal of tamper-proof fasteners. |
| Fuel Pressure Gauge Kit | 91-881833A03 |
|  rms32 | Tests the fuel pump pressure; can be used to relieve fuel pressure. |
| Dual Fuel/Air Pressure Gauge Kit | 91-881834A 1 |
|  5822 | Tests fuel and air pressure; the dual gauges allow the viewing of both pressures simultaneously. |
| Diagnostic Lamp | 91-884793A 1 |
|  11780 | Aids in engine diagnostics by displaying basic engine fault codes. |
| DMT 2004 Digital Multimeter | 91-892647A01 |
|  4516 | Measures RPM on spark ignition (SI) engines, ohms, amperes, AC and DC voltages; records maximums and minimums simultaneously, and accurately reads in high RFI environments. |
| Digital Pressure Meter | 91-892651A01 |
|  5786 | Connects to the fuel system/manifold and can be used in conjunction with Computer Diagnostic System (CDS). |

Section 2 - FourStroke Models

| Computer Diagnostic System (CDS) | | Order through SPX | | | | | | | | | | | |
|---|--|---|--|--|--|--|--|--|--|--|--|--|--|
|  4520 | | Monitors all electrical systems for proper function, diagnostics, and calibration purposes. For additional information, pricing, or to order the Computer Diagnostic System contact: SPX Corporation 28635 Mound Rd. Warren, MI 48092 or call: USA - 1-800-345-2233 Canada - 800-345-2233 Europe - 49 6182 959 149 Australia - (03) 9544-6222 | | | | | | | | | | | |

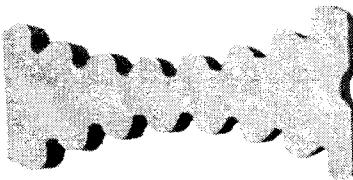
Powerhead

Powerhead Tool Application Chart

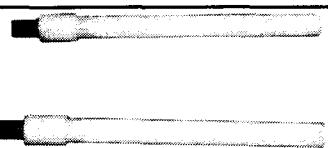
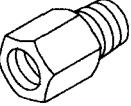
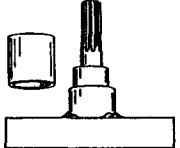
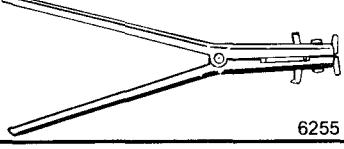
| Part No. | Description | 4/5/6 | 8/9.9 9.9 BigFoot | 9.9/15 | 25 Bigfoot | 25/30 EFI | 30/40 EFI | 40-60 EFI | 50/60 | 75/90 | 75/90 EFI | 115 EFI | 75-115 EFI 1.7 L | 225 EFI |
|--------------|----------------------------------|-------|-------------------------|--------|---------------|--------------|--------------|--------------|-------|-------|--------------|------------|------------------------|------------|
| N/A | Cam Brake | | | | | | | | | | | | X | |
| N/A | Crankshaft Retainer | | | | | | | | | | | | X | |
| N/A | Dial Indicator Extension Adapter | | | | | | | | | | | | X | |
| N/A | Ring Compressor | | | | | | | | | | | | X | |
| N/A | Rod Guide Dowel | | | | | | | | | | | | X | |
| 22-883147 | Adapter Fitting | | | | | | | | | | X | X | X | |
| 91-13662T1 | Powerhead Stand | | X | | | | | | | | | | | |
| 91-24697 | Piston Ring Expander | X | X | X | X | X | X | X | X | X | X | X | X | X |
| 91-802653Q02 | Oil Filter Wrench | | X | | X | X | X | X | X | X | X | X | | |
| 91-803146A04 | Hose Clamp Tool Kit | | | | | | | | | | | | | X |
| 91-804770A1 | Crankshaft Holder | | | | | | | | | | X | X | X | |
| 91-804774001 | Valve Guide Remover/ Installer | | | | | | | | | | X | X | X | |
| 91-804775 | Valve Guide Reamer | | | | | | | | | | X | X | X | |
| 91-809494A1 | Valve Spring Compressor | | X | X | X | X | X | X | X | X | X | X | X | X |
| 91-809495A1 | Valve Guide Driver | | X | | X | | X | X | X | | | | | |
| 91-809496A1 | Valve Guide Driver Bushing | | X | | X | | X | X | X | | | | | |

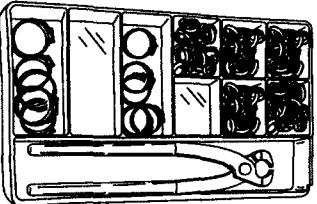
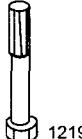
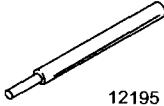
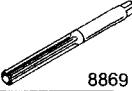
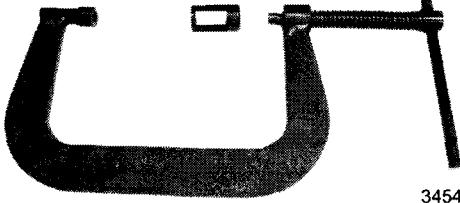
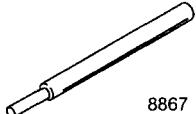
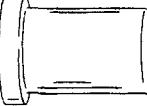
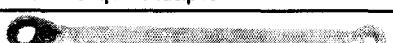
| Part No. | Description | 4/5/6 | 8/9.9 9.9 BigFoot | 9.9/15 | 25 Bigfoot | 25/30 EFI | 30/40 EFI | 40-60 EFI | 50/60 | 75/90 | 75/90 EFI | 115 EFI | 75-115 EFI 1.7 L | 225 EFI |
|--------------|--|-------|-------------------------|--------|---------------|--------------|--------------|--------------|-------|-------|--------------|------------|------------------------|------------|
| 91-809646A1 | 1-5/8 Socket | | | | | | | | X | | | | | |
| 91-809905001 | 13 mm Torque Adapter | | | | | | | | | | | | X | |
| 91-827001A1 | Powerhead Stand | | | | X | | X | X | X | | | | | |
| 91-83163M | Flywheel Holder | | X | | X | | X | X | X | X | X | X | | X |
| 91-83164M | Flywheel Puller/Lifting Ring | | X | | X | | X | X | X | X | X | X | | X |
| 91-83165T | Bearing Puller Assembly | X | | X | | | X | X | X | X | | | | |
| 91-881833A03 | Fuel Pressure Gauge Kit | | | | | | | | | | | | X | |
| 91-881834A1 | Dual Fuel/Air Pressure Gauge Kit | | | | | | | | | X | X | X | X | |
| 91-881847T | 46 mm Socket | | | | | | | | | X | X | X | | |
| 91-883705T01 | Lifting Strap | | | | | | | | | | | | | X |
| 91-889277002 | Oil Filter Wrench | | | | | | | | | | | | | X |
| 91-889277Q01 | Oil Filter Wrench | | | | | | | | | | | | X | |
| 91-892651A01 | Digital Pressure Meter | | | | | | | | | X | X | X | X | |
| 91-895191 | Crankshaft Holding Tool | | X | | | | | | | | | | | |
| 91-895192 | Piston Ring Compressor Tool | | X | | | | | | | | | | | |
| FT2997 | Piston Ring Compressor | X | X | X | X | X | X | X | X | X | X | X | X | X |

Powerhead Tools

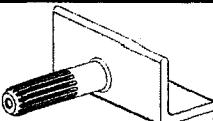
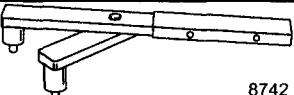
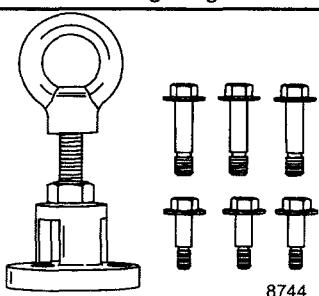
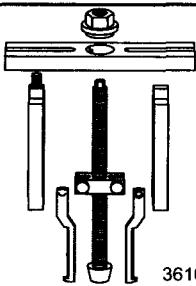
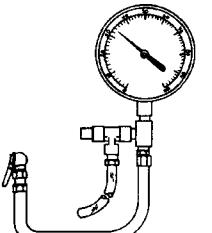
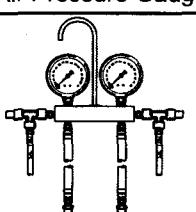
| | |
|---|--|
| Cam Brake | Part number not available for this printing. |
|  | Prevents the intake and exhaust cam from turning while removing or installing cam retaining bolts. 5539 |

Section 2 - FourStroke Models

| | |
|---|---|
| Crankshaft Retainer | Part number not available for this printing. |
|  6191 | Secures crankshaft to cylinder block while rotating block to install the cylinder head. |
| Dial Indicator Extension Adapter | Part number not available for this printing. |
|  4719 | Extends the dial indicators reach. |
| Ring Compressor | Part number not available for this printing |
|  4739 | Compresses piston rings when installing the piston into the cylinder block. |
| Rod Guide Dowel | Part number not available for this printing. |
|  4735 | Prevents cylinder bore and crankshaft from damage while installing or removing connecting rod assembly. |
| Adapter Fitting | 22-883147 |
|  12201 | Adapts British Standard Pipe Thread (BSPT) to National Pipe Thread Fitting (NPTF) when checking oil pressure. |
| Powerhead Stand | 91-13662T 1 |
|  13477 | Used to secure and rotate the powerhead during disassembly and assembly. |
| Piston Ring Expander | 91-24697 |
|  6255 | Expands piston rings for removal and installation. |
| Oil Filter Wrench | 91-802653Q02 |
|  5221 | Assists in removal of oil filter. |

| | |
|---|---|
| Hose Clamp Tool Kit | 91-803146A04 |
|  5819 | Aids in the installation of high pressure (Oetiker ®) hose clamps. |
| Crankshaft Holder | 91-804770A 1 |
|  12199 | Holds crankshaft while servicing the powerhead. |
| Valve Guide Remover/Installer | 91-804774001 |
|  12195 | Removes and installs valve guides. |
| Valve Guide Reamer | 91-804775 |
|  8869 | Use to ream valve guides out to proper size. |
| Valve Spring Compressor | 91-809494A1 |
|  3454 | Removes and installs valve springs. |
| Valve Guide Driver | 91-809495A 1 |
|  8867 | Removes and installs valve guides. |
| Valve Guide Driver Bushing | 91-809496A 1 |
|  8868 | Limits depth of valve guide installation. |
| 1-5/8 Socket | 91-809646A1 |
|  13492 | Aids in the removal of the crankshaft timing gear nut. |
| 13 mm Torque Adapter | 91-809905001 |
|  4631 | Aids in the removal and installation of powerhead nuts, and torquing nuts to specification. |

Section 2 - FourStroke Models

| | |
|---|--|
| Powerhead Stand | 91-827001A 1 |
|  13494 | Used to secure and rotate the powerhead during disassembly and assembly. |
| Flywheel Holder | 91-83163M |
|  8742 | Holds and/or turns the flywheel while making engine repairs, also used to torque the flywheel or the engine coupler. |
| Flywheel Puller/Lifting Ring | 91-83164M |
|  8744 | Removes flywheel from engine. Used for lifting powerhead/engine. |
| Bearing Puller Assembly | 91-83165T |
|  3610 | Removes bearings, races and bearing carriers |
| Fuel Pressure Gauge Kit | 91-881833A03 |
|  rms32 | Tests the fuel pump pressure; can be used to relieve fuel pressure. |
| Dual Fuel/Air Pressure Gauge Kit | 91-881834A 1 |
|  5822 | Tests fuel and air pressure; the dual gauges allow the viewing of both pressures simultaneously. |

Personnel should not work on or under an engine that is suspended. Engines should be attached to work stands, or lowered to ground as soon as possible.

TABLE OF CONTENTS

Section 1 - Two Stroke Models

| | | | |
|---|---|--|----|
| Installation and Maintenance..... | 2 | Powerhead..... | 11 |
| Maintenance Tool Application Chart..... | 2 | Powerhead Tool Application Chart..... | 11 |
| Maintenance Tools..... | 2 | Powerhead Tools..... | 13 |
| Electrical..... | 3 | Mid-Section..... | 17 |
| Electrical Tool Application Chart..... | 3 | Mid-Section Tool Application Chart..... | 17 |
| Electrical Tools..... | 4 | Mid-Section Tools..... | 18 |
| Fuel System..... | 8 | Lower Unit..... | 20 |
| Fuel System Tool Application Chart..... | 8 | Gear Housing Tool Application Chart..... | 20 |
| Fuel System Tools..... | 9 | Gear Housing Tools..... | 23 |

Section 2 - FourStroke Models

| | | | |
|---|----|--|----|
| Installation and Maintenance..... | 36 | Powerhead..... | 48 |
| Maintenance Tool Application Chart..... | 36 | Powerhead Tool Application Chart..... | 48 |
| Maintenance Tools..... | 37 | Powerhead Tools..... | 49 |
| Electrical and Ignition..... | 40 | Mid-Section..... | 54 |
| Electrical Tool Application Chart..... | 40 | Mid Section Tool Application Chart..... | 54 |
| Electrical Tools..... | 41 | Mid-Section Tools..... | 55 |
| Fuel System..... | 45 | Lower Unit..... | 56 |
| Fuel System Tool Application Chart..... | 45 | Gear Housing Tool Application Chart..... | 56 |
| Fuel System Tools..... | 46 | Gear Housing Tools..... | 61 |

Section 3 - OptiMax Models

| | | | |
|---|----|--|----|
| Installation and Maintenance..... | 76 | Powerhead..... | 82 |
| Maintenance Tool Application Chart..... | 76 | Powerhead Tool Application Chart..... | 82 |
| Maintenance Tools..... | 76 | Powerhead Tools..... | 83 |
| Electrical and Ignition..... | 77 | Mid-Section..... | 85 |
| Electrical Tool Application Chart..... | 77 | Mid-Section Tool Application Chart..... | 85 |
| Electrical Tools..... | 77 | Mid-Section Tools..... | 86 |
| Fuel System..... | 79 | Lower Unit..... | 87 |
| Fuel System Tool Application Chart..... | 79 | Gear Housing Tool Application Chart..... | 87 |
| Fuel System Tools..... | 80 | Gear Housing Tools..... | 90 |

Section 4 - Verado Models

| | | | |
|---|-----|---|-----|
| Installation and Maintenance..... | 100 | Fuel System Tool Application Chart..... | 103 |
| Maintenance Tool Application Chart..... | 100 | Fuel System Tools..... | 103 |
| Maintenance Tools..... | 100 | Powerhead..... | 105 |
| Electrical and Ignition..... | 102 | Powerhead Tool Application Chart..... | 105 |
| Electrical Tool Application Chart..... | 102 | Powerhead Tools..... | 106 |
| Electrical Tools..... | 102 | Mid-Section..... | 108 |
| Fuel System..... | 103 | Mid-Section Tool Application Chart..... | 108 |

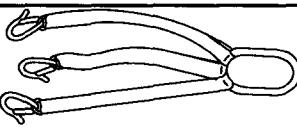
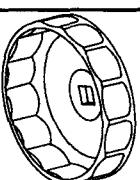
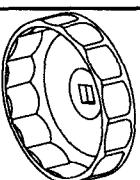
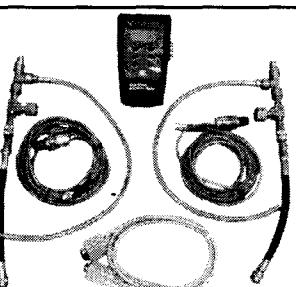
| | | | |
|--|-----|--|-----|
| Mid-Section Tools..... | 108 | Power Steering..... | 115 |
| Lower Unit..... | 110 | Power Steering Tool Application Chart..... | 115 |
| Gear Housing Tool Application Chart..... | 110 | Power Steering Tools..... | 116 |
| Gear Housing Tools..... | 111 | | |

Section 5 - SmartCraft and Digital Throttle & Shift

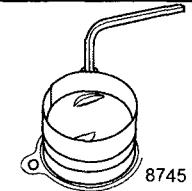
| | | | |
|---|-----|---|-----|
| SmartCraft and Digital Throttle and Shift (DTS) Tool Application Chart..... | 118 | Computer Diagnostic System Adapter Cable Application Chart..... | 121 |
| Special Tools/Cables..... | 118 | Computer Diagnostic System Adapter Cables... | 122 |
| SmartCraft and Digital Throttle and Shift Tools.. | 119 | | |

Section 6 - Sport Jet Pump Models

| | | | |
|--|-----|---------------------------|-----|
| Sport Jet Pump Tool Application Chart..... | 126 | Sport Jet Pump Tools..... | 127 |
|--|-----|---------------------------|-----|

| | | |
|--|--|--------------|
| 46 mm Socket | | 91-881847T |
|  12200 | Aids in the removal and torquing of the flywheel. | |
| Lifting Strap | | 91-883705T01 |
|  25496 | Aids in the removal and installation of the F225 engine. | |
| Oil Filter Wrench | | 91-889277002 |
|  5221 | Aids in the removal of the oil filter. | |
| Oil Filter Wrench | | 91-889277Q01 |
|  5221 | Aids in the removal of the oil filter. | |
| Digital Pressure Meter | | 91-892651A01 |
|  5786 | Connects to the fuel system/manifold and can be used in conjunction with Computer Diagnostic System (CDS). | |
| Crankshaft Holding Tool | | 91-895191 |
|  3455 | Holds crankshaft while servicing the powerhead. | |
| Piston Ring Compressor Tool | | 91-895192 |
|  3456 | Compresses piston rings for easy piston installation. | |

Section 2 - FourStroke Models

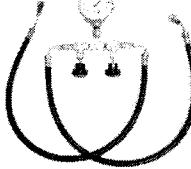
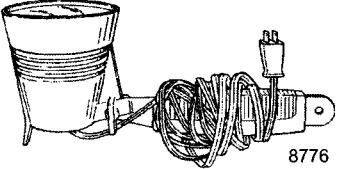
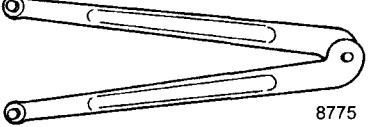
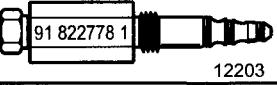
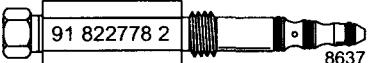
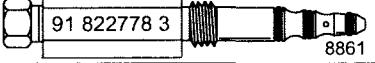
| | |
|---|--|
| Piston Ring Compressor | FT2997 |
|  | Compresses the piston rings to ease piston installation. |

Mid-Section

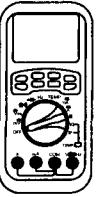
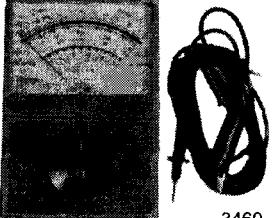
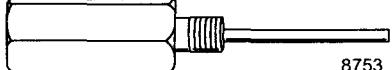
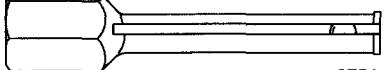
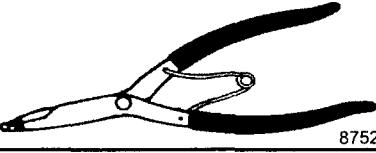
Mid Section Tool Application Chart

| Part No. | Description | 8/9.9 9.9 BigFoot | 9.9/15 | 25 BigFoot | 25/30 EFI | 30/40 EFI | 40-60 EFI | 50/60 | 75/90 | 75/90 EFI | 115 EFI | 75-115 EFI 1.7 L | 225 EFI |
|-----------------|-----------------------------------|-------------------------|--------|---------------|--------------|--------------|--------------|-------|-------|--------------|------------|------------------------|------------|
| 91-52915A6 | Power Trim Test Gauge Kit | | | | | X | X | X | X | X | X | X | X |
| 91-63209 | Torch Lamp | | | | X | X | X | X | X | X | X | X | |
| 91-74951 | Spanner Wrench | | | X | | X | X | X | X | X | X | X | |
| 91-821709T | Trim Cylinder End Cap Tool | | | X | | X | X | X | X | X | X | X | |
| 91-822778A1 | Adapter Fitting | | | X | | | X | X | | | | | |
| 91-822778A2 | Adapter Fitting | | | X | | | X | X | | | | | |
| 91-822778A 3 | Adapter Fitting | | | X | | | | X | X | X | X | X | |
| 91-875215 | Driveshaft Bushing Installer Tool | | | | | | | | | X | X | X | |
| 91-892647A01 | DMT 2004 Digital Multimeter | X | X | X | X | X | X | X | X | X | X | X | X |
| 91-99750A 1 | DVA/Multimeter Kit | | | X | | | X | X | X | X | X | | X |
| Snap-On CG41-11 | Expanding Rod | | | X | | X | X | X | X | X | X | X | |
| Snap-On CG41-14 | Collet | | | | | X | X | X | X | X | X | X | |
| Snap-On SRP-2 | Lock-Ring Pliers | | | X | | X | | | | | | | |
| Snap-On SRP-4 | Lock-Ring Pliers | | | | | | | X | X | X | X | X | X |

Mid-Section Tools

| | |
|---|--|
| Power Trim Test Gauge Kit | 91-52915A6 |
|  3753 | Tests circuit pressures for various trim pumps. |
| Torch Lamp | 91-63209 |
|  8776 | Heats surfaces to aid in the removal and installation of interference fit engine components. |
| Spanner Wrench | 91-74951 |
|  8775 | Removes and installs trim cylinder end caps. |
| Trim Cylinder End Cap Tool | 91-821709T |
|  10691 | Allows easy removal of the trim cylinder end caps. Required if tilt limit spacers are to be installed or if the trim in limit spacer is to be removed (to allow additional trim in range). |
| Adapter Fitting | 91-822778A 1 |
|  12203 | Measures the internal pressure in the up mode for a single cylinder trim system. |
| Adapter Fitting | 91-822778A 2 |
|  8637 | Install in place of the manual release valve to measure the internal pressure of the power trim pump in the up mode. |
| Adapter Fitting | 91-822778A 3 |
|  8861 | Install in place of the manual release valve to measure the internal pressure of the power trim pump in the down mode. |
| Driveshaft Bushing Installer Tool | 91-875215 |
|  12202 | Aids in the installation of driveshaft bushings. |

Section 2 - FourStroke Models

| | |
|--|--|
| DMT 2004 Digital Multimeter | 91-892647A01 |
|  4516 | Measures RPM on spark ignition (SI) engines, ohms, amperes, AC and DC voltages; records maximums and minimums simultaneously, and accurately reads in high RFI environments. |
| DVA/Multimeter Kit | 91-99750A 1 |
|  3460 | Tests the electrical and ignition systems; consists of a VOA meter with built-in direct voltage adapter. |
| Expanding Rod | Snap-On CG41-11 |
|  8753 | Aids in the removal of the spool from the power trim pump. |
| Collet | Snap-On CG41-14 |
|  8754 | Aids in the removal of the spool from the power trim pump. |
| Lock-Ring Pliers | Snap-On SRP2 |
|  8752 | Removes and installs external snap rings and piston rings. |
| Lock-Ring Pliers | Snap-On SRP-4 |
|  4799 | Aids in the removal of lock rings. |

Lower Unit

Gear Housing Tool Application Chart

| Part No. | Description | 4/5/6 | 8/9.9 9.9 Bigfoot | 9.9/15 | 25 Bigfoot | 25/30 EFI | 30/40 EFI | 40-60 EFI | 50/60 | 75/90 | 75/90 EFI | 115 EFI | 75-115 EFI 1.7 L | 225 EFI |
|----------|-------------|-------|-------------------------|--------|---------------|--------------|--------------|--------------|-------|-------|--------------|------------|------------------------|------------|
| 12-34961 | Washer | | | | X | | | X | X | X | | | | |

Section 2 - FourStroke Models

| Part No. | Description | 4/5/6 | 8/9.9 9.9 Bigfoot | 9.9/15 | 25 Bigfoot | 25/30 EFI | 30/40 EFI | 40-60 EFI | 50/60 | 75/90 | 75/90 EFI | 115 EFI | 75-115 EFI 1.7 L | 225 EFI |
|-------------|--------------------------------------|-------|-------------------------|--------|---------------|--------------|--------------|--------------|-------|-------|--------------|------------|------------------------|------------|
| 91-12349A05 | Pinion Gear Locating Tool | | | | | | X | X | X | X | X | X | X | |
| 91-13658T | Mandrel | | | X | | | | | | | | | | |
| 91-13945 | Bearing Installation Driver | | | | | | X | X | X | X | X | X | X | |
| 91-13949 | Oil Seal Driver | | | | X | | X | X | X | X | X | X | X | |
| 91-14308T02 | Bearing Race Driver | | | | X | | X | X | X | X | X | X | X | |
| 91-14309T02 | Bearing Installation Puller | | | | X | | X | X | X | X | X | X | X | |
| 91-14310T1 | Wear Sleeve Driver | | | | X | | X | X | X | X | X | X | X | |
| 91-14311A04 | Bearing Preload Tool | | | | X | | X | X | X | X | X | X | X | |
| 91-15755T | Needle Bearing Driver | | | | X | | X | X | X | X | X | X | X | |
| 91-19660-1 | Backlash Indicator | | | | X | | X | X | X | X | X | X | X | |
| 91-27780 | Puller | X | X | X | X | | X | X | X | | | | | |
| 91-29310 | Puller Plate | | | | | | | | | | | | | X |
| 91-31106T | Bearing Cup Driver | | | | X | | X | X | X | X | X | X | X | |
| 91-31108T | Oil Seal Driver | | | | X | X | X | X | X | X | X | X | X | |
| 91-31229A7 | Bearing Removal and Installation Kit | | X | X | X | | X | X | X | X | X | X | X | |
| 91-34569A1 | Slide Hammer | | X | X | X | X | X | X | X | X | X | X | X | X |
| 91-36569T | Driver Head | | | | X | | X | X | X | X | X | X | X | |
| 91-36571T | Pilot Washer | | X | X | X | | X | | | | | | | |
| 91-37241 | Universal Puller Plate | | X | X | X | X | X | X | X | X | X | X | X | X |
| 91-37312T | Driveshaft Bearing Driver Head | | | | X | | X | X | X | | | | | |
| 91-37323 | Driver Rod | | | | X | | X | X | X | X | X | X | X | X |
| 91-37350T | Pilot Mandrel | | | | X | | X | X | X | X | X | X | X | |

Section 2 - FourStroke Models

| Part No. | Description | 4/5/6 | 8/9.9 9.9 Bigfoot | 9.9/15 | 25 Bigfoot | 25/30 EFI | 30/40 EFI | 40-60 EFI | 50/60 | 75/90 | 75/90 EFI | 115 EFI | 75-115 EFI 1.7 L | 225 EFI |
|--------------|--|-------|-------------------------|--------|---------------|--------------|--------------|--------------|-------|-------|--------------|------------|------------------------|------------|
| 91-43506T | Driveshaft Bearing Retainer Wrench | | | | | | | X | X | | | | | |
| 91-46086A1 | Puller Jaws Assembly | | | | X | | X | X | X | X | X | X | X | X |
| 91-56775T | Driveshaft Holding Tool | | | | X | | X | X | X | | | | | |
| 91-58222A1 | Dial Indicator | | X | | X | X | X | X | X | X | X | X | X | X |
| 91-63209 | Torch Lamp | | X | | | X | | | | | | | | |
| 91-78473 | Backlash Indicator Rod | | | | X | | X | X | X | X | X | | | |
| 91-803133 12 | Backlash Indicator Arm | | X | | | X | | | | | | | | |
| 91-804762 | Driveshaft Holding Tool | | X | | | | | | | | | | | |
| 91-804776A1 | Driveshaft Holding Tool | | | | | | X | X | X | X | X | X | | |
| 91-817005 | Forward Gear Bearing Installer | | | | | | X | X | X | | | | | |
| 91-817006 | Water Pump Base Seal Installer | | | | | | X | X | X | | | | | |
| 91-817007T | Bearing Carrier Seal Installer | | | | X | | X | X | X | | | | | |
| 91-817008A2 | Pinion Gear Location Tool | | | | | | X | X | X | | | | | |
| 91-817009T | Forward Gear Bearing Race Driver Cup | | | | | | X | X | X | | | | | |
| 91-817011T | Needle Bearing Installer | | | | X | | X | X | X | | | | | |
| 91-817057A02 | Bearing Preload Tool Update Kit | | | | | | X | X | X | | | | | |
| 91-817058A1 | Lower Driveshaft Bearing Driver Assembly | | | | | | X | X | X | | | | | |
| 91-817070 | Driveshaft Holding Tool | | | | | | X | X | X | X | X | | | |

Section 2 - FourStroke Models

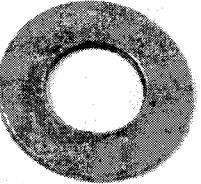
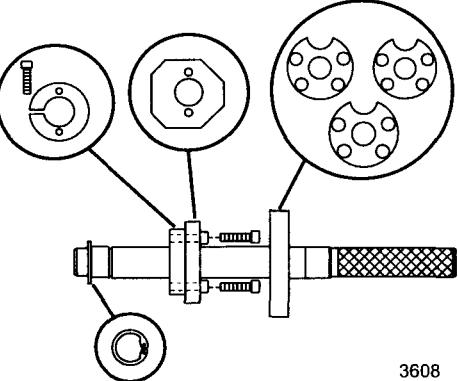
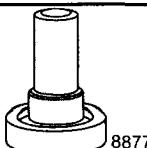
| Part No. | Description | 4/5/6 | 8/9.9 9.9 Bigfoot | 9.9/15 | 25 Bigfoot | 25/30 EFI | 30/40 EFI | 40-60 EFI | 50/60 | 75/90 | 75/90 EFI | 115 EFI | 75-115 EFI 1.7 L | 225 EFI |
|---------------------------------|---|-------|-------------------------|--------|---------------|--------------|--------------|--------------|-------|-------|--------------|------------|------------------------|------------|
| 91-824785T1 | Seal/ Bushing Installer | | X | | | | | | | | | | | |
| 91-825198 | Mandrel | | | | | | | | | | | | | X |
| 91-825200A1 | Spring Hook | | | | X | X | X | | | | | | | |
| 91-826872 | Driver | | | | X | | X | | | | | | | |
| 91-83155 | Dial Indicator Adapter | | X | | | X | X | X | X | X | X | X | X | X |
| 91-83164M | Flywheel Puller/Lifting Ring | | | | | | | | | | | | | X |
| 91-83165T | Bearing Puller Assembly | X | X | X | | X | X | X | X | X | X | X | X | |
| 91-83166M | Bearing Mandrel Kit | | X | | | X | | | | | | | | |
| 91-853996-6 | Spring Pin Removal Tool | | X | | | | | | | | | | | |
| 91-853996 8 | Spring Pin Driver | | X | | | | | | | | | | | |
| 91-853996 12 | Pinion Nut Tool | | | | | X | | | | | | | | |
| 91-853996 14 | Driveshaft Holding Tool | | | | | X | | | | | | | | |
| 91-856875A1 | Bearing Driver | | | | | | X | X | X | X | X | X | X | |
| 91-86642-1 | Slotted Cross Pin Tool | | | | | | | | | X | X | | | X |
| 91-875215A1 | Driveshaft Bushing Installation Tool | | | | | | | | | | | | | |
| 91-877321A1 | Bearing Driver | | | | | | X | X | X | X | X | X | | |
| 91-877840A1 | Driveshaft Holding Tool | | | | | | X | X | X | | | | | |
| 91-888870 (stamped 06605) | Driver Rod | | | | | | | | | | | | | X |
| 91-888875T | Pinion Height Gage | | | | | | | | | | | | | X |
| 91-888877 | Shift Rod | | | | | | | | | | | | | X |
| 91-888878 | Backlash Indicator Tool | | | | | | | | | | | | | X |

Section 2 - FourStroke Models

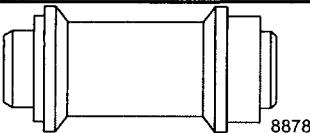
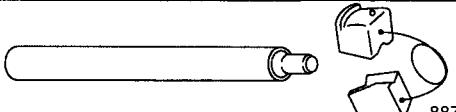
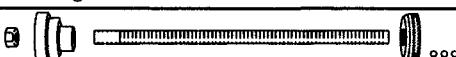
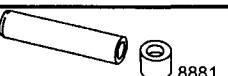
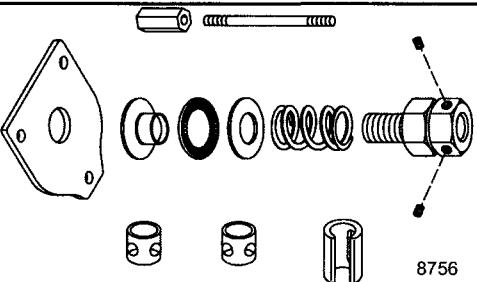
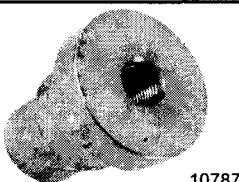
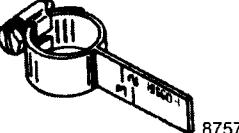
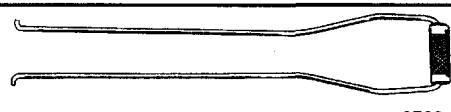
| Part No. | Description | 4/5/6 | 8/9.9 9.9 Bigfoot | 9.9/15 | 25 Bigfoot | 25/30 EFI | 30/40 EFI | 40-60 EFI | 50/60 | 75/90 | 75/90 EFI | 115 EFI | 75-115 EFI 1.7 L | 225 EFI |
|----------------------------------|-------------------------------|-------|-------------------------|--------|---------------|--------------|--------------|--------------|-------|-------|--------------|------------|------------------------|------------|
| 91-888879 (stamped 06514) | Propeller Shaft Adapter | | | | | | | | | | | | | X |
| 91-888880T (stamped 06578) | Spanner Wrench | | | | | | | | | | | | | X |
| 91-888881 (stamped 06653) | Mandrel | | | | | | | | | | | | | X |
| 91-888882 (stamped 06652) | Driver Rod | | | | | | | | | | | | | X |
| 91-888883 (stamped 06604) | Driver Rod with Stop | | | | | | | | | | | | | X |
| 91-888884 (stamped 06610) | Mandrel | | | | | | | | | | | | | X |
| 91-888885 (stamped 06603) | Bearing Depth Plate | | | | | | | | | | | | | X |
| 91-888886 (stamped 06656) | Mandrel | | | | | | | | | | | | | X |
| 91-888887 (stamped 06606) | Driver Rod | | | | | | | | | | | | | X |
| 91-888888 (stamped 06622) | Mandrel | | | | | | | | | | | | | X |
| 91-888889 | Driveshaft Holding Tool | | | | | | | | | | | | | X |
| 91-888890 (stamped 06636) | Mandrel | | | | | | | | | | | | | X |
| 91-888891 (stamped 06658) | Mandrel | | | | | | | | | | | | | X |
| 91-888892 (stamped 06628) | Mandrel | | | | | | | | | | | | | X |
| 91-888893 (stamped 06659) | Mandrel | | | | | | X | | | | | | | X |
| 91-888894 (stamped 06577) | Mandrel | | | | | | | | | | | | | X |
| 91-889586 (stamped 06701) | Shimming Plate | | | | | | | | | | | | | X |
| 91-889958T | Driveshaft Holding Tool | | | | | | | | | | | | X | |

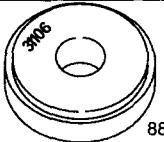
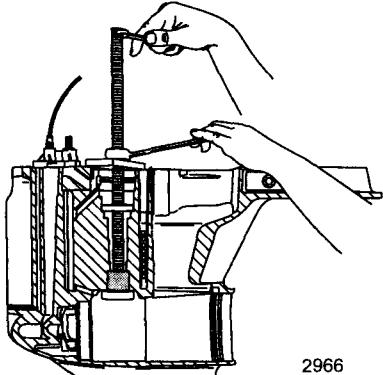
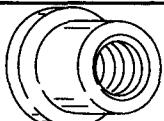
| Part No. | Description | 4/5/6 | 8/9.9 9.9 Bigfoot | 9.9/15 | 25 Bigfoot | 25/30 EFI | 30/40 EFI | 40-60 EFI | 50/60 | 75/90 | 75/90 EFI | 115 EFI | 75-115 EFI 1.7 L | 225 EFI |
|--------------------|---------------------------------|-------|-------------------------|--------|---------------|--------------|--------------|--------------|-------|-------|--------------|------------|------------------------|------------|
| 91-895195 | Pinion Bearing Tool | | X | | | | | | | | | | | |
| 91-895195001 | Bearing Installation Tool | | X | | | | X | | | | | | | |
| 91-895195004 | Backlash Preload Tool | | X | | | | X | | | | | | | |
| 91-895218 | Pinion Height Tool | | | | | | X | | | | | | | |
| FT8950 | Leakage Tester Kit | | | X | X | | | X | | | | | | X |
| Snap-On CG40-4 | Expanding Rod | | X | X | | | | | | | | | | |
| Snap-On CG40A-6 | Collet | | X | X | | | | | | | | | | |

Gear Housing Tools

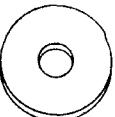
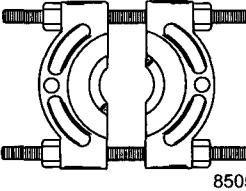
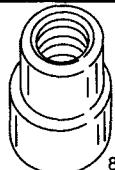
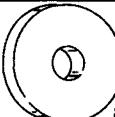
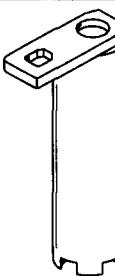
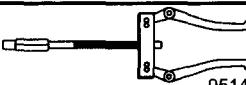
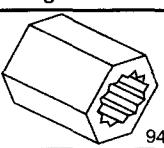
| | | |
|---|--|--|
| Washer | 12-34961 | |
|  10834 | Use on the threaded puller rod between the nut and plate when removing bearings. | |
| Pinion Gear Locating Tool | 91-12349A05 | |
|  3608 | Measures pinion gear height. | |
| Mandrel | 91-13658T | |
|  13513 | Aids in the installation of bushings, bearings and races into the gearcase. | |
| Bearing Installation Driver | 91-13945 | |
|  8877 | Installs reverse gear needle bearing into prop shaft carrier. | |

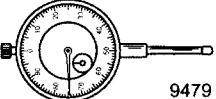
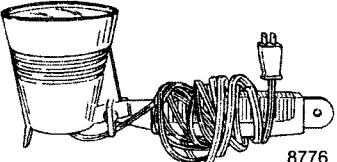
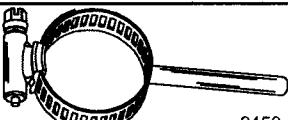
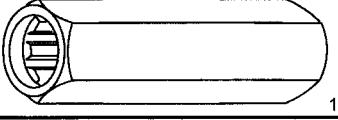
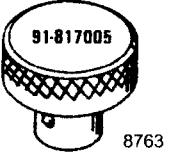
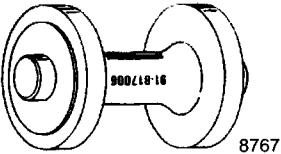
Section 2 - FourStroke Models

| | |
|---|--|
| Oil Seal Driver | 91-13949 |
|  8878 | Installs oil seals into water pump base. |
| Bearing Race Driver | 91-14308T02 |
|  8879 | Removes pinion bearing race. |
| Bearing Installation Puller | 91-14309T02 |
|  8880 | Installs pinion bearing into gearcase. |
| Wear Sleeve Driver | 91-14310T 1 |
|  8881 | Installs wear sleeve onto driveshaft. |
| Bearing Preload Tool | 91-14311A04 |
|  8756 | Simulates a load on the driveshaft for accurate pinion height and backlash measurements. |
| Needle Bearing Driver | 91-15755T |
|  10787 | Installs needle bearings into bearing carriers. |
| Backlash Indicator | 91-19660--1 |
|  8757 | Measures gear backlash. |
| Puller | 91-27780 |
|  8760 | Removes gears, bearings and races. |

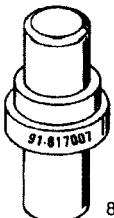
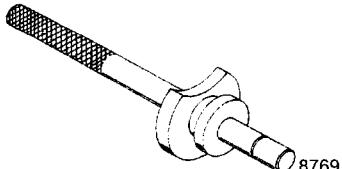
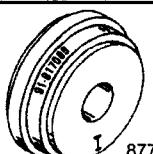
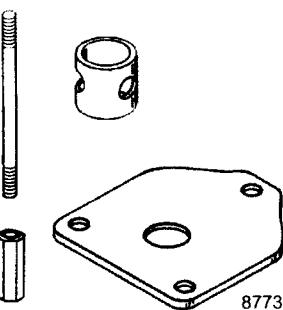
| | | |
|---|---------|---|
| Puller Plate | | 91-29310 |
|  | 18600 | Aids in the removal and installation of the gimbal bearing, as well as various bearings in the gear housing. Also included in the Bearing Removal and Installation Kit (91-31229A 7). |
| Bearing Cup Driver | | 91-31106T |
|  | 8882 | Installs the driven gear bearing cup. |
| Oil Seal Driver | | 91-31108T |
|  | 8883 | Installs bearing carrier oil seals. |
| Bearing Removal and Installation Kit | | 91-31229A7 |
|  | 2966 | <p>Installs and removes the bearings in all gearcases. 91-31229A7 tool assembly includes the following components:</p> <ul style="list-style-type: none"> 11-24156 Hex Nut 12-34961 Washer 91-15755T Bearing Carrier 91-29310 Plate 91-29610 Pilot Plate 91-30366T1 Mandrel 91-31229 Puller Shaft 91-32325T Driver Head 91-32336 Driver Needle Bearing 91-36379 Puller/Head Gear 91-36569T Driver Head 91-36571T Pilot Washer 91-37292 Roller Bearing 91-37311 Driver Head 91-37312 -Driver Head 91-37323 Driver Head Rod 91-37324 Pilot Washer 91-38628T Puller/Driver Head 91-52393 Driver Needle Bearing 91-52394 Head Pull Rod |
| Slide Hammer | | 91-34569A 1 |
|  | 6761 | Aids in the removal of various engine components. Use with puller jaws. |
| Driver Head | | 91-36569T |
|  | ob01634 | Used in pinion gear and bearing installation. |

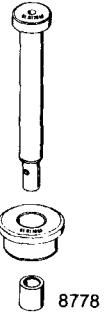
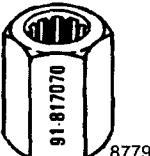
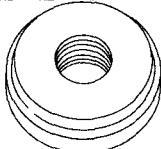
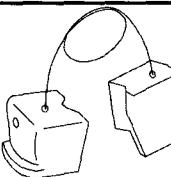
Section 2 - FourStroke Models

| | |
|--|--|
| Pilot Washer | 91-36571T |
|  ob01619 | Used in pinion gear and pinion bearing installation. |
| Universal Puller Plate | 91-37241 |
|  8505 | Removes bearings from gears and the driveshaft. |
| Driveshaft Bearing Driver Head | 91-37312T |
|  8762 | Removes bearings from gears and bearing carrier. |
| Driver Rod | 91-37323 |
|  25431 | Used in pinion gear and pinion bearing installation. |
| Pilot Mandrel | 91-37350T |
|  8884 | Presses on inner race of forward gear roller bearing. |
| Driveshaft Bearing Retainer Wrench | 91-43506T |
|  9520 | Removes and installs the threaded bearing retainer. |
| Puller Jaws Assembly | 91-46086A1 |
|  9514 | Removes bearing carrier and bearing races; use with Puller Bolt (91-85716). |
| Driveshaft Holding Tool | 91-56775T |
|  9448 | Provides a wrench surface to turn the driveshaft. Also used to hold driveshaft for pinion gear installation. |

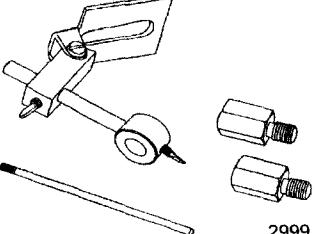
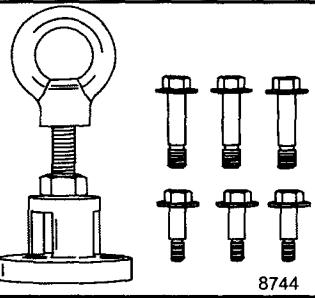
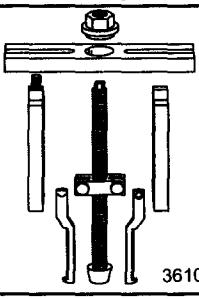
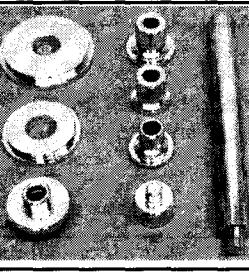
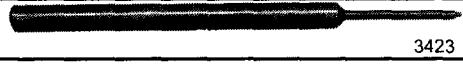
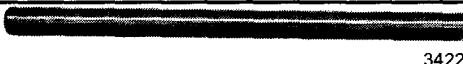
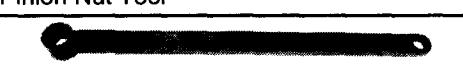
| | |
|---|--|
| Dial Indicator | 91-58222A1 |
|  | Used to obtain a variety of measurements including gear backlash, pinion gear location, and TDC. |
| Torch Lamp | 91-63209 |
|  | Heats surfaces to aid in the removal and installation of interference fit engine components. |
| Backlash Indicator Rod | 91-78473 |
|  | Aids in checking gear backlash. |
| Backlash Indicator Arm | 91-803133 12 |
|  | Aids in determining the forward gear backlash; use with a dial indicator. |
| Driveshaft Holding Tool | 91-804762 |
|  | Holds the driveshaft while removing or installing the pinion gear nut. |
| Driveshaft Holding Tool | 91-804776A1 |
|  | Holds driveshaft while removing or torquing the pinion nut. |
| Forward Gear Bearing Installer | 91-817005 |
|  | Aids in the installation of the forward gear needle bearing. |
| Water Pump Base Seal Installer | 91-817006 |
|  | Installs upper and lower water pump base seals. |

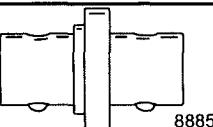
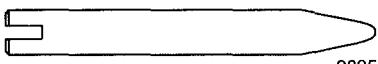
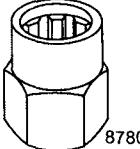
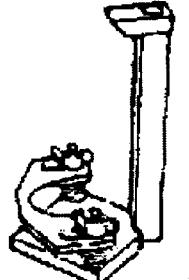
Section 2 - FourStroke Models

| | |
|--|--|
| Bearing Carrier Seal Installer | 91-817007T |
|  8768 | Installs upper and lower bearing carrier seals. |
| Pinion Gear Location Tool | 91-817008A 2 |
|  8769 | Checks gearcase pinion gear height. |
| Forward Gear Bearing Race Driver Cup | 91-817009T |
|  8771 | Aids in the installation of forward gear bearing race. |
| Needle Bearing Installer | 91-817011T |
|  8772 | Installs needle bearing in the bearing carrier. |
| Bearing Preload Tool Update Kit | 91-817057A02 |
|  8773 | Use to update Bearing Preload Tool (91-14311A1). |

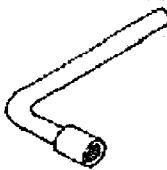
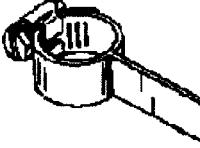
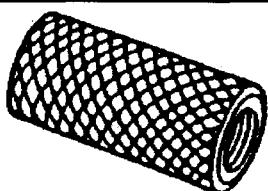
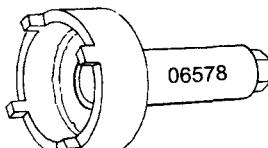
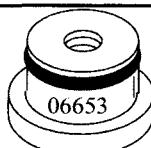
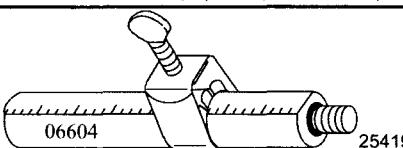
| | |
|---|---|
| Lower Driveshaft Bearing Driver Assembly | 91-817058A 1 |
|  | Removes and installs lower driveshaft bearing. |
| Driveshaft Holding Tool | 91-817070 |
|  | Holds driveshaft while removing pinion nut. |
| Seal/Bushing Installer | 91-824785T 1 |
|  | Aids in the installation of the bushing into the bearing carrier. |
| Mandrel | 91-825198 |
|  | Aids in the installation of the bearing carrier oil seals. |
| Spring Hook | 91-825200A 1 |
|  | Aids in the removal of the pinion bearing race from the gearcase; use with driver (91-13779). |
| Driver | 91-826872 |
|  | Aids in the installation of the propeller shaft needle bearing into the forward gear. |

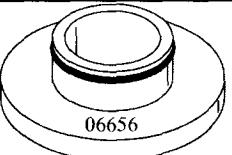
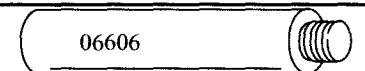
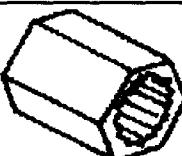
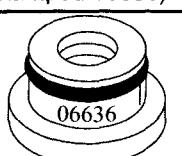
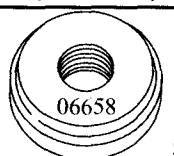
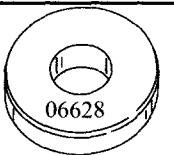
Section 2 - FourStroke Models

| | |
|---|---|
| Dial Indicator Adapter | 91-83155 |
|  2999 | Attaches the dial indicator to the gearcase when checking backlash. |
| Flywheel Puller/Lifting Ring | 91-83164M |
|  8744 | Removes flywheel from engine. Used for lifting powerhead/engine. |
| Bearing Puller Assembly | 91-83165T |
|  3610 | Removes bearings, races and bearing carriers |
| Bearing Mandrel Kit | 91-83166M |
|  3421 | Aids in the removal and installation of bearings and bearing races. |
| Spring Pin Removal Tool | 91-853996-6 |
|  3423 | Aids in the removal of the spring pins. |
| Spring Pin Driver | 91-853996 8 |
|  3422 | Aids in the installation of the shift cam spring pin. |
| Pinion Nut Tool | 91-853996 12 |
|  17189 | Removes the pinion nut; aids in the installation of the driveshaft bearing. |

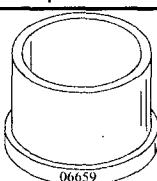
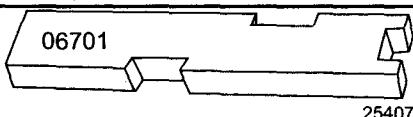
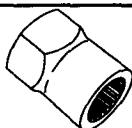
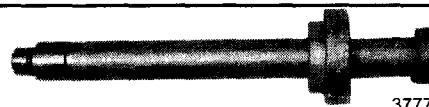
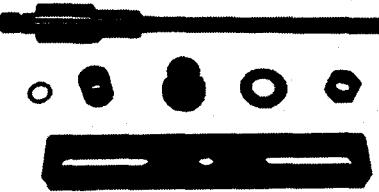
| | | |
|---|----------------|---|
| Driveshaft Holding Tool | | 91-853996 14 |
|  | 17174 | Holds the driveshaft while removing or installing the pinion gear nut. |
| Bearing Driver | | 91-856875A 1 |
|  | 8885 | Installs prop shaft needle bearing into 3 jaw or 6 jaw forward gear. |
| Slotted Cross Pin Tool | | 91-86642-1 |
|  | 9895 | Assists in clutch assembly/disassembly. |
| Driveshaft Bushing Installation Tool | | 91-875215A1 |
|  | 12359 | Installs the driveshaft bushing. |
| Bearing Driver | | 91-877321A 1 |
|  | 8886 | Installs prop shaft needle bearing into 6 jaw forward gear. |
| Driveshaft Holding Tool | | 91-877840A 1 |
|  | 8780 | Holds driveshaft while removing pinion nut. |
| Driver Rod (stamped 06605) | | 91-888870 |
|  | 06605 25409 | Aids in the removal and installation of bearings; used with various mandrels. |
| Pinion Height Gauge | | 91-888875T |
|  | 25410 | Measures the gear housing length when installing pinion gear shims. |

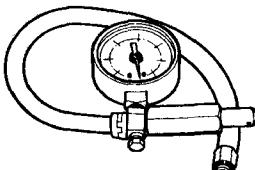
Section 2 - FourStroke Models

| | |
|--|---|
| Shift Rod | 91-888877 |
|  25411 | Aids in shifting the gearcase while performing various service procedures. |
| Backlash Indicator Tool | 91-888878 |
|  25408 | Aids in checking gear backlash. |
| Propeller Shaft Adapter (stamped 06514) | 91-888879 |
|  25441 | Attaches to the propeller shaft for use with a slide hammer. |
| Spanner Wrench (stamped 06578) | 91-888880T |
|  25443 | Removes and installs the bearing carrier retainer nut. |
| Mandrel (stamped 06653) | 91-888881 |
|  25414 | Aids in the removal of the bearing carrier oil seals. Also used to install bearings into the reverse gear assembly. |
| Driver Rod (stamped 06652) | 91-888882 |
|  25418 | Aids in the removal and installation of bearings; used with various mandrels. |
| Driver Rod with Stop (stamped 06604) | 91-888883 |
|  25419 | Aids in setting the bearing depth; used with a mandrel. |
| Mandrel (stamped 06610) | 91-888884 |
|  25420 | Aids in the removal and installation of various bearings and oil seals in the bearing carrier. |

| | |
|---|--|
| Bearing Depth Plate (stamped 06603) | 91-888885 |
|  | Shimming gauge for reverse gear assembly. |
| Mandrel (stamped 06656) | 91-888886 |
|  | Aids in the installation of the propeller shaft bearings into the bearing carrier. |
| Driver Rod (stamped 06606) | 91-888887 |
|  | Aids in the removal and installation of bearings; used with various mandrels. |
| Mandrel (stamped 06622) | 91-888888 |
|  | Aids in the installation of the reverse gear into the bearing carrier. |
| Driveshaft Holding Tool | 91-888889 |
|  | Provides a wrench surface to rotate the driveshaft. Also used to hold the driveshaft for pinion gear installation. |
| Mandrel (stamped 06636) | 91-888890 |
|  | Aids in the removal of the driveshaft needle bearings in the gearcase. |
| Mandrel (stamped 06658) | 91-888891 |
|  | Aids in the installation of the reverse gear bearing. |
| Mandrel (stamped 06628) | 91-888892 |
|  | Aids in the installation of bearings and oil seals into the bearing carrier and gearcase. |

Section 2 - FourStroke Models

| | | |
|---|-------|---|
| Mandrel (stamped 06659) | | 91-888893 |
|  | 25429 | Aids in the installation of the tapered roller bearing onto the forward gear. |
| Mandrel (stamped 06657) | | 91-888894 |
|  | 25444 | Aids in the removal and installation of various bearings and seals. |
| Shimming Plate (stamped 06701) | | 91-889586 |
|  | | Fixture used to shim the forward gear. |
| Driveshaft Holding Tool | | 91-889958T |
|  | | Holds driveshaft during pinion nut removal on the Verado models. |
| Pinion Bearing Tool | | 91-895195 |
|  | | Guides the removal and installation of the pinion bearing. |
| Bearing Installation Tool | | 91-895195001 |
|  | | Aids in the installation of bearings into the gearcase. |
| Backlash Preload Tool | | 91-895195004 |
|  | | Prevents forward gear movement when checking the forward gear backlash. |
| Pinion Height Tool | | 91-895218 |
|  | | Aids in determining the pinion gear height. |

| | |
|--|---|
| Leakage Tester Kit | FT8950 |
|  ob01632 | Checks gear housing for leakage prior to filling with gear lubricant. Also used to pressurize the oil injection system. |
| Expanding Rod | Snap-On CG40-4 |
|  12538 | Aids in the removal of gears and bearings; use with collet. |
| Collet | Snap-On CG40A-6 |
|  12534 | Aids in the removal of gears or bearings; use with expanding rod. |

Notes:

Section 3 - OptiMax Models

Table of Contents

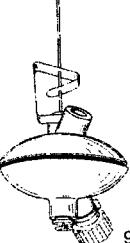
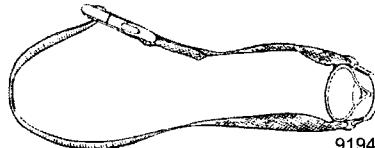
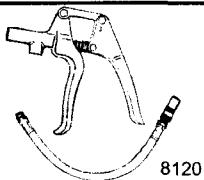
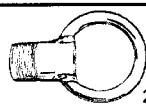
| | | | |
|---|----|--|----|
| Installation and Maintenance..... | 76 | Powerhead..... | 82 |
| Maintenance Tool Application Chart..... | 76 | Powerhead Tool Application Chart..... | 82 |
| Maintenance Tools..... | 76 | Powerhead Tools..... | 83 |
| Electrical and Ignition..... | 77 | Mid-Section..... | 85 |
| Electrical Tool Application Chart..... | 77 | Mid-Section Tool Application Chart..... | 85 |
| Electrical Tools..... | 77 | Mid-Section Tools..... | 86 |
| Fuel System..... | 79 | Lower Unit..... | 87 |
| Fuel System Tool Application Chart..... | 79 | Gear Housing Tool Application Chart..... | 87 |
| Fuel System Tools..... | 80 | Gear Housing Tools..... | 90 |

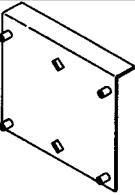
Installation and Maintenance

Maintenance Tool Application Chart

| Part No. | Description | 75/90/115 OptiMax DFI | 115/135/150/175 OptiMax DFI | 200 OptiMax Jet Drive | 200/225 OptiMax DFI | 225/250 Pro XS OptiMax |
|------------|--|--------------------------|--------------------------------|--------------------------|------------------------|---------------------------|
| 44357Q2 | Flushing Device | X | X | | X | X |
| 881150K1 | Dual Water Pick-Up Flush Gearcase Seal Kit | | | | X | X |
| 91-37299Q2 | Grease Gun | X | X | X | X | X |
| 91-90455-1 | Lifting Eye | X | | | X | X |
| 91-98234A2 | Transom Drilling Fixture | | X | | | X |

Maintenance Tools

| | |
|--|--|
| Flushing Device | 44357Q 2 |
|  9192 | Attaches to the water intakes; provides a fresh water connection when flushing the cooling system or operating the engine. |
| Dual Water Pick-up Flush Gearcase Seal Kit | 881150K 1 |
|  9194 | Blocks off the front water inlet holes on the dual water inlet gearcases. |
| Grease Gun | 91-37299Q 2 |
|  8120 | Aids in the lubrication of key areas on the engine. Allows easy access to grease fittings. |
| Lifting Eye | 91-90455--1 |
|  2756 | Threads into the flywheel to remove the powerhead assembly from the driveshaft housing, or to lift entire engine for removal/installation. |

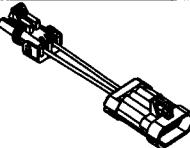
| | |
|--|--|
| Transom Drilling Fixture | 91-98234A2 |
|  5489 | Aids in engine installation by acting as a template for engine mounting holes. |

Electrical and Ignition

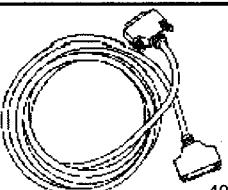
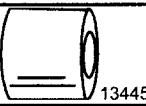
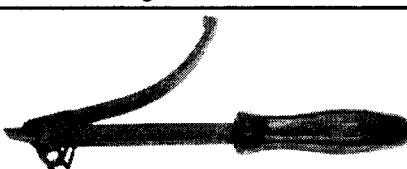
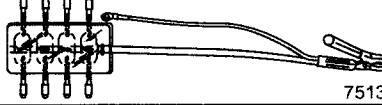
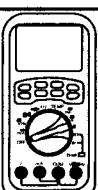
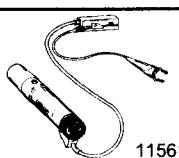
Electrical Tool Application Chart

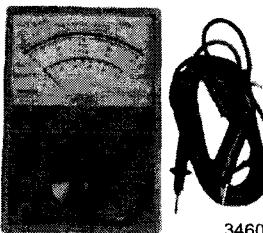
| Part No. | Description | 75/90/115 OptiMax DFI | 115/135/150/175 OptiMax DFI | 200 OptiMax Jet Drive | 200/225 OptiMax DFI | 225/250 Pro XS OptiMax |
|-------------------|--|--------------------------|--------------------------------|--------------------------|------------------------|---------------------------|
| 84-822560A5 | Adapter Harness | X | X | X | X | X |
| 84-822560T12 | 2 to 4 Pin Harness Adapter | X | X | | X | X |
| 84-825003A1 | Extension Cable | X | X | X | X | X |
| 91-24161 | Protector Cap | X | X | X | X | |
| 91-52344 | Flywheel Holding Tool | X | X | X | X | X |
| 91-802650 1 | Clamp-on Current Probe | X | X | X | X | X |
| 91-849154T1 | Flywheel Puller | X | X | X | X | X |
| 91-850439T1 | Spark Gap Tester | X | X | X | X | |
| 91-892647A01 | DMT 2004 Digital Multimeter | X | X | X | X | X |
| 91-99379 | Timing Light | X | X | X | X | |
| 91-99750A1 | DVA/Multimeter Kit | X | X | X | X | |
| Order Through SPX | Computer Diagnostic System (CDS) | X | X | X | X | X |

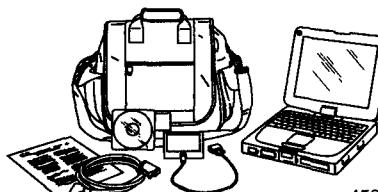
Electrical Tools

| | |
|--|---|
| Adapter Harness | 84-822560A5 |
|  4009 | Data link harness between engine and Computer Diagnostic System (CDS) or Digital Diagnostic Terminal (DDT) on engines with a 2 pin diagnostic connection. |
| 2 to 4 Pin Harness Adapter | 84-822560T12 |
|  4679 | Adapts the 2 pin Digital Diagnostic Terminal harness to the 4 pin connector on the engine. |

Section 3 - OptiMax Models

| | |
|--|--|
| Extension Cable | 84-825003A1 |
|  4012 | Data link extension harness (3.05 m[10 ft.]) between adapter harness and Digital Diagnostic Terminal |
| Protector Cap | 91-24161 |
|  13445 | Protects the crankshaft when removing the flywheel; use with flywheel puller (91-849154T 1) |
| Flywheel Holding Tool | 91-52344 |
|  4738 | Holds and/or turns the flywheel while making engine repairs, also used to torque the flywheel or the engine coupler. |
| Clamp-on Current Probe | 91-802650-1 |
|  4006 | Measures the current output of battery charging systems or current draw of electric motors. |
| Flywheel Puller | 91-849154T 1 |
|  7617 | Removes the flywheel from the crankshaft. |
| Spark Gap Tester | 91-850439T 1 |
|  7513 | Provides a visual indication of spark/coil efficiency. |
| DMT 2004 Digital Multimeter | 91-892647A01 |
|  4516 | Measures RPM on spark ignition (SI) engines, ohms, amperes, AC and DC voltages; records maximums and minimums simultaneously, and accurately reads in high RFI environments. |
| Timing Light | 91-99379 |
|  11561 | Allows a technician to check ignition timing. |

| | | |
|--------------------|---|--|
| DVA/Multimeter Kit |  3460 | 91-99750A 1 |
| | | Tests the electrical and ignition systems; consists of a VOA meter with built-in direct voltage adapter. |

| Computer Diagnostic System (CDS) | Order through SPX | |
|---|---|--|
|  4520 | Monitors all electrical systems for proper function, diagnostics, and calibration purposes. For additional information, pricing, or to order the Computer Diagnostic System contact: SPX Corporation 28635 Mound Rd. Warren, MI 48092 or call: USA - 1-800-345-2233 Canada - 800-345-2233 Europe - 49 6182 959 149 Australia - (03) 9544-6222 | |

Fuel System

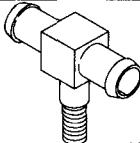
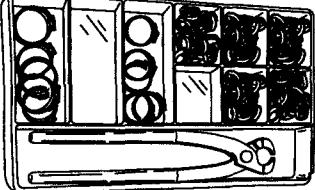
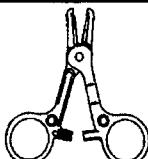
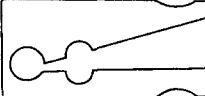
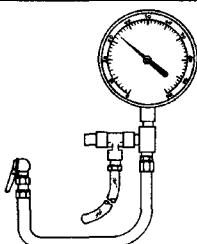
Fuel System Tool Application Chart

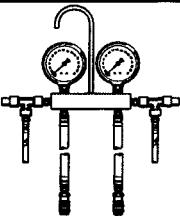
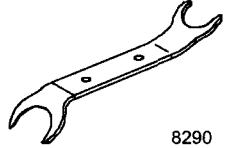
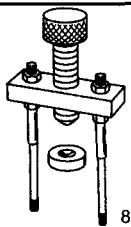
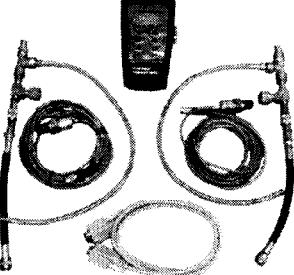
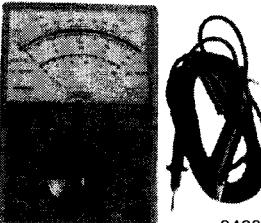
| Part No. | Description | 75/90/115 OptiMax DFI | 115/135/150/175 OptiMax DFI | 200 OptiMax Jet Drive | 200/225 OptiMax DFI | 225/250 Pro XS OptiMax |
|--------------|------------------------------------|--------------------------|--------------------------------|--------------------------|------------------------|---------------------------|
| 22-849606 | Schrader Valve Tree | X | X | X | X | X |
| 91-803146A04 | Hose Clamp Tool Kit | X | X | X | X | X |
| 91-804063 | Tubing Clamp | X | X | X | X | X |
| 91-851980-2 | Seal/Teflon Ring Sizing Tool | X | X | X | X | X |
| 91-851980-3 | Seal/Teflon Ring Installation Tool | X | X | X | X | X |
| 91-881833A03 | Fuel Pressure Gauge Kit | X | X | X | X | |
| 91-881834A1 | Duel Fuel/Air Pressure Gauge Kit | X | X | X | X | X |
| 91-883521 | Direct Injector Removal Tool | X | X | X | X | X |
| 91-889431 | Air Regulator Installation Tool | X | | X | X | X |
| 91-892647A01 | DMT 2004 Digital Multimeter | X | X | X | X | X |
| 91-892651A01 | Digital Pressure Meter | X | X | X | X | X |
| 91-99750A1 | DVA/Multimeter Kit | X | X | X | X | |

Section 3 - OptiMax Models

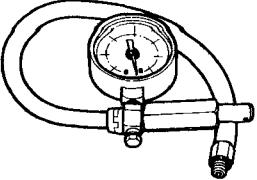
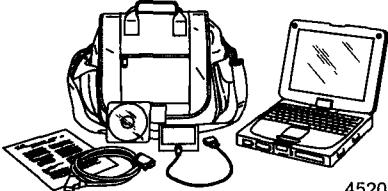
| Part No. | Description | 75/90/115 OptiMax DFI | 115/135/150/175 OptiMax DFI | 200 OptiMax Jet Drive | 200/225 OptiMax DFI | 225/250 Pro XS OptiMax |
|-------------------|--|--------------------------|--------------------------------|--------------------------|------------------------|---------------------------|
| FT8950 | Leakage Tester Kit | X | X | X | X | X |
| Order through SPX | Computer Diagnostic System (CDS) | X | X | X | X | X |

Fuel System Tools

| | | |
|---|---|--|
| Schrader Valve Tee | 22-849606 | |
|  13678 | Aids in checking fuel pressure when using a fuel pressure gauge with a screw on schrader valve connector. | |
| Hose Clamp Tool Kit | 91-803146A04 | |
|  5819 | Aids in the installation of high pressure (Oetiker ®) hose clamps. | |
| Tubing Clamp | 91-804063 | |
|  13688 | Compresses a fuel or vacuum hose for troubleshooting the fuel system or synchronizing a multiple carburetor engine. | |
| Seal/Teflon Ring Sizing Tool | 91-851980--2 | |
|  8286 | Compresses the Teflon seal on direct injectors after seal installation. | |
| Seal/Teflon Ring Installation Tool | 91-851980--3 | |
|  8285 | Aids in the installation of Teflon seals on direct injectors. | |
| Fuel Pressure Gauge Kit | 91-881833A03 | |
|  rms32 | Tests the fuel pump pressure; can be used to relieve fuel pressure. | |

| | |
|--|--|
| Dual Fuel/Air Pressure Gauge Kit | 91-881834A 1 |
|  5822 | Tests fuel and air pressure; the dual gauges allow the viewing of both pressures simultaneously. |
| Direct Injector Removal Tool | 91-883521 |
|  8290 | Aids in the removal of direct injectors from the fuel rail. |
| Air Regulator Installation Tool | 91-889431 |
|  8291 | Compresses the air regulator spring to allow installation of assembly screws. |
| DMT 2004 Digital Multimeter | 91-892647A01 |
|  4516 | Measures RPM on spark ignition (SI) engines, ohms, amperes, AC and DC voltages; records maximums and minimums simultaneously, and accurately reads in high RFI environments. |
| Digital Pressure Meter | 91-892651A01 |
|  5786 | Connects to the fuel system/manifold and can be used in conjunction with Computer Diagnostic System (CDS). |
| DVA/Multimeter Kit | 91-99750A 1 |
|  3460 | Tests the electrical and ignition systems; consists of a VOA meter with built-in direct voltage adapter. |

Section 3 - OptiMax Models

| | |
|--|---|
| Leakage Tester Kit | FT8950 |
|  ob01632 | Checks gear housing for leakage prior to filling with gear lubricant. Also used to pressurize the oil injection system. |
| Computer Diagnostic System (CDS) | Order through SPX |
|  4520 | Monitors all electrical systems for proper function, diagnostics, and calibration purposes. For additional information, pricing, or to order the Computer Diagnostic System contact: SPX Corporation 28635 Mound Rd. Warren, MI 48092 or call: USA - 1-800-345-2233 Canada - 800-345-2233 Europe - 49 6182 959 149 Australia - (03) 9544-6222 |

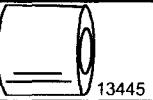
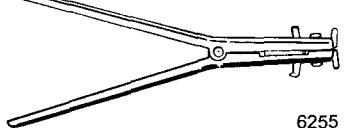
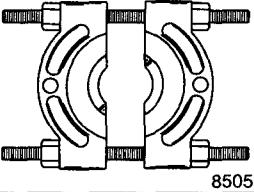
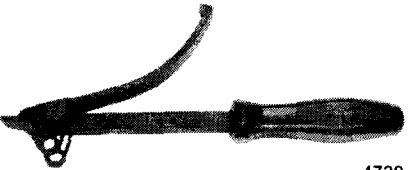
Powerhead

Powerhead Tool Application Chart

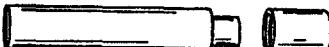
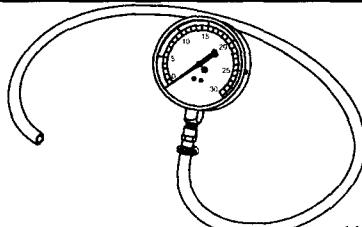
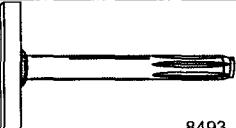
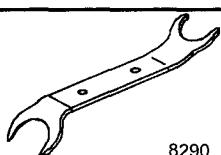
| Part No. | Description | 75/90/115 OptiMax DFI | 115/135/150/175 OptiMax DFI | 200 OptiMax Jet Drive | 200/225 OptiMax DFI | 225/250 Pro XS OptiMax |
|-------------|---------------------------------|--------------------------|--------------------------------|--------------------------|------------------------|---------------------------|
| 91-24161 | Protector Cap | | | | X | |
| 91-24697 | Piston Ring Expander | X | X | X | X | X |
| 91-30591T1 | Powerhead Stand | | X | X | X | X |
| 91-37241 | Universal Puller Plate | X | X | X | X | X |
| 91-52024A1 | Remote Starter Switch | X | X | X | X | X |
| 91-52344 | Flywheel Holding Tool | X | X | X | X | X |
| 91-52952T1 | Lockring Removal Tool | X | X | X | X | X |
| 91-74607A3 | Piston Pin Tool | | X | X | | |
| 91-77109A3 | Lockring Installation Tool | | X | X | | |
| 91-79250A2 | Water Pressure Gauge | X | X | X | X | X |
| 91-812549T | Powerhead Stand | X | | | | |
| 91-818773T | Piston Ring Compressor | | X | X | | |
| 91-823237T | Piston Ring Compressor | X | | | X | X |
| 91-849154T1 | Flywheel Puller | X | X | X | X | X |
| 91-883521 | Direct Injector Removal Tool | X | | | | |
| 91-90455-1 | Lifting Eye | X | X | X | X | X |

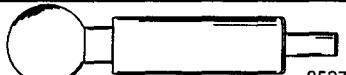
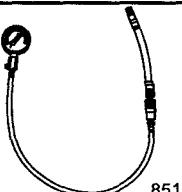
| Part No. | Description | 75/90/115 OptiMax DFI | 115/135/150/175 OptiMax DFI | 200 OptiMax Jet Drive | 200/225 OptiMax DFI | 225/250 Pro XS OptiMax |
|---------------------|------------------------------------|--------------------------|--------------------------------|--------------------------|------------------------|---------------------------|
| 91-92973A1 | Piston Pin Tool | X | X | | X | X |
| 91-93004A2 | Lockring Installation Tool | X | | | X | X |
| Snap-On EEPV303B | Compression Tester with Adapter | X | | | X | X |

Powerhead Tools

| | | |
|---|--|--|
| Protector Cap | 91-24161 | |
|  13445 | Protects the crankshaft when removing the flywheel; use with flywheel puller (91-849154T 1) | |
| Piston Ring Expander | 91-24697 | |
|  6255 | Expands piston rings for removal and installation. | |
| Powerhead Stand | 91-30591T 1 | |
|  8493 | Used to secure and rotate the powerhead during disassembly and assembly. | |
| Universal Puller Plate | 91-37241 | |
|  8505 | Removes bearings from gears and the driveshaft. | |
| Remote Starter Switch | 91-52024A1 | |
|  10882 | Provides a remote starter button to crank the engine when performing service procedures. | |
| Flywheel Holding Tool | 91-52344 | |
|  4738 | Holds and/or turns the flywheel while making engine repairs, also used to torque the flywheel or the engine coupler. | |
| Lockring Removal Tool | 91-52952T 1 | |
|  8500 | Removes the lockrings securing the piston wrist pin. | |

Section 3 - OptiMax Models

| | |
|--|---|
| Piston Pin Tool | 91-74607A3 |
|  20637 | Aids in the removal and installation of the piston wrist pin. |
| Lockring Installation Tool | 91-77109A3 |
|  8527 | Installs the lockrings to secure the piston wrist pin in piston. |
| Water Pressure Gauge | 91-79250A 2 |
|  11598 | Aids in checking the engine water pressure. |
| Powerhead Stand | 91-812549T |
|  8493 | Used to secure and rotate the powerhead during disassembly and assembly. |
| Piston Ring Compressor | 91-818773T |
|  4739 | Compresses piston rings into piston ring grooves to ease piston rod assembly into cylinder block. |
| Piston Ring Compressor | 91-823237T |
|  4739 | Compresses piston rings into piston ring grooves to ease piston rod assembly into cylinder block. |
| Flywheel Puller | 91-849154T 1 |
|  7617 | Removes the flywheel from the crankshaft. |
| Direct Injector Removal Tool | 91-883521 |
|  8290 | Aids in the removal of direct injectors from the fuel rail. |

| | | |
|---------------------------------|---|--|
| Lifting Eye |  | 91-90455--1 |
| Piston Pin Tool |  | Threads into the flywheel to remove the powerhead assembly from the driveshaft housing, or to lift entire engine for removal/installation. |
| Lockring Installation Tool |  | 91-92973A 1 |
| Compression Tester with Adapter |  | Aids in the removal and installation of the piston pins. |
| | | 91-93004A 2 |
| | | Installs the lockrings to secure the piston wrist pin in piston. |
| | | Snap-On EEPV303B |
| | | Checks cylinder compression. Use with M14 x 1.25 adapter. |

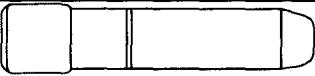
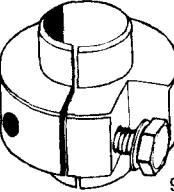
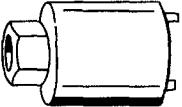
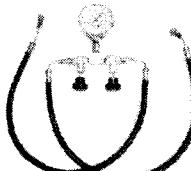
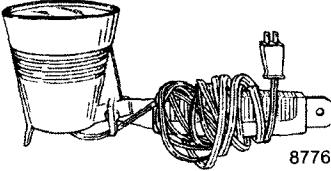
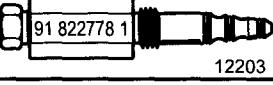
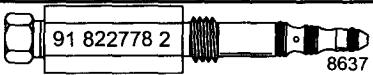
Mid-Section

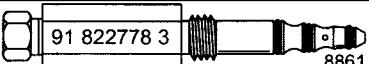
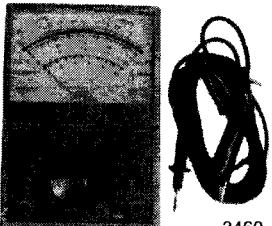
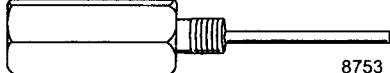
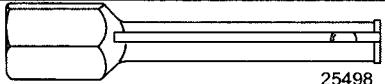
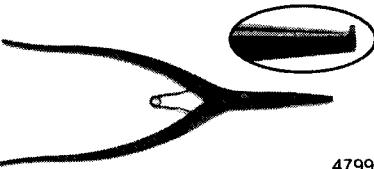
Mid-Section Tool Application Chart

| Part No. | Description | 75/90/115 OptiMax DFI | 115/135/150/175 OptiMax DFI | 200/225 OptiMax DFI | 225/250 Pro XS OptiMax |
|-----------------|-----------------------------------|-----------------------|-----------------------------|---------------------|------------------------|
| 91-11230-1 | Alignment Tool | | X | X | X |
| 91-44486A1 | Trim Rod Removal Tool | | X | X | X |
| 91-44487T1 | Trim Rod Guide Removal Tool | | X | X | X |
| 91-52915A6 | Power Trim Test Gauge Kit | X | X | X | X |
| 91-63209 | Torch Lamp | X | X | X | X |
| 91-74951 | Spanner Wrench | X | X | X | X |
| 91-822778A1 | Adapter Fitting | X | | | |
| 91-822778A2 | Adapter Fitting | | X | X | X |
| 91-822778A3 | Adapter Fitting | X | X | X | X |
| 91-875215 | Driveshaft Bushing Installer Tool | X | | | |
| 91-892647A01 | DMT 2004 Digital Multimeter | | | | X |
| 91-99750A1 | DVA/Multimeter Tester | X | X | X | |
| Snap-On CG41-11 | Expanding Rod | X | | | |
| Snap-On CG41-12 | Collet | X | | | |
| Snap-On SRP-4 | Lock Ring Pliers | X | X | X | |

Section 3 - OptiMax Models

Mid-Section Tools

| | |
|---|--|
| Alignment Tool | 91-11230-1 |
|  9078 | Aligns the tilt ram with housing to aid installation of the pivot pin. |
| Trim Rod Removal Tool | 91-44486A 1 |
|  9089 | Aids in the removal of the trim rod from the trim cylinders. |
| Trim Rod Guide Removal Tool | 91-44487T 1 |
|  9086 | Aids in the removal of the trim rod from the trim cylinders. |
| Power Trim Test Gauge Kit | 91-52915A6 |
|  3753 | Tests circuit pressures for various trim pumps. |
| Torch Lamp | 91-63209 |
|  8776 | Heats surfaces to aid in the removal and installation of interference fit engine components. |
| Spanner Wrench | 91-74951 |
|  8775 | Removes and installs trim cylinder end caps. |
| Adapter Fitting | 91-822778A 1 |
|  12203 | Measures the internal pressure in the up mode for a single cylinder trim system. |
| Adapter Fitting | 91-822778A 2 |
|  8637 | Install in place of the manual release valve to measure the internal pressure of the power trim pump in the up mode. |

| | | |
|---|--|--|
| Adapter Fitting | 91-822778A 3 | |
|  91 822778 3 8861 | Install in place of the manual release valve to measure the internal pressure of the power trim pump in the down mode. | |
| Driveshaft Bushing Installer Tool | 91-875215 | |
|  12202 | Aids in the installation of driveshaft bushings. | |
| DMT 2004 Digital Multimeter | 91-892647A01 | |
|  4516 | Measures RPM on spark ignition (SI) engines, ohms, amperes, AC and DC voltages; records maximums and minimums simultaneously, and accurately reads in high RFI environments. | |
| DVA/Multimeter Kit | 91-99750A 1 | |
|  3460 | Tests the electrical and ignition systems; consists of a VOA meter with built-in direct voltage adapter. | |
| Expanding Rod | Snap-On CG41-11 | |
|  8753 | Aids in the removal of the spool from the power trim pump. | |
| Collet | Snap-On CG41-12 | |
|  25498 | Aids in the removal of internal components in the power trim valve; use with an expanding rod. | |
| Lock-Ring Pliers | Snap-On SRP-4 | |
|  4799 | Aids in the removal of lock rings. | |

Lower Unit

Gear Housing Tool Application Chart

| Part Number | Description | 75/90/115 OptiMax | 115/135/150/175 OptiMax | 200 OptiMax Jet Drive | 200/225 OptiMax | 225/250 Pro XS OptiMax |
|-------------|-------------------|----------------------|----------------------------|--------------------------|--------------------|---------------------------|
| 12-34961 | Washer | | | | | X |
| 12-37429 | Load Washer | | X | | X | |
| 12-54048 | Belleville Washer | | | | X | |

Section 3 - OptiMax Models

| Part Number | Description | 75/90/115 OptiMax | 115/135/150/175 OptiMax | 200 OptiMax Jet Drive | 200/225 OptiMax | 225/250 Pro XS OptiMax |
|-------------|---------------------------------------|----------------------|----------------------------|--------------------------|--------------------|---------------------------|
| 44-93003 | Propeller Shaft Tool | | X | | X | |
| 91-12349A05 | Pinion Gear Locating Tool | X | X | | X | X |
| 91-13945 | Bearing Installation Driver | X | | | | |
| 91-13949 | Oil Seal Driver | X | | | | |
| 91-14308T02 | Bearing Race Driver | X | | | | |
| 91-14309T02 | Bearing Installation Puller | X | | | | |
| 91-14310T1 | Wear Sleeve Driver | X | | | | |
| 91-14311A04 | Bearing Preload Tool | X | X | | X | X |
| 91-15755T | Needle Bearing Driver | X | X | | X | |
| 91-18605A2 | Bearing Cup/Adapter Installation Tool | | X | | X | X |
| 91-19660-1 | Backlash Indicator | X | | | | |
| 91-31106T | Bearing Cup Driver | X | X | | X | |
| 91-31107T | Shift Shaft Bushing Tool | | X | | | |
| 91-31108T | Oil Seal Driver | X | X | | X | |
| 91-31229A7 | Bearing Removal and Installation Kit | X | X | | X | X |
| 91-33491 | Needle Bearing Driver | | | | | X |
| 91-34569A1 | Slide Hammer | X | X | X | X | X |
| 91-36569T | Driver Head | X | | | X | X |
| 91-36571T | Pilot Washer | | X | | X | X |
| 91-37241 | Universal Puller Plate | X | X | | X | X |
| 91-37323 | Driver Rod | X | X | | X | X |
| 91-37350T | Pilot Mandrel | X | | | | |
| 91-38628T | Puller/Driver Head | | X | | X | X |
| 91-43506T | Driveshaft Bearing Retainer Wrench | | X | | X | X |
| 91-46086A1 | Puller Jaws Assembly | X | X | | X | X |
| 91-53459 | Backlash Indicator Rod | | | X | X | X |
| 91-56775T | Driveshaft Holding Tool | X | | | X | X |
| 91-58222A1 | Dial Indicator | X | X | X | X | X |
| 91-61067A04 | Pinion Nut Wrench | | | | X | X |

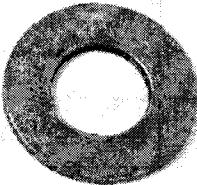
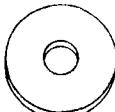
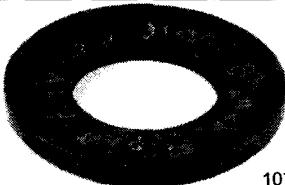
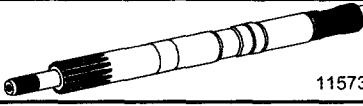
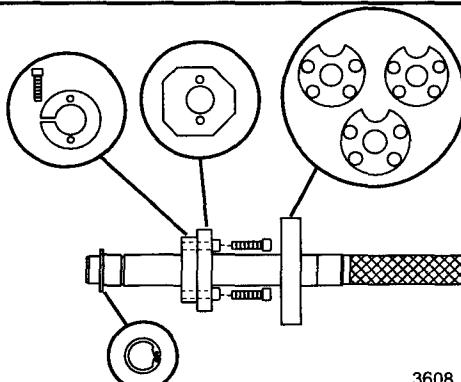
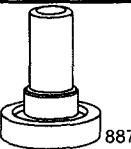
Section 3 - OptiMax Models

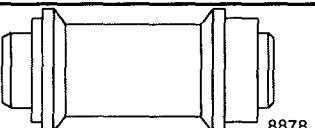
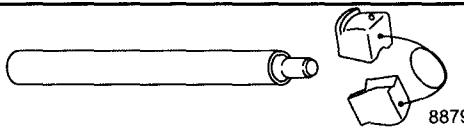
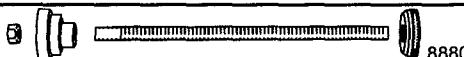
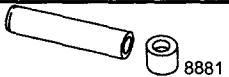
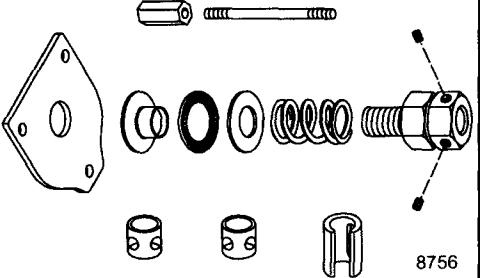
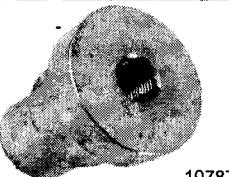
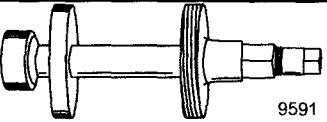
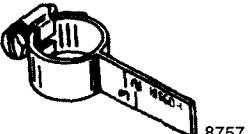
| Part Number | Description | 75/90/115 OptiMax | 115/135/150/175 OptiMax | 200 OptiMax Jet Drive | 200/225 OptiMax | 225/250 Pro XS OptiMax |
|-------------|--|----------------------|----------------------------|--------------------------|--------------------|---------------------------|
| 91-61069T | Bearing Carrier Retainer Nut Wrench | | X | | X | |
| 91-61077T | Propeller Shaft/ Driveshaft Adapter | | | | X | |
| 91-66274 | Torque Wrench,lb.in | | | | X | |
| 91-74776T | Pinion Height Tool | | X | | | |
| 91-78473 | Backlash Indicator Rod | X | X | | X | |
| 91-809957A1 | Jet Pump Tool Kit | | | X | | |
| 91-815850 | Forward Gear Assembly Tube | | X | | X | |
| 91-816242 | Puller Jaws | | | | X | |
| 91-816243 | Guide Plate | | | | X | |
| 91-816244 | Reverse Gear Needle Bearing Driver | | | | X | |
| 91-816245 | Needle Bearing Removal Tool | | | | X | |
| 91-816292 | Needle Bearing Driver | | | | | X |
| 91-817569T | Carrier Seal Driver | | | | X | X |
| 91-821571A1 | Water Pump Alignment Pins | | | | X | X |
| 91-83155 | Dial Indicator Adapter | X | | X | X | X |
| 91-83165T | Bearing Puller Assembly | | | X | | |
| 91-840388 | Bearing Carrier Installation Tool | | | | | X |
| 91-840393 | Bearing Carrier Retainer Nut Wrench | | | | | X |
| 91-856875A1 | Bearing Driver | X | | | | |
| 91-86642 | Cross Pin Tool | | X | | | |
| 91-86642-2 | Cross Pin (T-Handle) Installation Tool | | | | | X |
| 91-86943T | Guide Plate | | X | | X | |
| 91-87120T | Bearing Cup Driver | | | | | X |
| 91-877321A1 | Bearing Driver | X | | | X | |
| 91-89897 | Dial Indicator Holding Tool | | X | | X | |
| 91-90094 | Driveshaft Holding Tool | | X | | | |
| 91-92788T | Pinion Bearing Driver | | X | | X | |

Section 3 - OptiMax Models

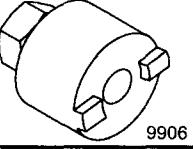
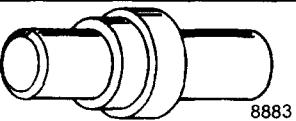
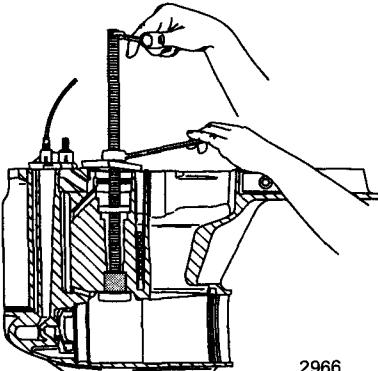
| Part Number | Description | 75/90/115 OptiMax | 115/135/150/175 OptiMax | 200 OptiMax Jet Drive | 200/225 OptiMax | 225/250 Pro XS OptiMax |
|-------------|--------------------|----------------------|----------------------------|--------------------------|--------------------|---------------------------|
| FT8950 | Leakage Tester Kit | | | | X | X |

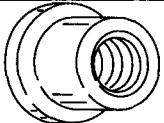
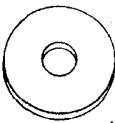
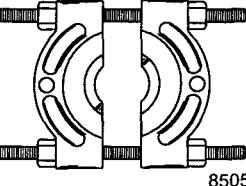
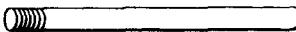
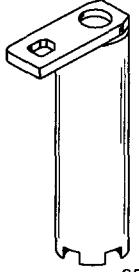
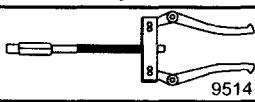
Gear Housing Tools

| | |
|---|---|
| Washer | 12-34961 |
|  10834 | Use on the threaded puller rod between the nut and plate when removing bearings. |
| Load Washer | 12-37429 |
|  ob01619 | Creates a load on the forward gear when taking forward gear backlash measurements for counter rotation gearcases. |
| Belleville Washer | 12-54048 |
|  10772 | Use with the Pinion Nut Adaptor (91-61067A3) and a propeller nut to check the reverse gear backlash. |
| Propeller Shaft Tool | 44-93003 |
|  11573 | Acts as a dummy propeller shaft when taking forward gear backlash measurements for counter rotation gearcases. |
| Pinion Gear Locating Tool | 91-12349A05 |
|  3608 | Measures pinion gear height. |
| Bearing Installation Driver | 91-13945 |
|  8877 | Installs reverse gear needle bearing into prop shaft carrier. |

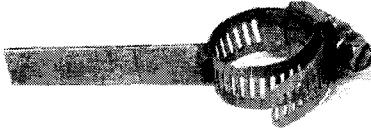
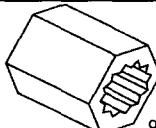
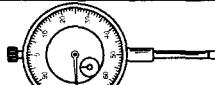
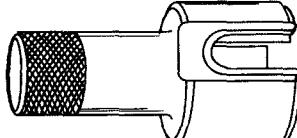
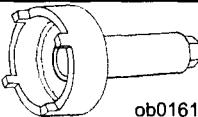
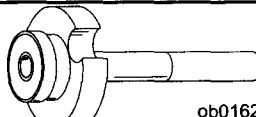
| | |
|---|---|
| Oil Seal Driver | 91-13949 |
|  8878 | Installs oil seals into water pump base. |
| Bearing Race Driver | 91-14308T02 |
|  8879 | Removes pinion bearing race. |
| Bearing Installation Puller | 91-14309T02 |
|  8880 | Installs pinion bearing into gearcase. |
| Wear Sleeve Driver | 91-14310T 1 |
|  8881 | Installs wear sleeve onto driveshaft. |
| Bearing Preload Tool | 91-14311A04 |
|  8756 | Simulates a load on the driveshaft for accurate pinion height and backlash measurements. |
| Needle Bearing Driver | 91-15755T |
|  10787 | Installs needle bearings into bearing carriers. |
| Bearing Cup/Adapter Installation Tool | 91-18605A 2 |
|  9591 | Installs the forward gear bearing race on a standard gearcase. Presses the reverse gear bearing adapter into the gear housing on a counter rotating gearcase. |
| Backlash Indicator | 91-19660--1 |
|  8757 | Measures gear backlash. |

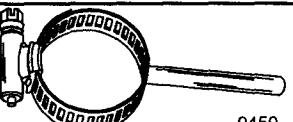
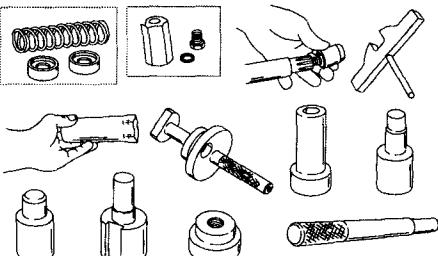
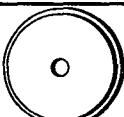
Section 3 - OptiMax Models

| | |
|---|---|
| Bearing Cup Driver | 91-31106T |
|  | Installs the driven gear bearing cup. |
| Shift Shaft Bushing Tool | 91-31107T |
|  | Aids in the removal and installation of the shift shaft bushing. |
| Oil Seal Driver | 91-31108T |
|  | Installs bearing carrier oil seals. |
| Bearing Removal and Installation Kit | 91-31229A7 |
|  | <p>Installs and removes the bearings in all gearcases. 91-31229A7 tool assembly includes the following components:</p> <ul style="list-style-type: none"> 11-24156 Hex Nut 12-34961 Washer 91-15755T Bearing Carrier 91-29310 Plate 91-29610 Pilot Plate 91-30366T1 Mandrel 91-31229 Puller Shaft 91-32325T Driver Head 91-32336 Driver Needle Bearing 91-36379 Puller/Head Gear 91-36569T Driver Head 91-36571T Pilot Washer 91-37292 Roller Bearing 91-37311 Driver Head 91-37312 -Driver Head 91-37323 Driver Head Rod 91-37324 Pilot Washer 91-38628T Puller/Driver Head 91-52393 Driver Needle Bearing 91-52394 Head Pull Rod |
| Needle Bearing Driver | 91-33491 |
|  | Installs the needle bearing in the forward gear. Removes and installs the seals and bearing in the gimbal housing. |
| Slide Hammer | 91-34569A 1 |
|  | Aids in the removal of various engine components. Use with puller jaws. |

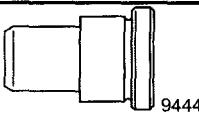
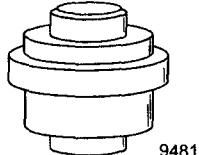
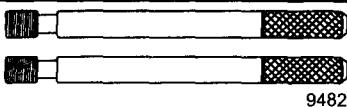
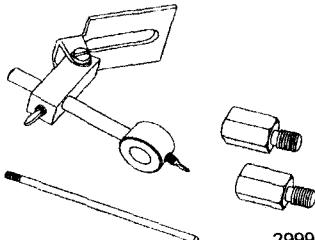
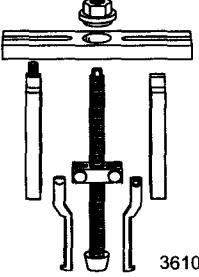
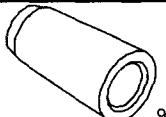
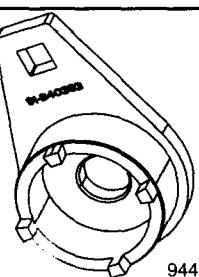
| | |
|---|---|
| Driver Head | 91-36569T |
|  ob01634 | Used in pinion gear and bearing installation. |
| Pilot Washer | 91-36571T |
|  ob01619 | Used in pinion gear and pinion bearing installation. |
| Universal Puller Plate | 91-37241 |
|  8505 | Removes bearings from gears and the driveshaft. |
| Driver Rod | 91-37323 |
|  25431 | Used in pinion gear and pinion bearing installation. |
| Pilot Mandrel | 91-37350T |
|  8884 | Presses on inner race of forward gear roller bearing. |
| Puller/Driver Head | 91-38628T |
|  ob01622 | Used in pinion gear and pinion bearing installation. |
| Driveshaft Bearing Retainer Wrench | 91-43506T |
|  9520 | Removes and installs the threaded bearing retainer. |
| Puller Jaws Assembly | 91-46086A1 |
|  9514 | Removes bearing carrier and bearing races; use with Puller Bolt (91-85716). |

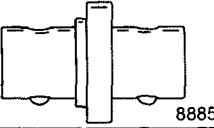
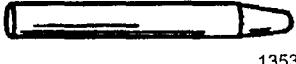
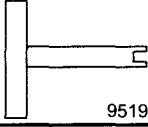
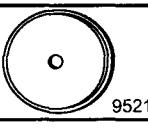
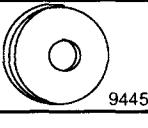
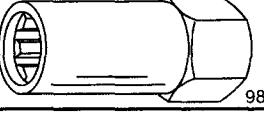
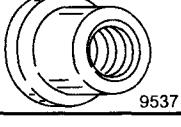
Section 3 - OptiMax Models

| | |
|---|---|
| Backlash Indicator Rod | 91-53459 |
|  10452 | Aids in checking gear backlash. |
| Driveshaft Holding Tool | 91-56775T |
|  9448 | Provides a wrench surface to turn the driveshaft. Also used to hold driveshaft for pinion gear installation. |
| Dial Indicator | 91-58222A1 |
|  9479 | Used to obtain a variety of measurements including gear backlash, pinion gear location, and TDC. |
| Pinion Nut Wrench | 91-61067A04 |
|  9593 | Holds the pinion nut when removing the pinion gear and driveshaft. Also, use with Belleville washer and propeller nut to check the reverse gear lash. |
| Bearing Carrier Retainer Nut Wrench | 91-61069T |
|  ob01615 | Installs and removes the bearing carrier retainer nuts. |
| Propeller Shaft/Driveshaft Adapter | 91-61077T |
|  10805 | Provides a wrench surface to turn the propeller shaft or the driveshaft. |
| Torque Wrench, lb. in. | 91-66274 |
|  10829 | Dial type torque wrench that sets torque from 9 to 150 lb. in.; 3/8 in. drive. |
| Pinion Height Tool | 91-74776T |
|  ob01627 | Checks pinion gear height. |

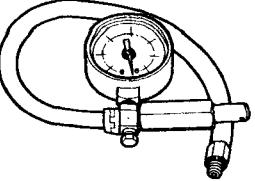
| | |
|--|---|
| Backlash Indicator Rod | 91-78473 |
|  9450 | Aids in checking gear backlash. |
| Jet Pump Tool Kit | 91-809957A1 |
|  25488 | Removes and install bearings and seals in the jet drive. Contains the following components: 91-824871A2 Preload Kit Impeller Shaft 91-824869A1 Thread Extender Kit 91-850233 Seal Protector Impeller Shaft 91-83203A1 Impeller Shaft Wrench 91-850297 Impeller Nut Socket 91-831897 Pinion Gear Location Tool 91-832016 Bearing Installer 91-850831 Bushing Installer 91-832019 Seal Installer 91-832017 Bearing Installer 91-832018 Bearing Cup Installer 91-824892 Driver Handle |
| Forward Gear Assembly Tube | 91-815850 |
|  11577 | Removes and installs the forward gear/bearing adapter assembly for counter rotation gearcases. |
| Puller Jaws | 91-816242 |
|  10681 | Use with either the two prong or three prong puller on all drive units. |
| Guide Plate | 91-816243 |
|  4481 | Centers the rod used to drive in the forward gear bearing on a standard rotation gearcase, and the reverse gear bearing on a counter rotation gearcase. |
| Reverse Gear Needle Bearing Driver | 91-816244 |
|  10810 | Installs the needle bearings into the reverse gear of a counter rotating gearcase. |
| Needle Bearing Removal Tool | 91-816245 |
|  10793 | Removes the needle bearings from the back adaptor of a counter rotating gearcase. |

Section 3 - OptiMax Models

| | |
|--|--|
| Needle Bearing Driver | 91-816292 |
|  9444 | Installs the needle bearing onto the forward gear. |
| Carrier Seal Driver | 91-817569T |
|  9481 | Removes and installs the bearing carrier seals. Installs seals in the driveshaft seal carrier. |
| Water Pump Alignment Pins | 91-821571A 1 |
|  9482 | Aligns the water pump during installation. |
| Dial Indicator Adapter | 91-83155 |
|  2999 | Attaches the dial indicator to the gearcase when checking backlash. |
| Bearing Puller Assembly | 91-83165T |
|  3610 | Removes bearings, races and bearing carriers |
| Bearing Carrier Installation Tool | 91-840388 |
|  9518 | Installs the bearing carrier on heavy duty propeller shafts. |
| Bearing Carrier Retainer Nut Wrench | 91-840393 |
|  9449 | Installs the bearing carrier retainer nut on heavy duty propeller shafts. |

| | | |
|--|---|---|
| Bearing Driver | | 91-856875A 1 |
| |  8885 | Installs prop shaft needle bearing into 3 jaw or 6 jaw forward gear. |
| Cross Pin Tool | | 91-86642 |
| |  13539 | Aids in the installation of the cross pin into the clutch dog assembly. |
| Cross Pin (T-Handle) Installation Tool | | 91-86642--2 |
| |  9519 | Assists in the assembly/disassembly of the clutch cross pin. |
| Guide Plate | | 91-86943T |
| |  9521 | Guides the forward gear bearing during installation. |
| Bearing Cup Driver | | 91-87120T |
| |  9445 | Installs the forward gear bearing cup. |
| Bearing Driver | | 91-877321A 1 |
| |  8886 | Installs prop shaft needle bearing into 6 jaw forward gear. |
| Dial Indicator Holding Tool | | 91-89897 |
| |  ob01631 | Secures the dial indicator to gear housing when checking backlash. |
| Driveshaft Holding Tool | | 91-90094 |
| |  9882 | Assists in pinion gear installation. |
| Pinion Bearing Driver | | 91-92788T |
| |  9537 | Aids in the removal and installation of the pinion bearing. |

Section 3 - OptiMax Models

| | |
|--|---|
| Leakage Tester Kit | FT8950 |
|  ob01632 | Checks gear housing for leakage prior to filling with gear lubricant. Also used to pressurize the oil injection system. |

Section 4 - Verado Models

Table of Contents

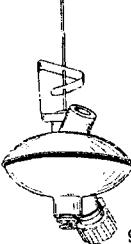
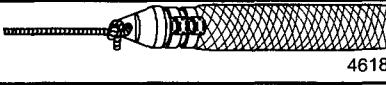
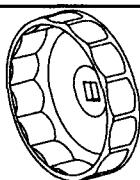
| | | | |
|---|-----|--|-----|
| Installation and Maintenance..... | 100 | Powerhead Tools..... | 106 |
| Maintenance Tool Application Chart..... | 100 | Mid-Section..... | 108 |
| Maintenance Tools..... | 100 | Mid-Section Tool Application Chart..... | 108 |
| Electrical and Ignition..... | 102 | Mid-Section Tools..... | 108 |
| Electrical Tool Application Chart..... | 102 | Lower Unit..... | 110 |
| Electrical Tools..... | 102 | Gear Housing Tool Application Chart..... | 110 |
| Fuel System..... | 103 | Gear Housing Tools..... | 111 |
| Fuel System Tool Application Chart..... | 103 | Power Steering..... | 115 |
| Fuel System Tools..... | 103 | Power Steering Tool Application Chart..... | 115 |
| Powerhead..... | 105 | Power Steering Tools..... | 116 |
| Powerhead Tool Application Chart..... | 105 | | |

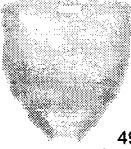
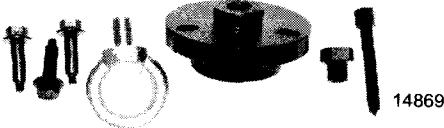
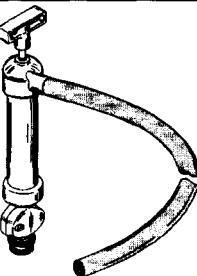
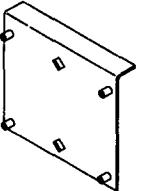
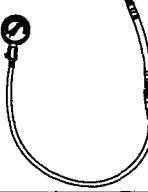
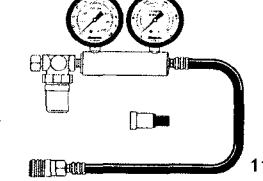
Installation and Maintenance

Maintenance Tool Application Chart

| Part No. | Description | 135/150/175 Verado 4-Stroke | 200/225/250/275 Verado 4-Stroke |
|------------------|--|-----------------------------|---------------------------------|
| 44357Q2 | Flushing Device | X | X |
| 881150K1 | Dual Water Pick-up Flush Gearcase Seal Kit | X | X |
| 888462A1 | Data Cable Puller | X | X |
| 91-889277Q03 | Oil Filter Wrench | X | X |
| 91-892866A01 | Oil Drain Funnel | | X |
| 91-895343T02 | Flywheel Puller/Lifting Ring | X | X |
| 91-90265A5 | Crankcase Oil Pump | X | X |
| 91-98234A2 | Transom Drilling Fixture | X | X |
| Snap-On EEPV303B | Compression Tester with Adapter | X | X |
| Snap-On EEPV309A | Cylinder Leakage Tester | X | X |

Maintenance Tools

| | |
|---|--|
| Flushing Device | 44357Q 2 |
|  | Attaches to the water intakes; provides a fresh water connection when flushing the cooling system or operating the engine. |
| Dual Water Pick-up Flush Gearcase Seal Kit | 881150K 1 |
|  | Blocks off the front water inlet holes on the dual water inlet gearcases. |
| Data Cable Puller | 888462A1 |
|  | Attaches to end of DTS data harness to aid in pulling harness through boat. Prevents damage to DTS data harness. |
| Oil Filter Wrench | 91-889277Q03 |
|  | Assists in removal of oil filter. |

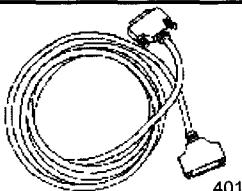
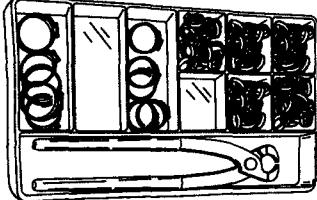
| | | |
|--|---|------------------|
| Oil Drain Funnel | | 91-892866A01 |
|  4993 | Diverts draining engine oil from contacting the anti-splash and anti-cavitation plates. | |
| Flywheel Puller/Lifting Ring | | 91-895343T02 |
|  14869 | Removes flywheel from engine. Used for lifting powerhead/engine. | |
| Crankcase Oil Pump | | 91-90265A 5 |
|  11591 | Aids in the removal of engine oil without draining the crankcase. | |
| Transom Drilling Fixture | | 91-98234A2 |
|  5489 | Aids in engine installation by acting as a template for engine mounting holes. | |
| Compression Tester with Adapter | | Snap-On EEPV303B |
|  8511 | Checks cylinder compression. Use with M14 x 1.25 adapter. | |
| Cylinder Leakage Tester | | Snap-On EEPV309A |
|  11604 | Aids in checking cylinder leakdown. | |

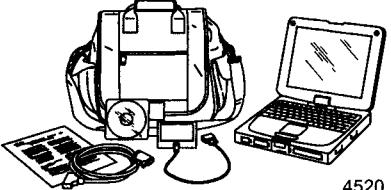
Electrical and Ignition

Electrical Tool Application Chart

| Part No. | Description | 135/150/175 Verado 4-Stroke | 200/225/250/275 Verado 4-Stroke |
|-------------------|------------------------------|-----------------------------|---------------------------------|
| 84-822560A13 | Adapter Harness | X | X |
| 84-825003A1 | Extension Cable | X | X |
| 91-52344 | Flywheel Holding Tool | X | X |
| 91-803146A04 | Hose Clamp Tool Kit | X | X |
| 91-892647A01 | DMT 2004 Digital Multimeter | X | X |
| 91-895343T02 | Flywheel Puller/Lifting Ring | X | X |
| Order through SPX | Computer Diagnostic System | X | X |

Electrical Tools

| | |
|--|--|
| Adapter Harness | 84-822560A13 |
|  5826 | Data link harness between engine and Computer Diagnostic System (CDS) or Digital Diagnostic Terminal (DDT). |
| Extension Cable | 84-825003A1 |
|  4012 | Data link extension harness (3.05 m[10 ft.]) between adapter harness and Digital Diagnostic Terminal |
| Flywheel Holding Tool | 91-52344 |
|  4738 | Holds and/or turns the flywheel while making engine repairs, also used to torque the flywheel or the engine coupler. |
| Hose Clamp Tool Kit | 91-803146A04 |
|  5819 | Aids in the installation of high pressure (Oetiker ®) hose clamps. |
| DMT 2004 Digital Multimeter | 91-892647A01 |
|  4516 | Measures RPM on spark ignition (SI) engines, ohms, amperes, AC and DC voltages; records maximums and minimums simultaneously, and accurately reads in high RFI environments. |

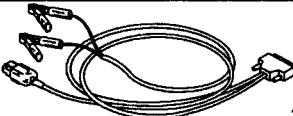
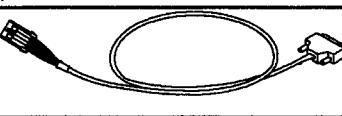
| | |
|---|---|
| Flywheel Puller/Lifting Ring | 91-895343T02 |
|  14869 | Removes flywheel from engine. Used for lifting powerhead/engine. |
| Computer Diagnostic System (CDS) | Order through SPX |
|  4520 | Monitors all electrical systems for proper function, diagnostics, and calibration purposes. For additional information, pricing, or to order the Computer Diagnostic System contact: SPX Corporation 28635 Mound Rd. Warren, MI 48092 or call: USA - 1-800-345-2233 Canada - 800-345-2233 Europe - 49 6182 959 149 Australia - (03) 9544-6222 |

Fuel System

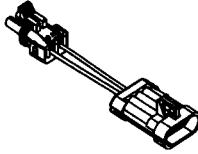
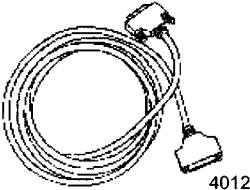
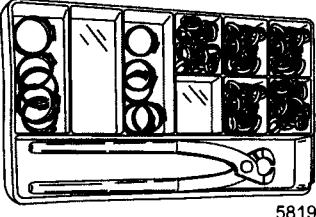
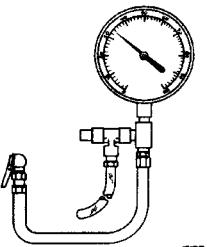
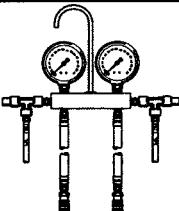
Fuel System Tool Application Chart

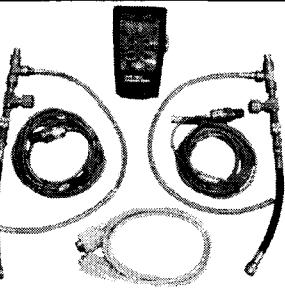
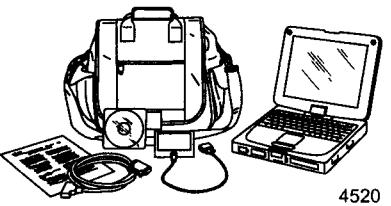
| Part No. | Description | 135/150/175 Verado 4-Stroke | 200/225/250/275 Verado 4-Stroke |
|-------------------|----------------------------------|-----------------------------|---------------------------------|
| 84-822560A5 | Adapter Harness | X | X |
| 84-822560A13 | Adapter Harness | X | X |
| 84-822560T12 | 2 to 4 Pin Harness Adapter | X | X |
| 84-825003A1 | Extension Cable | X | X |
| 91-803146A04 | Hose Clamp Tool Kit | X | X |
| 91-881833A03 | Fuel Pressure Gauge Kit | X | X |
| 91-881834A1 | Dual Fuel/Air Pressure Gauge Kit | X | X |
| 91-892647A01 | DMT 2004 Digital Multimeter | X | X |
| 91-892651A01 | Digital Pressure Meter | X | X |
| Order through SPX | Computer Diagnostic System (CDS) | X | X |

Fuel System Tools

| | |
|--|---|
| Adapter Harness | 84-822560A5 |
|  4009 | Data link harness between engine and Computer Diagnostic System (CDS) or Digital Diagnostic Terminal (DDT) on engines with a 2 pin diagnostic connection. |
| Adapter Harness | 84-822560A13 |
|  5826 | Data link harness between engine and Computer Diagnostic System (CDS) or Digital Diagnostic Terminal (DDT). |

Section 4 - Verado Models

| | |
|--|--|
| 2 to 4 Pin Harness Adapter | 84-822560T12 |
|  4679 | Adapts the 2 pin Digital Diagnostic Terminal harness to the 4 pin connector on the engine. |
| Extension Cable | 84-825003A1 |
|  4012 | Data link extension harness (3.05 m[10 ft.]) between adapter harness and Digital Diagnostic Terminal |
| Hose Clamp Tool Kit | 91-803146A04 |
|  5819 | Aids in the installation of high pressure (Oetiker ®) hose clamps. |
| Fuel Pressure Gauge Kit | 91-881833A03 |
|  rms32 | Tests the fuel pump pressure; can be used to relieve fuel pressure. |
| Dual Fuel/Air Pressure Gauge Kit | 91-881834A 1 |
|  5822 | Tests fuel and air pressure; the dual gauges allow the viewing of both pressures simultaneously. |
| DMT 2004 Digital Multimeter | 91-892647A01 |
|  4516 | Measures RPM on spark ignition (SI) engines, ohms, amperes, AC and DC voltages; records maximums and minimums simultaneously, and accurately reads in high RFI environments. |

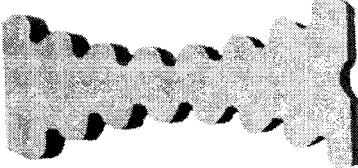
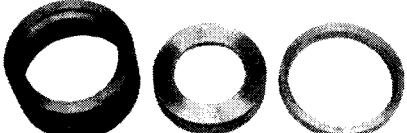
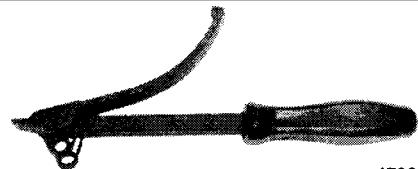
| | | |
|--|--|---|
| Digital Pressure Meter | | 91-892651A01 |
|  5786 | | Connects to the fuel system/manifold and can be used in conjunction with Computer Diagnostic System (CDS). |
| Computer Diagnostic System (CDS) | | Order through SPX |
|  4520 | | Monitors all electrical systems for proper function, diagnostics, and calibration purposes. For additional information, pricing, or to order the Computer Diagnostic System contact: SPX Corporation 28635 Mound Rd. Warren, MI 48092 or call: USA - 1-800-345-2233 Canada - 800-345-2233 Europe - 49 6182 959 149 Australia - (03) 9544-6222 |

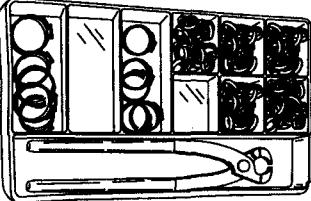
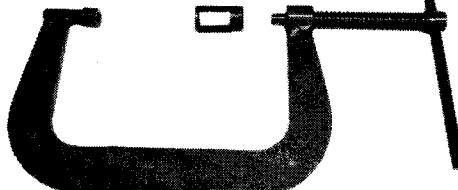
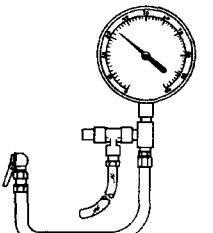
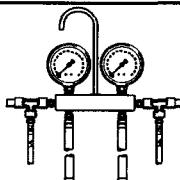
Powerhead

Powerhead Tool Application Chart

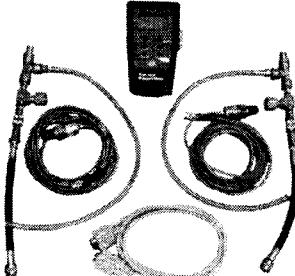
| Part No. | Description | 135/150/175 Verado 4-Stroke | 200/225/250/275 Verado 4-Stroke |
|--------------|-----------------------------------|-----------------------------|---------------------------------|
| N/A | Cam Brake | X | X |
| N/A | Crankshaft Retainer | X | X |
| N/A | Crankshaft Seal Installation Tool | X | X |
| N/A | Dial Indicator Extension Adapter | X | X |
| N/A | Ring Compressor | X | X |
| N/A | Rod Guide Dowel | X | X |
| 91-52344 | Flywheel Holding Tool | X | X |
| 91-58222A1 | Dial Indicator | X | X |
| 91-803146A04 | Hose Clamp Tool Kit | X | X |
| 91-809494A1 | Valve Spring Compressor | X | X |
| 91-809905001 | 13 mm Torque Adapter | X | X |
| 91-881833A03 | Fuel Pressure Gauge Kit | X | X |
| 91-881834A1 | Dual Fuel/Air Pressure Gauge Kit | X | X |
| 91-892651A01 | Digital Pressure Meter | X | X |
| 91-895343T02 | Flywheel Puller/Lifting Ring | X | X |

Powerhead Tools

| | |
|--|--|
| Cam Brake | Part number not available for this printing. |
|  5539 | Prevents the intake and exhaust cam from turning while removing or installing cam retaining bolts. |
| Crankshaft Retainer | Part number not available for this printing. |
|  6191 | Secures crankshaft to cylinder block while rotating block to install the cylinder head. |
| Crankshaft Seal Installation Tool | Part number not available for this printing |
|  15499 | Aids in the installation of the crankshaft seal. |
| Dial Indicator Extension Adapter | Part number not available for this printing. |
|  4719 | Extends the dial indicators reach. |
| Ring Compressor | Part number not available for this printing |
|  4739 | Compresses piston rings when installing the piston into the cylinder block. |
| Rod Guide Dowel | Part number not available for this printing. |
|  4735 | Prevents cylinder bore and crankshaft from damage while installing or removing connecting rod assembly. |
| Flywheel Holding Tool | 91-52344 |
|  4738 | Holds and/or turns the flywheel while making engine repairs, also used to torque the flywheel or the engine coupler. |

| | |
|---|--|
| Dial Indicator | 91-58222A1 |
|  9479 | Used to obtain a variety of measurements including gear backlash, pinion gear location, and TDC. |
| Hose Clamp Tool Kit | 91-803146A04 |
|  5819 | Aids in the installation of high pressure (Oetiker ®) hose clamps. |
| Valve Spring Compressor | 91-809494A1 |
|  3454 | Removes and installs valve springs. |
| 13 mm Torque Adapter | 91-809905001 |
|  4631 | Aids in the removal and installation of powerhead nuts, and torquing nuts to specification. |
| Fuel Pressure Gauge Kit | 91-881833A03 |
|  rms32 | Tests the fuel pump pressure; can be used to relieve fuel pressure. |
| Dual Fuel/Air Pressure Gauge Kit | 91-881834A 1 |
|  5822 | Tests fuel and air pressure; the dual gauges allow the viewing of both pressures simultaneously. |

Section 4 - Verado Models

| | |
|---|--|
| Digital Pressure Meter | 91-892651A01 |
|  5786 | Connects to the fuel system/manifold and can be used in conjunction with Computer Diagnostic System (CDS). |
| Flywheel Puller/Lifting Ring | 91-895343T02 |
|  14869 | Removes flywheel from engine. Used for lifting powerhead/engine. |

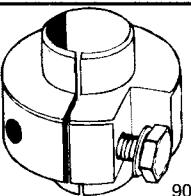
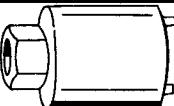
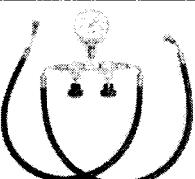
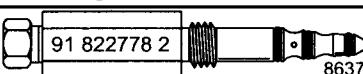
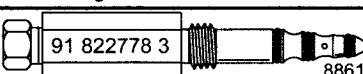
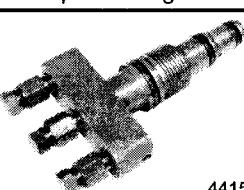
Mid-Section

Mid-Section Tool Application Chart

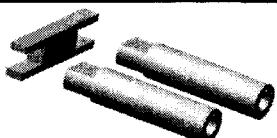
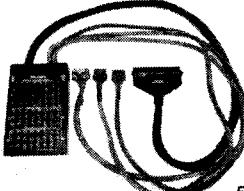
| Part No. | Description | 135/150/175 Verado 4-Stroke | 200/225/250/275 Verado 4-Stroke |
|------------------|-----------------------------|-----------------------------|---------------------------------|
| 91-11230-1 | Alignment Tool | X | |
| 91-34569A1 | Slide Hammer | | X |
| 91-44486A 1 | Trim Rod Removal Tool | X | |
| 91-44487T 1 | Trim Rod Guide Removal Tool | X | |
| 91-52915A6 | Power Trim Test Gauge Kit | X | X |
| 91-74951 | Spanner Wrench | X | |
| 91-821709T | Trim Cylinder End Cap Tool | X | X |
| 91-822778A 2 | Adapter Fitting | X | |
| 91-822778A 3 | Adapter Fitting | X | |
| 91-822778004 | Power Trim Adapter Fitting | | X |
| 91-87957T | Spanner Nut Socket | X | |
| 91-892647A01 | DMT 2004 Digital Multimeter | X | X |
| 91-899015A01 | Upper Mount Alignment Tool | X | |
| Snap-On SRP-4 | Lock-Ring Pliers | X | |
| SPX P/N MM-46225 | Breakout Box | X | X |

Mid-Section Tools

| | |
|--|---|
| Alignment Tool | 91-11230-1 |
|  9078 | Aligns the tilt ram with housing to aid installation of the pivot pin. |
| Slide Hammer | 91-34569A 1 |
|  6761 | Aids in the removal of various engine components. Use with puller jaws. |

| | |
|---|--|
| Trim Rod Removal Tool | 91-44486A 1 |
|  9089 | Aids in the removal of the trim rod from the trim cylinders. |
| Trim Rod Guide Removal Tool | 91-44487T 1 |
|  9086 | Aids in the removal of the trim rod from the trim cylinders. |
| Power Trim Test Gauge Kit | 91-52915A6 |
|  3753 | Tests circuit pressures for various trim pumps. |
| Spanner Wrench | 91-74951 |
|  8775 | Removes and installs trim cylinder end caps. |
| Trim Cylinder End Cap Tool | 91-821709T |
|  10691 | Allows easy removal of the trim cylinder end caps. Required if tilt limit spacers are to be installed or if the trim in limit spacer is to be removed (to allow additional trim in range). |
| Adapter Fitting | 91-822778A 2 |
|  8637 | Install in place of the manual release valve to measure the internal pressure of the power trim pump in the up mode. |
| Adapter Fitting | 91-822778A 3 |
|  8861 | Install in place of the manual release valve to measure the internal pressure of the power trim pump in the down mode. |
| Power Trim Adapter Fitting | 91-822778004 |
|  4415 | Replaces power trim manual release valve when testing power trim circuits. |

Section 4 - Verado Models

| | |
|---|--|
| Spanner Nut Socket | 91-87957T |
|  15638 | Aids in the removal and installation of the upper mount spanner nut. |
| DMT 2004 Digital Multimeter | 91-892647A01 |
|  4516 | Measures RPM on spark ignition (SI) engines, ohms, amperes, AC and DC voltages; records maximums and minimums simultaneously, and accurately reads in high RFI environments. |
| Upper Mount Alignment Tool | 91-899015A01 |
|  15639 | Aligns upper mount for assembly with the swivel pin assembly. |
| Lock-Ring Pliers | Snap-On SRP-4 |
|  4799 | Aids in the removal of lock rings. |
| Breakout Box | SPX P/N MM-46225 |
|  5974 | Connects to Propulsion Control Module (PCM) to test engine circuits and components without probing wires. May be used with Computer Diagnostic System (CDS). |

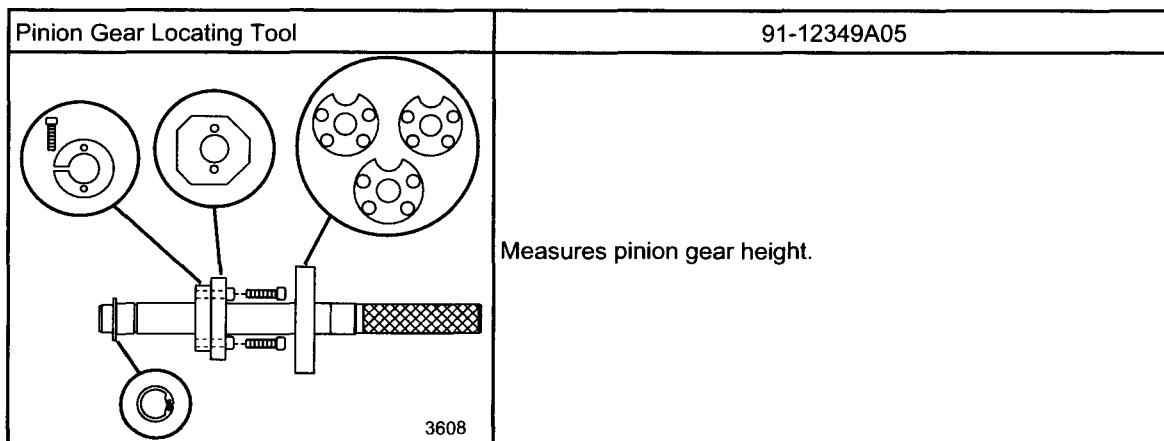
Lower Unit

Gear Housing Tool Application Chart

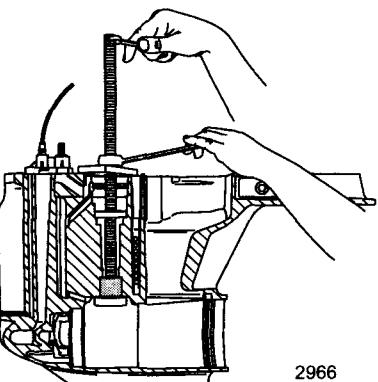
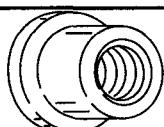
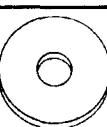
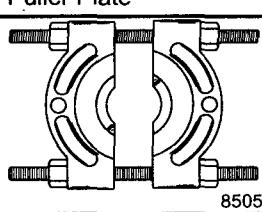
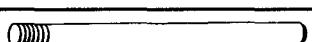
| Part Number | Description | 135/150/175 Verado 4-Stroke | 200/225/250/275 Verado 4-Stroke |
|-------------|--------------------------------------|-----------------------------|---------------------------------|
| 91-12349A05 | Pinion Gear Locating Tool | X | X |
| 91-31229A7 | Bearing Removal and Installation Kit | X | X |
| 91-34569A1 | Slide Hammer | X | X |
| 91-36569T | Driver Head | X | X |
| 91-36571T | Pilot Washer | X | X |
| 91-37241 | Universal Puller Plate | X | X |
| 91-37323 | Driver Rod | X | X |
| 91-38628T | Puller/Driver Head | X | X |
| 91-43506T | Driveshaft Bearing Retainer Wrench | X | X |

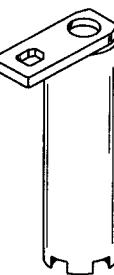
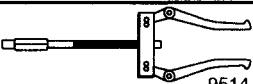
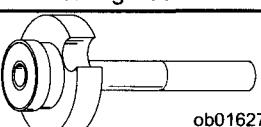
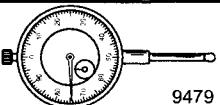
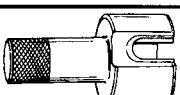
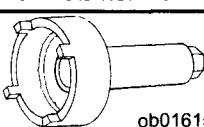
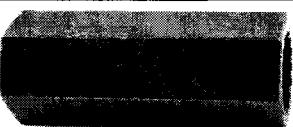
| Part Number | Description | 135/150/175 Verado 4-Stroke | 200/225/250/275 Verado 4-Stroke |
|--------------|--|-----------------------------|---------------------------------|
| 91-46086A1 | Puller Jaws Assembly | X | X |
| 91-56048001 | Pinion Gear Locating Tool | X | X |
| 91-58222A1 | Dial Indicator | X | X |
| 91-61067T03 | Pinion Nut Wrench | X | X |
| 91-61069T | Bearing Carrier Retainer Nut Wrench | X | X |
| 91-61077T | Propeller Shaft/Driveshaft Adapter | X | X |
| 91-78473 | Backlash Indicator Rod | X | X |
| 91-816243 | Guide Plate | X | X |
| 91-816245 | Needle Bearing Removal Tool | X | |
| 91-83155 | Dial Indicator Adapter | X | X |
| 91-83165T | Bearing Puller Assembly | X | X |
| 91-885592T | Bearing Cup Driver | X | X |
| 91-888414T | Bearing Cup Driver/Oil Seal Installer Tool | X | X |
| 91-889844T | Oil Seal Driver | X | X |
| 91-889845 | Seal Driver Guide | X | X |
| 91-889958T | Driveshaft Holding Tool | X | X |
| 91-892866A01 | Oil Drain Funnel | | X |
| 91-89897 | Dial Indicator Holding Tool | X | X |
| FT8950 | Leakage Tester Kit | X | X |

Gear Housing Tools

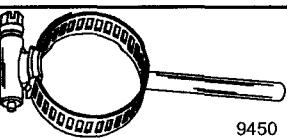
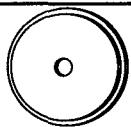
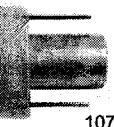
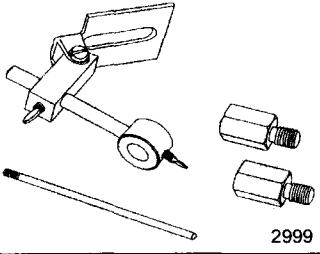
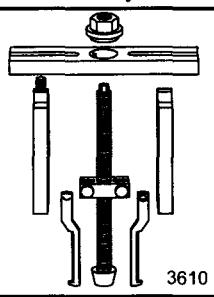
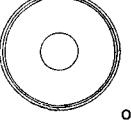
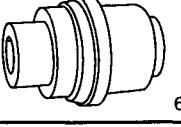


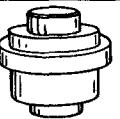
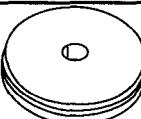
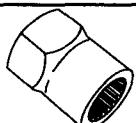
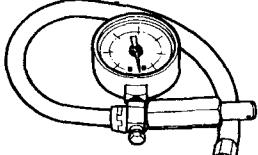
Section 4 - Verado Models

| | |
|---|---|
| Bearing Removal and Installation Kit | 91-31229A7 |
|  | <p>Installs and removes the bearings in all gearcases. 91-31229A7 tool assembly includes the following components:</p> <ul style="list-style-type: none"> 11-24156 Hex Nut 12-34961 Washer 91-15755T Bearing Carrier 91-29310 Plate 91-29610 Pilot Plate 91-30366T1 Mandrel 91-31229 Puller Shaft 91-32325T Driver Head 91-32336 Driver Needle Bearing 91-36379 Puller/Head Gear 91-36569T Driver Head 91-36571T Pilot Washer 91-37292 Roller Bearing 91-37311 Driver Head 91-37312 -Driver Head 91-37323 Driver Head Rod 91-37324 Pilot Washer 91-38628T Puller/Driver Head 91-52393 Driver Needle Bearing 91-52394 Head Pull Rod |
| Slide Hammer | 91-34569A 1 |
|  | Aids in the removal of various engine components. Use with puller jaws. |
| Driver Head | 91-36569T |
|  | Used in pinion gear and bearing installation. |
| Pilot Washer | 91-36571T |
|  | Used in pinion gear and pinion bearing installation. |
| Universal Puller Plate | 91-37241 |
|  | Removes bearings from gears and the driveshaft. |
| Driver Rod | 91-37323 |
|  | Used in pinion gear and pinion bearing installation. |

| | | |
|--|--|-------------|
| Puller/Driver Head | | 91-38628T |
|  ob01622 | Used in pinion gear and pinion bearing installation. | |
| Driveshaft Bearing Retainer Wrench | | 91-43506T |
|  9520 | Removes and installs the threaded bearing retainer. | |
| Puller Jaws Assembly | | 91-46086A1 |
|  9514 | Removes bearing carrier and bearing races; use with Puller Bolt (91-85716). | |
| Pinion Gear Locating Tool | | 91-56048001 |
|  ob01627 | Measures pinion gear height. | |
| Dial Indicator | | 91-58222A1 |
|  9479 | Used to obtain a variety of measurements including gear backlash, pinion gear location, and TDC. | |
| Pinion Nut Wrench | | 91-61067T03 |
|  ob01639 | Holds the pinion nut when removing the pinion gear and driveshaft. | |
| Bearing Carrier Retainer Nut Wrench | | 91-61069T |
|  ob01615 | Installs and removes the bearing carrier retainer nuts. | |
| Propeller Shaft/Driveshaft Adapter | | 91-61077T |
|  10805 | Provides a wrench surface to turn the propeller shaft or the driveshaft. | |

Section 4 - Verado Models

| | |
|--|---|
| Backlash Indicator Rod | 91-78473 |
|  9450 | Aids in checking gear backlash. |
| Guide Plate | 91-816243 |
|  4481 | Centers the rod used to drive in the forward gear bearing on a standard rotation gearcase, and the reverse gear bearing on a counter rotation gearcase. |
| Needle Bearing Removal Tool | 91-816245 |
|  10793 | Removes the needle bearings from the back adaptor of a counter rotating gearcase. |
| Dial Indicator Adapter | 91-83155 |
|  2999 | Attaches the dial indicator to the gearcase when checking backlash. |
| Bearing Puller Assembly | 91-83165T |
|  3610 | Removes bearings, races and bearing carriers |
| Bearing Cup Driver | 91-885592T |
|  ob01625 | Installs reverse gear bearing cup. |
| Bearing Cup Driver/Oil Seal Installer Tool | 91-888414T |
|  6229 | Installs bearing carrier cup and seals. |

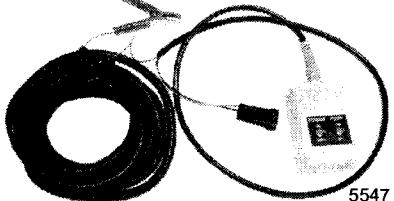
| | | |
|---|---|--------------|
| Oil Seal Driver | | 91-889844T |
|  ob01633 | Installs seals in driveshaft seal carrier. | |
| Seal Driver Guide | | 91-889845 |
|  ob01670 | Aids in the installation of bearing carrier seals. | |
| Driveshaft Holding Tool | | 91-889958T |
|  ob01206 | Holds driveshaft during pinion nut removal on the Verado models. | |
| Oil Drain Funnel | | 91-892866A01 |
|  4993 | Diverts draining engine oil from contacting the anti-splash and anti-cavitation plates. | |
| Dial Indicator Holding Tool | | 91-89897 |
|  ob01631 | Secures the dial indicator to gear housing when checking backlash. | |
| Leakage Tester Kit | | FT8950 |
|  ob01632 | Checks gear housing for leakage prior to filling with gear lubricant. Also used to pressurize the oil injection system. | |

Power Steering

Power Steering Tool Application Chart

| Part No. | Description | 135/150/175 Verado 4-Stroke | 200/225/250/275 Verado 4-Stroke |
|--------------|--|-----------------------------|---------------------------------|
| N/A | Power Steering Cylinder End Cap Spanner Wrench | | X |
| 64-826525A 1 | Steering Helm Fill Adapter | X | |
| 91-895040K01 | Power Steering Module Primer Kit | X | X |

Power Steering Tools

| | |
|--|---|
| Power Steering Cylinder End Cap Spanner Wrench | Part number not available for this printing. |
|  5080 | Removes the power steering cylinder end cap. |
| Steering Helm Fill Adapter | 64-826525A 1 |
|  15509 | Connects between the fluid bottle and helm to aid in filling the hydraulic steering helm. |
| Power Steering Module Primer Kit | 91-895040K01 |
|  5547 | Bleeds power steering system without running engine. |

Section 5 - SmartCraft and Digital Throttle & Shift

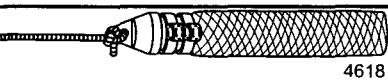
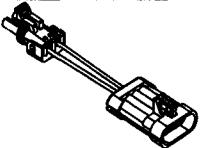
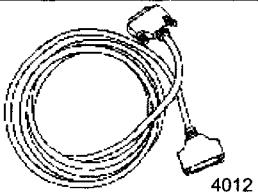
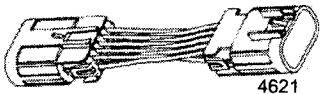
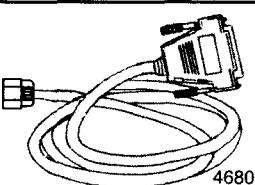
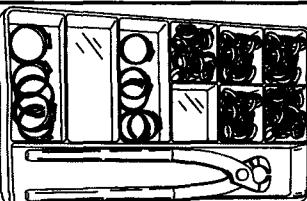
Table of Contents

| | | | |
|---|-----|---|-----|
| SmartCraft and Digital Throttle and Shift (DTS) Tool Application Chart..... | 118 | Computer Diagnostic System Adapter Cable Application Chart..... | 121 |
| Special Tools/Cables | 118 | Computer Diagnostic System Adapter Cables | 122 |
| SmartCraft and Digital Throttle and Shift Tools | 119 | | |

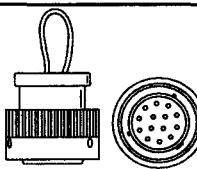
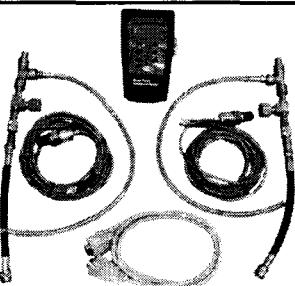
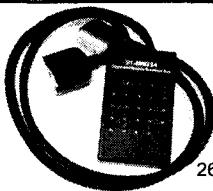
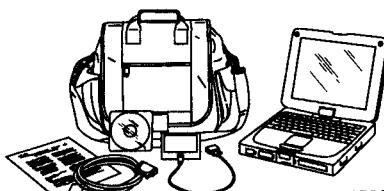
SmartCraft and Digital Throttle and Shift (DTS) Tool Application Chart**Special Tools/Cables**

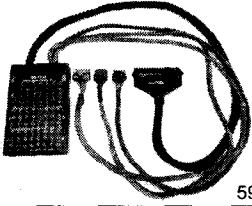
| Part Number | Description | 150-250 EFI 2-Stroke V-6 | 40-60 4-Stroke EFI | 75 - 115 4-Stroke EFI (1.7 L) | 75-115 OptiMax | 135-175 OptiMax | 200-225 OptiMax | 200-225 OptiMax (DTS) | 135-175 Verado | 200-275 Verado |
|-------------------|----------------------------------|-----------------------------------|--------------------------|--|-------------------|--------------------|--------------------|-----------------------------|-------------------|-------------------|
| 888462A1 | Data Cable Puller | X | X | X | X | X | X | X | X | X |
| 84-822560T12 | 2 to 4 Pin Harness Adapter | | | X | | | | | X | X |
| 84-825003A1 | Extension Cable | X | X | X | X | X | X | X | X | X |
| 84-889243A01 | Gauge Sweep Kit | X | X | X | X | X | X | X | X | X |
| 84-892452A01 | Male to Male 10 Pin Adapter | | | | | | | X | X | X |
| 84-892663 | CAN 1 Diagnostic Cable | | | | | | | X | X | X |
| 91-803146A04 | Hose Clamp Tool Kit | | | X | X | X | X | X | X | X |
| 91-889675A01 | 12 Volt Connector Tool | | | | | | | X | X | X |
| 91-892647A01 | DMT 2004 Digital Multimeter | X | X | X | X | X | X | X | X | X |
| 91-892651A01 | Digital Pressure Meter | X | X | X | X | X | X | X | X | X |
| 91-896352 | De-pinning Tool | X | X | X | X | X | X | X | X | X |
| 91-898254 | Command Module MX Breakout Box | | | | | | | X | X | X |
| Order through SPX | Computer Diagnostic System (CDS) | X | X | X | X | X | X | X | X | X |
| SPX P/N MM-46225 | Breakout Box | X | X | X | X | X | X | X | X | X |
| SPX P/N MM-46523 | Terminal Test Probe Kit | X | X | X | X | X | X | X | X | X |

SmartCraft and Digital Throttle and Shift Tools

| | |
|--|---|
| Data Cable Puller | 888462A1 |
|  4618 | Attaches to end of DTS data harness to aid in pulling harness through boat. Prevents damage to DTS data harness. |
| 2 to 4 Pin Harness Adapter | 84-822560T12 |
|  4679 | Adapts the 2 pin Digital Diagnostic Terminal harness to the 4 pin connector on the engine. |
| Extension Cable | 84-825003A1 |
|  4012 | Data link extension harness (3.05 m[10 ft.]) between the adapter harness and the Digital Diagnostic Terminal or Computer Diagnostic System (CDS). |
| Gauge Sweep Kit | 84-889243A01 |
|  26132 | Connects the CDS to the 14-pin harness allowing the CDS to configure a helm without engines present. Also aids in testing the 14-pin harness. |
| Male to Male 10 Pin Adapter | 84-892452A01 |
|  4621 | Allows connection between CAN 1 communications cable and Computer Diagnostic System in applications where a junction box is not used. |
| CAN 1 Diagnostic Cable | 84-892663 |
|  4680 | Connects into a junction box or male to male adapter cable for Command Module configuration. Not for use with DDT. |
| Hose Clamp Tool Kit | 91-803146A04 |
|  5819 | Aids in the installation of high pressure (Oetiker ®) hose clamps. |

Section 5 - SmartCraft and Digital Throttle & Shift

| | |
|---|---|
| 12 Volt Connector Tool | 91-889675A01 |
|  8036 | Connects to data harness allowing operation of the DTS system with the Digital Diagnostic Terminal or CDS. |
| DMT 2004 Digital Multimeter | 91-892647A01 |
|  4516 | Measures RPM on spark ignition (SI) engines, ohms, amperes, AC and DC voltages; records maximums and minimums simultaneously, and accurately reads in high RFI environments. |
| Digital Pressure Meter | 91-892651A01 |
|  5786 | Connects to the fuel system/manifold and can be used in conjunction with Computer Diagnostic System (CDS). |
| De-pinning Tool | 91-896352 |
|  17721 | Aids in the removal of wires from the 14 pin Deutsch connector. |
| Command Module MX Breakout Box | 91-898254 |
|  26131 | Connects between the command module and the command module harness. Test harness circuits and the input/output voltage at the command module. |
| Computer Diagnostic System (CDS) | Order through SPX |
|  4520 | Monitors all electrical systems for proper function, diagnostics, and calibration purposes. For additional information, pricing, or to order the Computer Diagnostic System contact: SPX Corporation 28635 Mound Rd. Warren, MI 48092 or call: USA - 1-800-345-2233 Canada - 800-345-2233 Europe - 49 6182 959 149 Australia - (03) 9544-6222 |

| | |
|---|--|
| Breakout Box | SPX P/N MM-46225 |
|  5974 | Connects to Propulsion Control Module (PCM) to test engine circuits and components without probing wires. May be used with Computer Diagnostic System (CDS). |
| Terminal Test Probe Kit | SPX P/N MM-46523 |
|  7915 | Test probes adapt test meter leads to harness connections without damaging harness terminals. May be used with Computer Diagnostic System (CDS). |

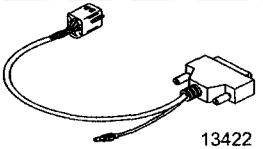
Computer Diagnostic System Adapter Cable Application Chart

| Model | Serial Number | Processor | 84-822560 | | | | | | | 84-892663 | 84-899150T01 |
|--|---------------------|-----------------|-----------|----|----|----|-----|-----|-----|-----------|--------------|
| | | | A1 | A5 | A6 | A7 | A10 | A13 | A14 | | |
| V-175 EFI (2.5 L) | 0T409000 - 0T800999 | PCM555 | X | | | | | | | | |
| | 0T801000 - 1B226999 | PCM03 | | X | | | | | | | |
| | 1B227000 & up | PCM03 | | | | | | X | | | |
| V-200 EFI (2.5 L) | 0T409000 - 0T800999 | | | X | | | | | | | |
| | 0T801000 - 1B226999 | | | | X | | | | | | |
| | 1B227000 & up | | | | | | | X | | | |
| 225 Carburetor (3.0 L) | 0D280813 - 0G129221 | Nippondenso | X | | | | | | | | |
| | 0G129222 - 0T800999 | Nippondenso | | | X | X | | | | | |
| 225/250 EFI (3.0 L) | 0G129222 - 0T408999 | Nippondenso | | | X | X | | | | | |
| 3.0 L EFI SeaPro/ Marathon/200/225/250 EFI (3.0 L) | 0T409000 - 0T800999 | PCM555 | X | | | | | | | | |
| | 0T801000 - 1B226999 | PCM555 | | X | | | | | | | |
| | 1B227000 & up | PCM555 | | | | | | X | | | |
| 250XB EFI (3.0 L) | 0G980600 - 0T800999 | | | | X | | | | | | |
| 75/90/115 DFI (1.5 L) | 0T801000 - 1B226999 | PCM03 | | X | | | | | | | |
| 75/90/115 (1.5 L) | 1B227000 & up | | | | | | | X | | | |
| V-135/150/175 DFI (2.5 L) | 0G590000 - 0T178499 | Non-555 OptiMax | X | | | | | | | | |
| | 0T178500 - 0T800999 | PCM555 | | X | | | | | | | |
| | 0T801000 - 1B226999 | PCM03 | | | X | | | | | | |
| | 1B227000 & up | PCM03 | | | | | | X | | | |
| 200/225 DFI (3.0 L) | 0G590000 - 0T178499 | Non-555 OptiMax | X | | | | | | | | |
| | 0T178500 - 0T800999 | PCM555 | | X | | | | | | | |
| | 0T801000 - 1B226999 | PCM03 | | | X | | | | | | |
| | 0T801000 & up | PCM03 | | | | | | X | | | |
| 200/225 DFI (3.0 L) - DTS | 0T59900 - 0T800999 | PCM555DTS | X | | | | | | | | |
| | 0T801000 - 1B226999 | PCM03 | | | | | | X | | | |
| | 0T801000 & up | PCM03 | | | | | | X | | | |

Section 5 - SmartCraft and Digital Throttle & Shift

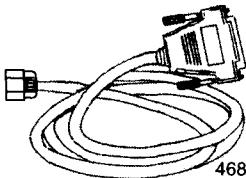
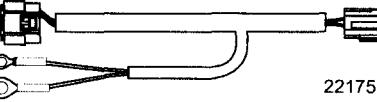
| Model | Serial Number | Processor | 84-822560 | | | | | | | 84-892663 | 84-899150T01 |
|----------------------------------|---------------------|------------|----------------|----|----|----|-----|-----|-----|-----------|--------------|
| | | | A1 | A5 | A6 | A7 | A10 | A13 | A14 | | |
| 25 (4-Stroke) | All applicable | Motorola | | | X | X | | | | | |
| 25/30 EFI (4-Stroke) (MY 2006) | 0R106999 | Kokusian | | | X | | | | | | X |
| 30 EFI (4-Stroke) | OT409000 - 1B226999 | PCM555 | X | | | | | | | | |
| 30/40 (3 Cyl.) (4-Stroke) | All applicable | Motorola | | | X | X | | | | | |
| 40 EFI (3 Cyl.) (4-Stroke) | All applicable | PCM555 | X | | | | | | | | |
| 40/50/60 (4 Cyl.) (4-Stroke) | All applicable | Motorola | | | X | X | | | | | |
| 40/50/60 EFI (4 Cyl.) (4-Stroke) | All applicable | PCM555 | X | | | | | | | | |
| 75/90/115 EFI (4-Stroke) | All applicable | Mitsubishi | | | | | | X | | | |
| 75/90/115 EFI (1.7 L) (4-Stroke) | 1B227000 & up | ECM07 | X ¹ | | | | | X | | | |
| 135-175 Verado | 1B227000 & up | PCM03/07 | X ¹ | | | | | | | | |
| 200-275 Verado | OT980000 & up | PCM03/07 | X ¹ | | | | | | | | |
| 225 EFI (4-Stroke) | OT653945 & up | Mitsubishi | | | | | X | | | | |
| 200/240/250 Jet | All applicable | PCM555 | X | | | | | | | | |
| DTS Command Module | | | | | | | | | X | | |

Computer Diagnostic System Adapter Cables

| | |
|---|---|
| Adapter Harness | 84-822560A5 |
|  4009 | Data link harness between engine and Computer Diagnostic System (CDS) or Digital Diagnostic Terminal (DDT). |
| Adapter harness | 84-822560A6 |
|  25728 | Data link harness between the engine and the Computer Diagnostic System (CDS). Use with 84-822560A7 or 84-822560A3. |
| Adapter Harness | 84-822560A7 |
|  13422 | Data link harness between the engine ECM and the Computer Diagnostic System (CDS). |
| Adapter harness | 84-822560A10 |
|  25725 | Data link harness between the engine and the Computer Diagnostic System (CDS). Use with 84-822560A7 only. |

- When use with 2 to 4 Pin Adapter Harness (84-822560A12)

Section 5 - SmartCraft and Digital Throttle & Shift

| | |
|---|--|
| Adapter Harness | 84-822560A13 |
|  5826 | Data link harness between engine and Computer Diagnostic System (CDS). |
| Adapter harness | 84-822560A14 |
|  25724 | Data link harness between the engine and the Computer Diagnostic System (CDS). |
| CAN 1 Diagnostic Cable | 84-892663 |
|  4680 | Connects into a junction box or male to male adapter cable for Command Module configuration. Not for use with DDT. |
| Adapter Harness | 84-899150T01 |
|  22175 | Data link harness between the engine ECM and the Computer Diagnostic System (CDS). |

Notes:

Section 6 - Sport Jet Pump Models

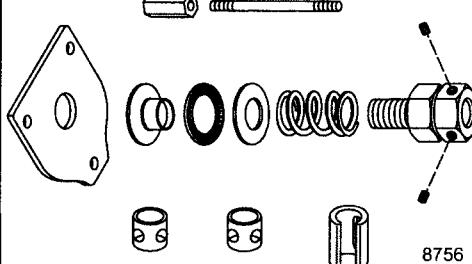
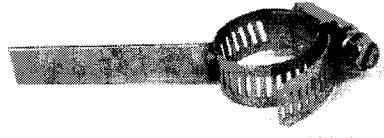
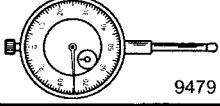
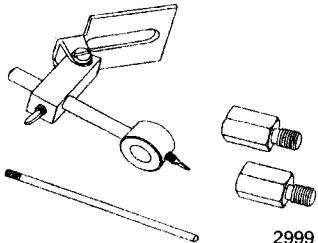
Table of Contents

| | | | |
|--|-----|---------------------------|-----|
| Sport Jet Pump Tool Application Chart..... | 126 | Sport Jet Pump Tools..... | 127 |
|--|-----|---------------------------|-----|

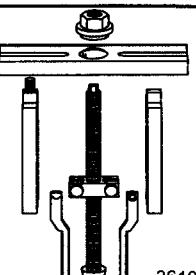
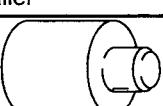
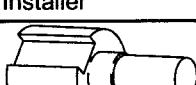
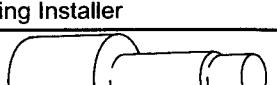
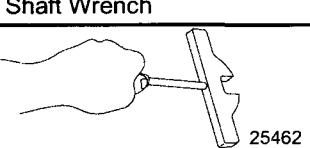
Sport Jet Pump Tool Application Chart

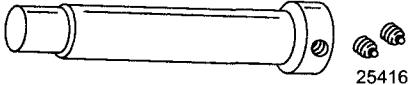
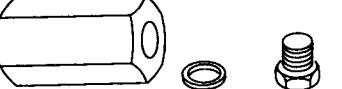
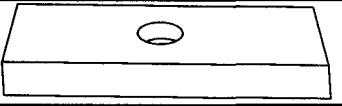
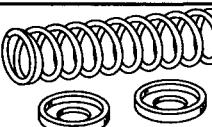
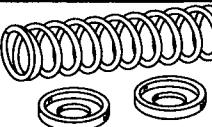
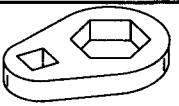
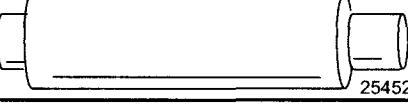
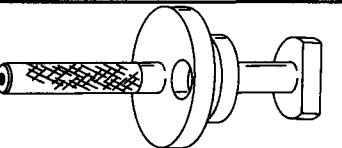
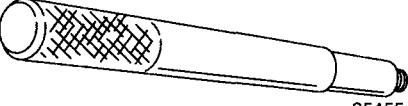
| Part Number | Description | 90/120 | 95XR/120XR | 120XR ² /175XR ² /210M ² 240M ² /200 OptiMax | 250 OptiMax |
|-------------|----------------------------------|--------|------------|---|-------------|
| 22-820573 | Flushing Adapter | X | X | | |
| 91-14311A04 | Bearing Preload Tool | X | X | X | X |
| 91-34569A1 | Slide Hammer | X | X | X | X |
| 91-53459 | Backlash Indicator Rod | X | X | X | X |
| 91-58222A1 | Dial Indicator | X | X | X | X |
| 91-83155 | Dial Indicator Adapter | X | X | X | X |
| 91-83165T | Bearing Puller Assembly | X | X | X | X |
| 91-820552 1 | Bearing Installer | X | X | | |
| 91-820554 | Seal Installer | X | X | | |
| 91-820555 | Seal Installer | X | X | | |
| 91-820556 | Bearing Cup Installer | X | X | | |
| 91-820557 | Bearing Installer | X | X | | |
| 91-820558 | Bushing Installer | X | X | | |
| 91-820559 | Seal Installer | X | X | | |
| 91-820657 | Impeller Shaft Wrench | X | X | | |
| 91-824827A1 | Pinion Shaft Pre-load Kit | X | X | | |
| 91-824869A1 | Thread Extending Kit | X | X | X | X |
| 91-824870 | Puller Bar | X | X | X | X |
| 91-824871A1 | Impeller Shaft Pre-load Kit | X | X | | |
| 91-824871A2 | Impeller Shaft Pre-load Kit | | | X | X |
| 91-824872T1 | Impeller Nut Wrench | X | X | | |
| 91-824886 | Bushing Installer | X | X | | |
| 91-824890T | Pinion Gear Height Location Tool | X | | | |
| 91-824892 | Driver Handle | X | X | X | X |
| 91-827983T | Bearing Installer | X | X | | |
| 91-830103 | Impeller Shaft Seal Protector | | X | | |
| 91-831897 | Pinion Gear Height Location Tool | | X | X | |
| 91-832016T | Bearing Installer | | X | X | |
| 91-832017 | Bearing Installer | | X | X | X |
| 91-832018 | Bearing Cup Installer | | X | X | X |
| 91-832019T | Seal Installer | | X | X | |
| 91-832093A1 | Impeller Shaft Wrench | | X | X | X |
| 91-850233 | Seal Protector | | X | X | X |
| 91-850297 | Impeller Nut Socket | | X | X | X |
| 91-850831 | Bushing Installer | | X | X | X |
| 91-882758 | Pinion Gear Height Location Tool | | | | X |

Sport Jet Pump Tools

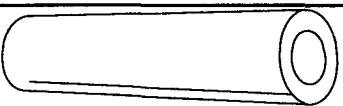
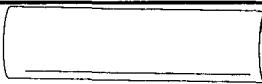
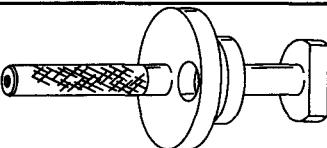
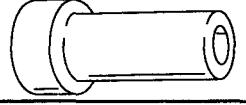
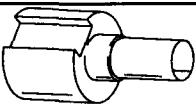
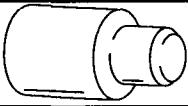
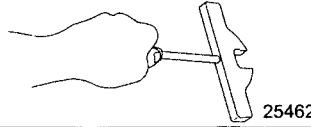
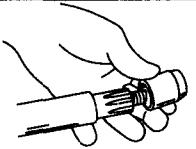
| | |
|---|--|
| Flushing Adapter | 22-820573 |
|  | Adapts the water inlet hose fitting when flushing the cooling system. |
| Bearing Preload Tool | 91-14311A04 |
|  | Simulates a load on the driveshaft for accurate pinion height and backlash measurements. |
| Slide Hammer | 91-34569A 1 |
|  | Aids in the removal of various engine components. Use with puller jaws. |
| Backlash Indicator Rod | 91-53459 |
|  | Aids in checking gear backlash. |
| Dial Indicator | 91-58222A1 |
|  | Used to obtain a variety of measurements including gear backlash, pinion gear location, and TDC. |
| Dial Indicator Adapter | 91-83155 |
|  | Dial indicator holding fixture. |

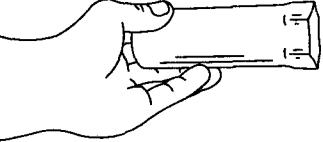
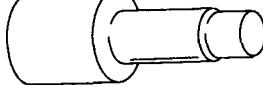
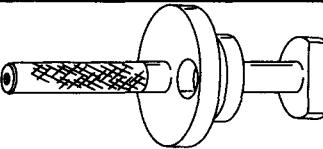
Section 6 - Sport Jet Pump Models

| | |
|---|---|
| Bearing Puller Assembly | 91-83165T |
|  | Removes bearings, races and bearing carriers |
| Bearing Installer | 91-820552 1 |
|  | Installs a ball bearing onto a large outside diameter shaft. |
| Seal Installer | 91-820554 |
|  | Installs the stator seals. |
| Seal Installer | 91-820555 |
|  | Installs the ring guide onto the drive housing cover. |
| Bearing Cup Installer | 91-820556 |
|  | Installs the bearing cup into the pinion shaft housing and drive housing cover. |
| Bearing Installer | 91-820557 |
|  | Installs a ball bearing into the drive housing. |
| Bushing Installer | 91-820558 |
|  | Installs the stator bushing. |
| Seal Installer | 91-820559 |
|  | Installs the impeller shaft seals into the drive housing. |
| Impeller Shaft Wrench | 91-820657 |
|  | Secures the impeller shaft when removing or installing the impeller nut. |

| | |
|---|--|
| Pinion Shaft Pre-load Kit | 91-824827A1 |
|  25416 | Adapter that installs over the pinion shaft when checking the pinion gear height. |
| Thread Extending Kit | 91-824869A1 |
|  25439 | Extends the reach for the dial indicator kit when checking gear lash. |
| Puller Bar | 91-824870 |
|  25454 | Aids in pulling the drive housing seals out. |
| Impeller Shaft Pre-load Kit | 91-824871A1 |
|  25417 | Applies a pre-load to the impeller shaft when checking gear lash. |
| Impeller Shaft Pre-load Kit | 91-824871A2 |
|  25417 | Applies a pre-load to the impeller shaft when checking gear lash. |
| Impeller Nut Wrench | 91-824872T1 |
|  25436 | Aids in the removal, installation, and torquing of the impeller nut. |
| Bushing Installer | 91-824886 |
|  25452 | Installs the reverse gate bushings. |
| Pinion Gear Height Location Tool | 91-824890T |
|  25440 | Aids in determining the exact pinion gear height location. |
| Driver Handle | 91-824892 |
|  25455 | Threaded driver handle used to assist in the installation of seals, bearings and cups. |

Section 6 - Sport Jet Pump Models

| | |
|---|---|
| Bearing Installer | 91-827983T |
|  25453 | Installs the taper roller bearing onto the pinion shaft. |
| Impeller Shaft Seal Protector | 91-830103 |
|  25437 | Protects the impeller shaft seal during installation. |
| Pinion Gear Height Location Tool | 91-831897 |
|  25440 | Aids in determining the exact pinion gear height location. |
| Bearing Installer | 91-832016T |
|  25442 | Installs the bearings and seals into the pinion shaft housing. |
| Bearing Installer | 91-832017 |
|  25446 | Installs a ball bearing into the drive housing. |
| Bearing Cup Installer | 91-832018 |
|  25450 | Installs the bearing cup into the pinion shaft housing and drive housing cover. |
| Seal Installer | 91-832019T |
|  25449 | Installs the pinion shaft seals into the drive housing. |
| Impeller Shaft Wrench | 91-832093A1 |
|  25462 | Secures the impeller shaft when removing or installing the impeller nut. |
| Seal Protector | 91-850233 |
|  25456 | Protects the impeller shaft seal during installation. |

| | |
|---|---|
| Impeller Nut Socket | 91-850297 |
|  | Aids in the removal, installation, and torquing of the impeller nut. 25463 |
| Bushing Installer | 91-850831 |
|  | Installs the stator bushings and seals. 25447 |
| Pinion Gear Height Location Tool | 91-882758 |
|  | Aids in determining the exact pinion gear height location. 25440 |

