



| Parts List | | | | | | |
|------------|-------|----------|------------------------------|-----|---------------------------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | 2115 | 6462 | COWL, BOTTOM | 1 | | |
| 2 | | 52862A | DRIP TRAY ASSEMBLY, BOTTOM | 1 | | |
| 3 | | 37940 | PAD, SOUND - DRIP TRAY | 1 | | |
| 4 | 10 | 48408 | SCREW, DRIP TRAY TO BOTTOM | 4 | | |
| 5 | 32 | 34395A | HOSE, DRIP TRAY TO BOTTOM (| 1 | | |
| 6 | | 39616 | CONTROL CABLES - BOT | 1 | | |
| 7 | | 76369 | SPACER, BOTTOM COWL (COWL | 1 | | |
| 8 | 10 | 48591 | SCREW, SPACER TO BOTTOM C | 2 | | |
| 9 | | 37637 | BOOT, FUEL CONNECTOR - BOT | 1 | | |
| 10 | | 37445 | SUPPORT, WIRING HARNESS - E | 1 | | |
| 11 | 10 | 69029 | SCREW, SUPPORT TO BOTTOM | 2 | | |
| 13 | 32 | 34395A | HOSE | 1 | TELL TALE - EXHAUST COVER | |
| 14 | | 52889 | NOZZLE, TELL TALE HOSE TO B | 1 | | |
| 15 | 10 | 48408 | SCREW | 1 | TELL TALE NOZZLE TO BOTTO | |
| 16 | 22 | 78279 | ELBOW, TELL TALE HOSE TO Cy | 1 | | |
| 17 | | 60304A54 | SHIFT SHAFT ASSEMBLY, UPPEF | 1 | | |
| 18 | 23 | 26600 | BUSHING, SHIFT SHAFT | 1 | | |
| 20 | | 48047A | LINK ROD ASSEMBLY | 1 | | |
| 21 | 12 | 35462 | WASHER, LINK ROD | 2 | | |
| 22 | 11 | 36069 | NUT, LINK ROD | 2 | | |
| 23 | 13 | 29720 | WASHER, WAVE - LINK ROD | 1 | | |
| 24 | | 52732 | BRACKET, ANCHOR - CONTROL | 1 | | |
| 25 | | 39519 | CAP, BARREL RETAINER - ANCH | 1 | | |
| 26 | | 39618 | LEVER, NYLON - SHIFT CABLE L | 1 | | |
| 27 | 17 | 47175 | PIN, LOCKING LEVER AND COVE | 3 | | |
| 28 | | 39667 | COVER, NYLON - SHIFT CABLE | 1 | | |
| 29 | | 65799 | LINK, LOCKING LEVER TO COVEI | 1 | | |
| 30 | 10 | 24234 | SCREW | 3 | ANCHOR BRACKET TO CYLINDE | |
| 31 | 24 | 20099 | SPRING, LINK ROD TO GUIDE BL | 1 | | |
| 32 | | 37896 | GUIDE BLOCK, LINK ROD | 1 | | |
| 33 | | 52100 | WEAR PLATE, LINK ROD | 1 | | |
| 34 | | 38279 | LATCH | 1 | CONTROL CABLE FASTENING - | |