



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1623	6053A15	GEAR HOUSING ASSY. COMP.(L)	1	SEE NOT BELOW UNITED STA	
-	1655	7333A24	GEAR HOUSING ASSY. COMP.(L)	1	SEE NOTE BELOW UNITED STA	
-	1655	7333A26	GEAR HOUSING ASSY. COMP. (E	1	SEE NOTE BELOW UNITED ST,	
1	1623	6053A 5	GEAR HOUSING ASSY.	1	UNITED STATES 5168573 AND I	
1	1655	7333A23	GEAR HOUSING ASSY	1	UNITED STATES 5168574 AND I	
49		54346	CAM, SHIFT	1	UNITED STATES 5168573 AND I	
49		76039	CAM, SHIFT	1	UNITED STATES 5168574 AND I	
50		30625	FOLLOWER, CAM	1		
51		30624	SLIDE, CROSS PIN	1		
52	24	30622	SPRING, COMPRESSION - CAM	1		
53	15	30923A 1	SHIM	AR	BEARING OUTER RACE TO HOL 4	
54	31	30894A 1	TAPERED ROLLER BEARING A	1		
55	31	30895	BEARING, ROLLER - FORWARD	1		
56	43	68447	FORWARD GEAR	1		
57	52	34239	RATCHET, SLIDING GEAR	1		
58	17	30632	PIN, CROSS - RATCHET TO PR	1		
59	24	30893	SPRING, RETAINING - CROSS F	1		
60	44	52542	SHAFT, PROPELLER	1		
61	43	76250	REVERSE GEAR	1		
62	12	76805	WASHER	1	THRUST - BEARING CARRIER T	
63	25	29976	"O"RING, BEARING CARRIER	1		6
64		77520A 1	BEARING CARRIER ASSEMBLY	1		
65	31	30956	BEARING ROLLER - BEARING	1		
66	26	76868	OIL SEAL, BEARING CARRIEF	2		
67	28	30281	KEY, LOCATING - BEARING CAF	1		
68	14	52700	TAB WASHER, GEAR HOUSING	1		
69		52699	COVER, GEAR HOUSING	1		
70		31640A 1	TRIM TAB, GEAR HOUSING	1		
71	10	66024	SCREW, TRIM TAB TO GEAR H	1		
72	12	45176	WASHER	2	GEAR HOUSING TO DRIVE SHA	
73	11	34933	NUT	2	GEAR HOUSING TO DRIVE SHA	
74	10	65210	SCREW	1	GEAR HOUSING TO DRIVE SHA	
74	10	77167	SCREW	1	GEAR HOUSING TO DRIVE SHA	
75		75282	THRUST HUB AND WASHER AS:	1		
76	14	31210	TAB WASHER, PROPELLER NUT	1		
77	11	52707	NUT, PROPELLER	1		
-	27	60476A75	GASKET SET			