



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		76509A 3	TRIM CYLINDER ASSEMBLY	2		
1A	22	74036	GREASE FITTING	2		
2	10	45265	SCREW, BLEED - SHOCK CYLIN	4		
3	25	45016	"O" RING, SHOCK CYLINDER B	4		
4	10	45264	SCREW	2	SHOCK CYLINDER TO LOWER S	
5	23	45280	SPACER, SHOCK CYLINDER - LO	2		
6	23	45281	BUSHING, RUBBER - SHOCK CYL	2		
7		66084	BRACKET, MOUNTING - SHOCK C	1		
8	10	45263	SCREW	2	MOUNTING BRACKET TO UPPE	
9	10	68298	BOLT	4	MOUNTING BRACKET TO BOAT	
10	12	68410	WASHER, MOUNTING BRACKET	4		
11	11	68411	NUT, MOUNTING BRACKET BOL	4		
12		45196A 2	BRACKET ASSEMBLY	1	MOUNTING - SHOCK CYLINDER	
13	26	70608	OIL SEAL, STARBOARD MOUN	1		
14		45286	PLUNGER, LIMIT SWITCH ACTU	1		
15	24	45272	SPRING, TENSION - LIMIT SWIT	1		
16	16	45282	STUD, MOUNTING BRACKET AN	1		
17	13	26993	LOCKWASHER	2	MOUNTING BRACKET TO CLAM	
18	11	28770	NUT	2	MOUNTING BRACKET TO CLAM	
19	10	45328	SCREW	2	SHOCK CYLINDER TO MOUNTIN	
20	12	37807	WASHER	1	SHOCK CYLINDER SCREW (STA	
21	11	20696	NUT, SHOCK CYLINDER SCREW	2		
22	24	24390	SPRING, TENSION - ADJUSTING	1		
23	16	21085	STUD, ADJUSTING - CUT-OUT LI	1		
24	11	45812	NUT, JAM - LIMIT SWITCH ADJU	1		
25		45508	CAM, LIMIT SWITCH ADJUSTING	1		
26		45509	PLATE, RETAINING - LIMIT SWIT	1		
27	10	68513	SCREW	1	RETAINING PLATE AND CAM TO	
28	13	26996	LOCKWASHER, RETAINING PLA	1		
29		45326A 2	SWITCH ASSEMBLY, CUT-OUT L	1		
30	23	45354	BUSHING, RUBBER - CUT-OUT	1		
31	10	47255	SCREW	2	CUT-OUT LIMIT TO MOUNTING	
32		45287	COVER, LIMIT SWITCH	1		
33	27	45275	GASKET, LIMIT SWITCH COVER	1		
34	10	24942	SCREW	5	LIMIT SWITCH COVER TO MOUN	
35		45289	COVER, INLET - TRANSOM	1		
36	27	45274	GASKET, INLET COVER	1		
37	25	45507	GROMMET, RUBBER - INLET CO	1		
38	10	32866	SCREW, INLET COVER TO BOAT	4		
39	12	20878	WASHER, INLET COVER SCREW	4		
40	11	28488	NUT, INLET COVER SCREW	4		