



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	258	8274A 6	FLYWHEEL ASSEMBLY	1		
2		97359A 1	SCREW, FLYWHEEL TO CRANKE	1		
3	12	86496	WASHER, FLYWHEEL SCREW	1		
4	43	99301	RING GEAR, FLYWHEEL - ELECT	1		
5	10	40039106	SCREW, RING GEAR TO FLYWHI	4		
6	464	8697A 2	CRANKSHAFT ASSEMBLY	1		
7		99538	SEAL, CRANKSHAFT	1		15
8	26	85107	OIL SEAL, CRANKSHAFT (LOWEF	1		
9	31	85113	ROLLER BEARING, CRANKSHAF	1		
10	31	85114	ROLLER BEARING, CRANKSHAF	1		
11	26	85974	OIL SEAL, CRANKSHAFT (UPPER	1		
12		86992A 2	BEARING ASSEMBLY, CENTER N	1		
13	28	20094	KEY, FLYWHEEL DRIVE	1		
14	767	8511A 3	PISTON AND PIN ASSEMBLY	2		
15	40	47276	LOCK RING, PISTON PIN	4		
16	39	96525A12	PISTON RING ASSEMBLY	1		
17	630	8835A 2	CONNECTING ROD ASSEMBLY	2		
18	29	98295	NEEDLE BEARING, PISTON EN	54		
19		42025	BEARING, LOCATING - NEEDLE	4		
20	31	41620A 1	ROLLER BEARING ASSEMBLY	2		
21	10	40082 25	SCREW, CONNECTING ROD (2	4		
--	27	41499A84	GASKET SET	--	CONTENTS INDICATED BY FOO	
--		90885A84	POWERHEAD ASSEMBLY, COMF	--	INCLUDES CYLINDER BLOCK AI	