



110 4-stroke Outboard Oil (92-828000A12)

A = TO TELL TALE B = TO VAPOR SEPERATOR C = TO FUEL COOLER D = TO AIR HANDLER
 E = TO ADAPTOR PLATE F = TO STRAINER IN TOP OF BLOCK G = TO FUEL COOLER

FUEL RAILS

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		828123A 9	AIR COMPRESSOR	1	(S/N-0G911719 & BELOW) (SEE I	
1		828123A14	AIR COMPRESSOR	1	(S/N-0G911720 & UP) (SEE BRE	
2	10	855939 12	SCREW (M6 X 12)	5		
3		832823 1	PULLEY	1		
4	10	818934 50	SCREW (M8 X 50)	4		
5		852394T 5	FUEL RAIL (PORT)	1	(SEE BREAKDOWN ON FUEL R/	
6		850065A 5	INJECTOR	6		1
7	12	828694A 1	CUPPED WASHER	6		3
8	54	816311	STA-STRAP	1		
9	32	852512 2	HOSE - FUEL/AIR BALANCE	2		
10	23	856869 53	INSULATING SLEEVE (27 IN.)	1		
11		852395T 5	FUEL RAIL (STBD.)	1	(SEE BREAKDOWN ON FUEL R/	
12	32	830756109	TUBING (4-1/2 IN.)	1		
13	21	826810	CHECK VALVE	1		
14	32	856829 23	TUBING (9 IN.)	1		
15	54	816311	STA-STRAP	4		
16	32	856839	TUBING	1		
17	10	821045 10	SCREW (M5 X 10)	4		
18	54	46997	CLAMP	4		
19	16	858778	STUD (M10 X 91)	4		1
20	11	826292	NUT	4		
21	32	856830 2	HOSE - FUEL SUPPLY	1		
22	23	856869 53	INSULATING SLEEVE (27 IN.)	1		
23	32	854667 55	HOSE (2 IN.) - FUEL RETURN	1		
24	32	856820 1	HOSE	1	(S/N-0G911719 & BELOW)	
25	32	858339 35	HOSE	1	(S/N-0G911720 & UP)	
26	32	856952	TUBING - AIR DUMP	1		
27	54	850241	CLAMP (14.0)	2		
28	54	855697	CLAMP	4		
29	54	856880	CLAMP (15.3)	9		
30	32	856763 1	HOSE-AIR SUPPLY	1		
31	23	856876 31	INSULATING SLEEVE (16 IN.)	1		
32	22	856741 1	FITTING	1		
-		854198A99	POWERHEAD	1	(200)	
-		854199A99	POWERHEAD	1	(225)	