



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	415	2295	CRANKSHAFT	1,1		
2	30	20464	BEARING, BALL - CRANKCASE (L	1,1		
3	26	31507	OIL SEAL, CRANKCASE (LOWER)	2,2		
4	23	33736	SPACER, PROTECTOR - CRANKS	1,1		
5	534	3267A 2	CENTER MAIN BEARING ASSEMI	1,1		
6	17	20032	DOWEL PIN, CENTER MAIN BE	10,10		
7	10	45775	SCREW, CETNER MAIN BEARII	2,2		
8	11	45774	NUT, CENTER MAIN BEARING	2,2		
9	34	20888A 1	REED SET, CENTER MAIN BEAR	1,1		
10	34	32038	REED STOP, MAIN BEARING BEA	4,4		
11	10	29465	SCREW, REED STOP MOUNTING	4,4		
12	11	29469	NUT, REED STOP MOUNTING SC	4,4		
13	17	20032	DOWEL PIN, MAIN BEARING TO	1,1		
14	28	20094	KEY, FLYWHEEL	1,1		