



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		48098A 3	FUEL PUMP ASSEMBLY	1,	
2	21	22974A 4	CHECK VALVE ASSEMBLY	1,	
3		47988A 1	DIAPHRAGM KIT	1,	4
4			GASKET, FUEL PUMP	2,	4
5		48099	COVER, FUEL PUMP	1,	
6	10	48637	SCREW, FUEL PUMP TO COVER	4,	
7		53238A 3	FUEL PUMP ASSEMBLY	1,1	
8	21	30430A 2	CHECK VALVE ASSEMBLY	1,1	
9		53245A 1	DIAPHRAGM KIT, FUEL PUMP	1,1	4
10			GASKET, FUEL PUMP TO B	1,1	4
11			GASKET, FUEL PUMP	2,2	4
12		53241	BASE, FUEL PUMP	1,1	
13		53545	COVER, FUEL PUMP	1,1	
14	10	32627	SCREW, FUEL PUMP TO BASE (1	4,4	
--	12	20128	WASHER, FUEL PUMP SCREWS	4,4	
15	32	47452	FUEL LINE, FUEL PUMP TO CAR	1,	
15	32	54429	FUEL LINE, FUEL PUMP TO CAR	1,1	
16		53544	BRACKET, FUEL PUMP TO CRAN	1,	
16		53544	BRACKET, FUEL PUMP TO CRAN	1,1	
17	10	29200	SCREW, BRACKETE TO FUEL PL	2,2	
18	10	45862	SCREW, FUEL PUMP BRACKET	1,1	
19	11	46438	NUT, FUEL PUMP BRACKET SCR	1,1	
20	22	22995	FITTING, INLET - FUEL PUMP	1,1	
21	22	22946	SLEEVE, RUBBER - FUEL PUMP	1,1	
22	22	22948	NUT, FUEL PUMP INLET FITTIN	1,1	
23	32	48019	FUEL LINE, INLET - ADAPTOR TC	1,1	
24		30188	CUP WASHER, ADAPTOR	1,1	
25	24	23067	SPRING, ADAPTOR STEM	1,1	
26	25	20415	"O" RING, ADAPTOR STEM	1,1	4
27		23069	STEM, CHECK UNIT ADAPTOR	1,1	
28		22833	ADAPTOR, CHECK UNIT	1,1	
29	10	20784	SCREW, CHECK UNIT ADAPTOR	2,2	
30	11	20361	NUT, CHECK UNIT ADAPTOR SC	2,2	
31	22	33373	ELBOW, HOSE TO FUEL PUMP A	3,	
32	32	48638	HOSE, FUEL PUMP TO CYLINDE	2,	
33	54	20387	CLAMP, FUEL PUMP HOSE TO EL	4,	
34	22	34579	ELBOW, HOSE TO CYLINDER BL	1,	
35	22	54089	ELBOW, HOSE TO FUEL PUMP (2	1,1	
36	32	48638	HOSE, FUEL PUMP TO CYLINDE	2,2	
37	22	53553	ELBOW, HOSE TO CYLINDER BL	1,1	
38	54	20387	CLAMP, FUEL PUMP HOSE TO EL	4,4	