



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	398	3297A 1	STATOR PLATE ASSEMBLY, COM	1,1	FOR ADDITIONAL PARTS OF A-	
1	398	2221	STATOR PLATE AND CORE	1,1		
2	398	2568A 1	COIL ASSEMBLY	2,2		
3	398	2321	CLIP, COIL RETAINING	1,1		
4	398	2413	CLIP, COIL RETAINING	1,1		
5	398	2207	FELT, CAM - BREAKER	1,1		
6	398	732	CLIP, GROUND WIRE LEAD	2,2		
7	10	21130	SCREW, GROUND TERMINAL	2,2		
8	398	2203	CONDENSER ASSEMBLY	2,2		
9	10	38395	SCREW, CONDENSER FASTEN	1,1		
10	10	21136	SCREW, CONDENSER FASTEN	1,1		
11	13	21134	LOCKWASHER, CONDENSER F	2,2		
12	12	21135	WASHER, CONDENSER FASTE	2,2		
13		22789	"D" WASHER, COIL LEAD WIR	1,1		
14	54	24836	CLAMP, LEAD WIRE	1,1		
15	11	21923	NUT, LEAD WIRE CLAMP SCRE	1,1		
16	398	2320	BREAKER ASSEMBLY	2,2		
17	10	33988	SCREW/LOCKWASHER, BREAK	2,2		
18	12	21135	WASHER, TERMINAL SCREW	2,2		
19	13	21134	LOCKWASHER, TERMINAL SCF	2,2		
20	11	21923	NUT, TERMINAL SCREW	2,2		
21	398	3419	GROUND LEAD, STATOR TO T	1,1		
22	398	3420	GROUND LEAD, STATOR TO T	1,1		
23	23	49097	SLEEVE, INSULATION - GROUN	1,1		
24	398	3418	LEAD WIRE	1,1		
25	398	3417	LEAD WIRE - TOP	1,1		
26		47604A 1	PROTECTOR, SPARK PLUG	2,2		
27		20623	MARKET, "TOP" - LEAD WIRE	1,1		
28	33	39635	SPARK PLUG, (CHAMPION - L4J)	2,2		
29	398	2208	COVER, DUST - STATOR PLATE	1,1		
30	10	36455	SCREW, DUST COVER TO STATI	2,2		