



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1627	6006A 3	GEAR HOUSING ASSEMBLY, CO	1	(SHORT SHAFT)	
-	1627	6006A 4	GEAR HOUSING ASSEMBLY, CO	1	(LONG SHAFT)	
-	1627	6006A15	GEAR HOUSING ASSEMBLY, CO	1	(SHORT SHAFT)	
-	1627	6006A16	GEAR HOUSING ASSEMBLY, CO	1	(LONG SHAFT)	
1	1627	6006A 5	GEAR HOUSING ASSEMBLY	1		
2	17	20201	PIN	1	DOWEL-GEAR HOUSING TO DR	
3	16	58137	STUD, WATER PUMP TO GE	3		
4	16	58135	STUD	1	GEAR HOUSING TO DRIVE SHA	
5	32	28157	BEARING, ROLLER-DRIVE SH	1		
6	45	75036A 1	DRIVE SHAFT ASSEMBLY (SHOR	1	UNITED STATES 5606491 AND I	
6	45	75035A 1	DRIVE SHAFT ASSEMBLY (LONG	1	UNITED STATES 5606491 AND I	
6	45	88094A 1	DRIVE SHAFT ASSEMBLY (SHC	1	UNITED STATES 5606492 AND I	
6	45	88093A 1	DRIVE SHAFT ASSEMBLY (LON	1	UNITED STATES 5606492 AND I	
7	14	49911	TAB WASHER, PINION GEAR	1		
8	10	49908	SCREW, PINION GEAR TO DF	1		
9	43	45189	GEAR, PINION	1		
10	10	28634	SCREW, GREASE FILER (1/4")	1		
11	12	20260	WASHER, GREASE FILLER SCF	1		
12	19	48750	PLUB, GEAR HOUSING FLUSHI	1		
13	12	49221	WASHER,	1	NEOPRENE-GEAR HOUSING FL	
14	10	28653	SCREW, GREASE VENT (1/4")	1		
15	12	20262	WASHER, GREASE VENT SCRE	1		
16		56829A 1	SHAFT ASSEMBLY, SHIFT-LOW	1		
16		56830A 1	SHAFT ASSEMBLY, SHIFT-LOW	1		
17	25	38933	"O" RING, LOWER SHIFT SHA	1		11
18	53	22899	RING, RETAINING-SHIFT SHA	1		
19	23	30676A 1	BUSHING ASSEMBLY, SHIFT SI	1		
20	25	26802	"O" RING, SHIFT SHAFT BUS	1		11
21	23	30696	OIL SEAL, SHIFT SHAFT BUSI	1		
22	10	39149	SCREW, SHIFT SHAFT BUSING	1		
23	15	20804A 1	SHIM, BALL BEARING TO GE	AR		7
24	30	47158	BEARING, BALL-DRIVE SHAFT	1		
25	53	33463	RING, RETAINING-BALL BEARI	1		
26	15	20804A 1	SHIM	AR	GEAR HOUSING TO WATER PU	7
27	27	39626	GASKET	1	WATER PUMP BASE TO GEAR H	11
28	25	33466	"O" RING, WATER PUMP BASE	1		11
29	46	48744A 1	WATER PUMP BASE ASSEMBL	1		
30	26	20070	OIL SEAL, WATER PUMP BAS	1		
31	26	33467	OIL SEAL, WATER PUMP BAS	1		
32	17	35973	PIN	2	DOWEL-WATER PUMP BASE TO	
32	27	39626	GASKET	1	WATER PUMP BASE TO FACE U11	