



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		815067	STARTER HOUSING	1	(BLACK)	
1		95244	STARTER HOUSING	1	(MARINER GRAY)	
2	10	815068	SCREW	1		
3		95251	PLUG	1		
4	50	12066A 9	STARTER ROPE	1		
5		95249	HANDLE	1		
6	24	95284	SPRING	1		
7		95245	STARTER SHEAVE	1		
8		95246	RATCHET	1		
9	24	95315	SPRING	1		
10		95247	COVER	1		
11	24	95316	SPRING	1		
12		95248	FRICTION PLATE	1		
13	12	95317	THRUST WASHER	1		
14	53	95318	E-RING	1		
15		95250	PULLEY	1		
16	10	16828	SCREW	3		
17	13	16818	LOCKWASHER	3		
18	262	9155	FLYWHEEL MAGNETO	1	CASTING # FOT0137	
19	262	9184	FLYWHEEL	1	CASTING # FOT0137	
20		95239	BASE	1	CASTING # FOT0137	
21		95241	EXCITER COIL	1	CASTING # FOT0137	
22		95240	CONDENSER	1	CASTING # FOT0137	
18	262	811595	FLYWHEEL MAGNETO	1	CASTING # FOT30071	
19	262	811596	FLYWHEEL	1	CASTING # FOT30071	
20		811597	BASE	1	CASTING # FOT30071	
21		811599	EXCITER COIL	1	CASTING # FOT30071	
22		811598	CONDENSER	1	CASTING # FOT30071	
23	10	95311	SCREW	1	CASTING # FOT30071	
24	10	95313	SCREW	1	CASTING # FOT30071	
25		95237	BREAKER	1	CASTING # FOT30071	
26	10	95310	SCREW	2	CASTING # FOT30071	
27	10	16821	SCREW	1	CASTING # FOT30071	
28		95242	IGNITION COIL	1		
29	10	95314	SCREW	2		
30	13	16818	LOCKWASHER	2		
31	33	19796	SPARK PLUG	1	(NGK# BPR-6HS-10)	
32	85	95282A 1	CAP KIT	1		1
33	87	823037A 1	STOP SWITCH ASSEMBLY	1		1