



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	11	20696	NUT,FLYWHEEL	1	
2	12	36245	WASHER,FLYWHEEL NUT	1	
3	25	62701	"O"RING,FLYWHEEL NUT	1	9
4	28	20094	KEY	2	
5		NLA	FLYWHEEL ASSEMBLY	1	
6	13	35629	WAVE WASHER	1	
7		NLA	CAM,BREAKER	1	
8	336	3962A 4	STATOR ASSEMBLY	1	
9	10	69560	SCREW,STATOR TO END CAP	4	
10	336	3980A 1	HOUSING ASSEMBLY,CONTACT	1	
11	336	4318A 2	BREAKER ASSEMBLY	1	
12	10	56266	SCREW	2	
13		56316A 1	CABLE ASSEMBLY	1	
14		38938	BOOT	1	
15	336	3989	WICK	1	
16	336	3981	INSULATOR	1	
17	11	56325	NUT	1	
18	336	4429	HOLDER,CONTACT HOUSING	1	
19		NLA	COVER ASSEMBLY	1	
20		NLA	SCREW,COVER	2	
21	12	56077	WASHER	1	
22		NLA	WAVE WASHER	1	
23	54	26550	CLIP	2	
24	10	62568	SCREW,CLIP	2	
25		69205	"C" WASHER,LIP SCREW	2	
26		56520	THROTTLE CAM	1	
27	10	69054	SCREW,THROTTLE CAM	2	
28	12	37998	WASHER,THROTTLE CAM SCRE	1	
29		NLA	THROTTLE LINK	1	
30	10	34696	SCREW,THROTTLE LINK	1	
31	12	34392	WASHER,THROTTLE LINK SCRE	4	
32	13	29720	WAVE WASHER, THROTTLE LIN	2	
33	11	28656	NUT,THROTTLE LINK SCREW	2	
34		NLA	SCREW,THROTTLE LINK	1	
35	54	24836	CLIP	1	
36		69205	"C" WASHER	1	
37		56757A 1	JUMPER WIRE ASSEMBLY	1	
38	10	69014	SCREW,JUMPER WIRE	1	
39	336	4409A 2	IGNITION COIL ASSEMBLY	1	
40	13	26396	LOCKWASHER	2	
41	11	45076	NUT	2	