



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	187	7711A 4	BOTTOM COWL	1		
2		36187A 1	LEVER ASSEMBLY, CLAMPING - PI	1		
3		36188A 1	LEVER ASSEMBLY, CLAMPING - :	1		
4	53	55891	FASTENER, CLAMPING LEVER	2		
5	84	60871A 7	GROUND STRAP ASSEMBLY	1		
6	24	63399	SPRING, GROUND STRAP	1		
7	23	26819	BUSHING, NYLON - CLAMPING LI	4		
8	23	31293	BUSHING, RUBBER - CLAMPING	2		
9	17	58997	ROLL PIN - CLAMPING LEVER	2		
10	10	79953	SCREW, BOTTOM COWL FLUSHI	1		
11	12	20260	WASHER, BOTTOM COWL FLUSI	1		
12		56712	NOZZLE, TELL TALE	1		
13	10	35519	SCREW, TELL TALE NOZZLE TO	1		
14	32	34395A 1	TUBE, TELL TALE (7-1/4")	1		
15	22	99664	ELBOW, TELL TALE - HOSE TO C	1		
16	27	89937	GASKET	1	POWERHEAD TO BOTTOM COV	3
17	27	55847	GASKET	1	EXHAUST RELIEF COVER TO B	3
18		55936	COVER, EXHAUST RELIEF	1		
19	10	69079	SCREW	9	EXHAUST RELIEF COVER TO B	
20	87	69508A31	STOP SWITCH ASSEMBLY - PUS	1		
21	87	99525A 1	COVER ASSEMBLY	1	STOP SWITCH - PUSH BUTTON	
22	13	69845	LOCKWASHER	1	STOP SWITCH - PUSH BUTTON	
23	11	69844	NUT, STOP SWITCH - PUSH BU	1		
24	87	11083A 9	STOP SWITCH ASSEMBLY - TOG	1		
25		12044	RETAINER - TOGGLE SWITCH	1		
26		86352A54	LANYARD ASSEMBLY - TOGGL	1		
-	27	78139A80	GASKET SET			