



2532

## Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
52	91	14308T 1	BEARING RACE TOOL		SN# USA-0T979999/BEL-0P3254	
52	91	14308T02	BEARING RACE TOOL		SN# USA-0T980000/BEL-0P3254	
53	91	14309T 1	BEARING INSTALLATION		SN# USA-0T979999/BEL-0P3254	
53	91	14309T02	BEARING INSTALLATION		SN# USA-0T980000/BEL-0P3254	
54	91	14310T 1	WEAR SLEEVE INSTALLATION T			
55	91	14311A 2	BEARING, Pre-Load Tool		SN# USA-0T979999/BEL-0P3254	
55	91	14311A04	TOOL, Preload		SN# USA-0T980000/BEL-0P3254	
56	91	78473	BACKLASH INDICATOR TOOL			
57	91	31106T	MANDREL			
58	91	31108T	OIL SEAL DRIVER			
59	91	34569A	SLIDE HAMMER			
60	91	46086A 1	PULLER JAWS			
61	91	37350T	MANDREL			
62	91	56775T	DRIVESHAFT HOLDING TOOL			
63	91	58222A 1	DIAL INDICATOR KIT			
64	91	85716	PULLER BOLT			
65	91	83155	ADAPTER KIT			
66	91	83165T	PULLER ASSEMBLY			
67	91	856875A 1	BEARING INSTALLATION TOOL			
.	91	852151A 1	TOOL KIT			