



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	863	5885A 3	CYLINDER BLOCK AND CRANKC	1	UNITED STATES 4962055 AND I	
1	863	6467A 4	CYLINDER BLOCK AND CRANKC	1	UNITED STATES 4962056 THRL	
1	863	7496A 3	CYLINDER BLOCK AND CRANKC	1	UNITED STATES 5193259 AND I	
2		72038	BRACKET, STARTER MOTOR (I	1		
3	10	73278	SCREW, BRACKET TO CRANKC	2		
4	13	26993	LOCKWASHER, BRACKET SCR	4		
5		76867	COVER, STARTER MOTOR (LO	1		
6	10	73279	SCREW, COVER TO CRANKCA	2		
7		46933A 3	CABLE ASSEMBLY, GROUND	2		
8	17	20032	DOWEL PIN, CYLINDER BLOCK	2		
9	17	20323	DOWEL PIN, CENTER MAIN BE	1	UNITED STATES 5193258 AND I	
10	16	68164	STUD, CARBURETOR MOUNTI	4		
11	16	68165	STUD	2	CRANKCASE TO DRIVE SHAFT I	
12	17	20033	DOWEL PIN, CRANKCASE TO C	2		
13	16	68168	STUD	2	CYL. BLOCK TO DRIVE SHAFT F	
14	16	68166	STUD	2	CYL. BLOCK TO DRIVE SHAFT F	
15	16	68167	STUD	2	CYL. BLOCK TO DRIVE SHAFT F	
16	22	29111	CONNECTOR, TELL TALE-CYLINI	1	UNITED STATES 4962055 AND	
16A	22	78279	ELBOW, TELL TALE-CYLINDER B	1	UNITED STATES 4962056 AND I	
17	10	55511	SCREW, CRANKCASE TO CYLINC	12		
17	10	31984	SCREW, CRANKCASE TO CYLINC	4		
17	10	73275	SCREW, CRANKCASE TO CYLINC	2		
18	12	70132	WASHER, CRANKCASE SCREW	18		
19	10	20359	SCREW, CENTER MAIN BEARINC	1		
19	10	26801	SCREW, MAIN BEARING LOCKIN	2		
21	32	34395A 1	TUBE, BALANCE-MAIN BEARING	1		
22	22	25885	ELBOW, BALANCE TUBE TO CYL	2		
23	21	77561	CHECK VALVE, BLEED HOSE (LO	1		
24	32	54936	HOSSE, CYLINDER BLEED (11")	1		
25	22	65857	CONNECTOR, CYLINDER BLEED	1		
26		73319	INDICATOR, TIMING	1	ELECTRIC	
27	10	39349	SCREW, INDICATOR TO CRANKC	1	ELECTRIC	
28	13	26993	LOCKWASHER, INDICATOR SCR	1	ELECTRIC	