



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	11	20166	NUT, SHEAVE SHAFT (LEFT HAM	1		
2	14	61004	TAB WASHER, SHEAVE SHAFT N	1		
3		77329	HOUSING, STARTER	1		
4	10	32565	SCREW	3	STARTER HOUSING TO CRANK	
5	13	20202	LOCKWASHER, STARTER HOUS	3		
6		37691	PLATE, CABLE GUIDE	1		
7	10	35881	SCREW, DRIVE - CABLE GUIDE	3		
8		61002	RETAINER, STARTER SPRING	1		
9	24	39502A	SPRING, STARTER REWIND	1		
10		76053A	SHEAVE ASSEMBLY	1		
11	23	63100	BUSHING, SPRING GUIDE	1		
12		30596	PAWL, STARTER	3		
13	13	36206	WASHER, WAVE-STARTER PAW	3		
15	23	63061	SPACER, SHEAVE SHAFT	1		
16		39840	RETAINER, WAVE WASHER	1		
17	12	57837	WASHER, WAVE WASHER RETA	1		
18	13	20160	WASHER, WAVE-RETAINER TEN	1		
19	24	66853	SPRING, RETAINER PLATE TO S	1		
19A		66848	RETAINER, SPRING	2		
20		66845	PLATE, RETAINER-STARTER PA	1		
21	12	57860	WASHER, WEAR-SHEAVE SHAF	1		
22		61003	SHAFT, SHEAVE	1		
23	50	28985A	STARTER CABLE ASSEMBLY	1		
23		47341A	STARTER CABLE	1	(FOR MANUAL STARTING OF EL	
24		28747	HANDLE, STARTER CABLE	1	UNITED STATES 4962055 AND I	
25		28748	RETAINER, STARTER CABLE AN	1		
24&2		79470A	HANDLE AND RETAINER ASSEM	1	STARTER CABLE UNITED STA	
26		70969	CABLE, INTERLOCK	1	UNITED STATES 4357640 THRL	
27	10	32228	SCREW	1	INTERLOCK CABLE TO EXHAUS	
28	10	69022	SCREW	1	INTERLOCK CABLE TO STARTE	
29	13	27660	LOCKWASHER, INTERLOCK CAB	1		
30	12	26013	WASHER, INTERLOCK CABLE SC	2		
31		57236	CAM, SLIDING-STARTER HOUSI	1		
32	24	70086	SPRING, SLIDING CAM	1		
33	12	37998	WASHER, INTERLOCK CABLE	1		
34	18	26953	COTTER PIN, INTERLOCK CABLE	1		
35		65757A	TOGGLE ASSEMBLY, STARTER I	1		
36	10	57249	SCREW, TOGGLE TO STARTER I	1		
37	23	26856	BUSHING, TOGGLE SCREW	2		
38	24	57279	SPRING, TOGGLE SCREW	1		
39		76669	CABLE	1	INTERLOCK ALSO USED ON TU	