



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		39082A 4	FUEL PUMP ASSEMBLY	1,1,1		
2	21	22974A 3	CHECK VALVE ASSEMBLY	1,1,1		
3		31503A 1	DIAPHRAGM KIT, FUEL PUMF	1,1,1		4
4			GASKET, FUEL PUMP TO SPAC	1,1,1		4
5	10	29249	SCREW, FUEL PUMP TO SPACEF	4,4,4		
6		39259	SPACER, FUEL PUMP	1,1,1		
7	22	39079	ELBOW, FUEL PUMP TO CARBU	1,1,1		
8	22	33373	ELBOW, FUEL PUMP SPACER TC	1,1,1		
9	32	39484	HOSE, PRESSURE - FUEL PUMP	1,1,1		
10	22	33373	ELBOW, CYLINDER BLOCK TO I	1,1,1		
11	54	20387	CLAMP, PRESSURE HOSE FAST	2,2,2		
12	32	39485	FUEL LINE, FUEL PUMP TO ADA	1,1,1		
13		32454	ADAPTOR, CHECK UNIT (FUEL LI	1,1,1		
14		39052	SEAL, ADAPTOR TO BOTTOM CC	1,1,1		
15	10	24233	SCREW, ADAPTOR TO BOTTOM	2,2,2		
16	24	28357	SPRING, ADAPTOR SCREW	2,2,2		
17	11	20110	NUT, ADAPTOR SCREW	2,2,2		