



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	2123	2695	COWL, TOP	1,	
1	2123	2625	COWL TOP	.1,1	
2		39080	BANKET, SOUND ABSORBING -	1,1,1	
3		39071	BLANKET, SOUND ABSORBING -	1,1,1	
4	25	39086	GROMMET, COWL LATCH - TOP	1,1,1	
5	2128	2667A 3	COVER ASSEMBLY, FRONT	1,	
5	2128	2667A 4	COVER ASSEMBLY, FRONT	.1,	
5	2128	2667A 6	COVER ASSEMBLY, FRONT	.1,	0
6		39039	STRIP, RUBBER - FRONT COVE	1,1,1	
7	23	39578	SPACER, FRONT COVER STUD	2,2,2	
8	11	20361	NUT, FRONT COVER STUD	2,2,2	
9		39880A 2	STARTER HOUSING ASSEMBLY	1,1,1	
10		38454	INSERT, ROPE GUIDE - START	1,1,1	
11		39043	SEAL, STARTER HOUSING TO	1,1,1	
12	10	31294	SCREW, STARTER HO USING TO	2,	
12	10	22485	SCREW, STARTER HOUSING TO	1,	
13	13	26992	LOCKWASHER, STARTER HOUS	3,	
12	10	46962	SCREW, STARTER HOUSING TO	2,2	
12	10	34439	SCREW, STARTER HOUSING TO	.1,1	
14		30976	PULLEY, STARTER CABLE	1,1,1	
15	10	28789	SCREW, CABLE PULLEY TO STA	1,1,1	
16	12	22887	WASHER, CABLE PULLEY SCREW	1,1,1	
17	23	30977	SPACER, CABLE PULLEY	1,1,1	
18		39084	PLATE, SEAL - TOP COWL	2,2,2	
19		39093	SEAL, TOP COWL PLATE	2,2,2	
20	10	30009	SCREW, PLATE AND SEAL TO TI	4,4,4	
21		39027	SHIELD, TOP COWL - REAR	1,1,1	
22	10	20646	SCREW, REAR SHIELD TO TOP C	3,3,3	
23	13	26996	LOCKWASHER, REAR SHIELD SC	3,3,3	
24		39091	SEAL, TOP COWL (33 1/2")	1,1,1	
25		39092	SEAL, TOP COWL - FRONT (4 3/4	1,1,1	
26		39088A 1	COWL LATCH ASSEMBLY, TOP C	1,1,1	
27	24	39094	SPRING, COMPRESSION - COWL	2,2,2	
28	17	39095	PIN, ROLL - SPRING TO COWL	2,2,2	
29	10	22485	SCREW, COWL LATCH TO TOP C	3,3,3	
30	13	26992	LOCKWASHER, COWL LATCH SC	3,3,3	
31	14	20165	TAB WASHER, SHEAVE SHAFT N	1,1,1	
32	11	20166	NUT, SHEAVE SHAFT (LEFT HAN	1,1,1	
33		20155	RETAINER, STARTER SPRING	1,1,1	
34	24	45073A 1	SPRING, STARTER REWIND	1,1,1	
35	22	28912	BUSHING, STARTER SPRING GU	1,1,1	