



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	251	6194A1	FLYWHEEL ASSEMBLY (MANUAL		
1	251	6105A1	FLYWHEEL ASSEMBLY (ELECTR		
1	251	6105A3	FLYWHEEL ASSEMBLY (BELGIUM		12
2	28	50094	KEY, FLYWHEEL DRIVE		
3	12	36245	WASHER, FLYWHEEL NUT		
5	339	5748A	COIL ASSEMBLY, IGNITION		
4	11	20696	NUT, FLYWHEEL		
6	13	26996	LOCKWASHER, IGNITION COIL T		
7	11	4506	NUT, IGNITION COIL TERMINAL		
8		66355	COVER, IGNITION COIL		
9	10	72074	SCREW, COIL COVER TO REAR S		(4 5/8")
10	11	20110	NUT, COIL COVER SCREW		
11	84	63212A2	LEAD ASSEMBLY, HIGH TENSION		
12	332	2854	NIPPLE, IGNITION COIL		
13	85	71006A1	PROTECTOR ASSEMBLY, SPARK		
14	33	58194	SPARK PLUG (AC#V40FFK)		