



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1667	9011A 7	GEAR HOUSING ASSEMBLY (LOP	1		
-	1667	9011A13	GEAR HOUSING ASSEMBLY (X-L)	1		
-	1667	9011A 9	GEAR HOUSING ASSEMBLY (LOP	1		
-	1667	9011A14	GEAR HOUSING ASSEMBLY (X-L)	1		
1	1667	9011A 6	GEAR HOUSING ASSEMBLY ME	1		
1	1667	9011A 8	GEAR HOUSING ASSEMBLY M	1		
41	15	44491A 1	SHIM ASSEMBLY	1		
42	31	30894A 1	TAPERED ROLLER BEARING A	1		
43	43	12634A 2	FORWARD GEAR ASSEMBLY	1		
44	31	30895	ROLLER BEARING	1		
45		12239A 1	CAM FOLLOWER ASSEMBLY	1		
46	24	30622	SPRING	1		
47	52	12777	CLUTCH	1		
48	17	30632	CROSS PIN, CLUTCH	1		
49	24	30893	SPRING, CROSS PIN RETAIN	1		
50	44	12238T	PROPELLER SHAFT	1		
51	43	12635	REVERSE GEAR	1		
52		12596A 2	BEARING CARRIER ASSEMBLY	1		
53	25	97386	"O" RING	1		10,6
54	31	30956	ROLLER BEARING	1		
55	26	76868	OIL SEAL (INNER)	1		6
56	26	70081	OIL SEAL (OUTER)	1		6
57	31	12578	ROLLER BEARING	1		
58	12	12577	THRUST WASHER	1		
59	31	12576	THRUST BEARING	1		
60	10	40003 54	SCREW, BEARING CARRIER	2		
61	12	40023 17	WASHER, BEARING CARRIER	2		
62		13191A 1	THRUST HUB ASSEMBLY	1		
63	14	31210	TAB WASHER, PROPELLER	1		
64	11	52707A 1	PROPELLER NUT ASSEMBLY	1		
-	26	43035A 1	SEAL KIT			
-	27	43004A86	GASKET SET			