



4667

| Parts List |       |           |                               |     |         |          |
|------------|-------|-----------|-------------------------------|-----|---------|----------|
| Ref        | Class | Part      | Description                   | Qty | Comment | Footnote |
| 1          |       | 817275A 2 | HOUSING KIT, Upper Water Pump | 1   |         | 18       |
| 2          | 27    | 817277 1  | GASKET                        | 1   |         | 2,15,18  |
| 3          |       | 817276 1  | FACEPLATE                     | 1   |         | 18       |
| 4          | 10    | 826844 30 | SCREW, (M6 x 30)              | 4   |         | 18       |
| 5          |       | 43023 2   | SEAL                          | 1   |         | 15,18    |
| 6          | 28    | 43037     | KEY                           | 1   |         | 18       |
| 7          | 47    | 43026T 2  | IMPELLER                      | 1   |         | 18       |
| 8          |       | 821889A50 | REV LIMITER                   | 1   |         |          |
| 9          | 10    | 821300 30 | SCREW, (M6 x 30)              | 2   |         |          |
| .          | 26    | 43035A 4  | SEAL KIT, Gear Housing        | 1   |         |          |
| .          | 46    | 43024A 7  | REPAIR KIT, Water Pump        | 1   |         |          |
| .          | 27    | 43004A99  | GASKET SET, Powerhead         | 1   |         |          |