



2002D,2003D

REF	PART NO.	QTY	DESCRIPTION	NOTES
1	860948	1	Injector	
2	861066	1	• Retainer	
3	844294	1	• • Gasket	
4	844295	1	• • O-ring	
5	844296	1	• • Fitting	
6	844297	1	• • Thrust ring	
7	844298	1	• • Lock ring	
8	244797	X	• • Adjusting washer	TH = 1,00 MM
	859464	X	• • Adjusting washer	TH = 1,02 MM
	244798	X	• • Adjusting washer	TH = 1,04 MM
	244788	X	• • Adjusting washer	TH = 1,08 MM
	860174	X	• • Adjusting washer	TH = 1,10 MM
	244804	X	• • Adjusting washer	TH = 1,12 MM
	863780	X	• • Adjusting washer	TH = 1,14 MM
	244801	X	• • Adjusting washer	TH = 1,16 MM
	846963	X	• • Adjusting washer	TH = 1,18 MM
	244799	X	• • Adjusting washer	TH = 1,20 MM
	6212417	X	• • Adjusting washer	TH = 1,22 MM
	244805	X	• • Adjusting washer	TH = 1,24 MM
	244807	X	• • Adjusting washer	TH = 1,28 MM
	859356	X	• • Adjusting washer	TH = 1,30 MM
	244789	X	• • Adjusting washer	TH = 1,32 MM
	858908	X	• • Adjusting washer	TH = 1,34 MM
	244811	X	• • Adjusting washer	TH = 1,36 MM
	846966	X	• • Adjusting washer	TH = 1,38 MM
	244800	X	• • Adjusting washer	TH = 1,40 MM
	6212393	X	• • Adjusting washer	TH = 1,42 MM
	244790	X	• • Adjusting washer	TH = 1,44 MM
	244802	X	• • Adjusting washer	TH = 1,48 MM
	859358	X	• • Adjusting washer	TH = 1,50 MM
	244791	X	• • Adjusting washer	TH = 1,52 MM
	846954	X	• • Adjusting washer	TH = 1,54 MM
	244792	X	• • Adjusting washer	TH = 1,56 MM
	858906	X	• • Adjusting washer	TH = 1,58 MM
	244793	X	• • Adjusting washer	TH = 1,60 MM
	846970	X	• • Adjusting washer	TH = 1,62 MM
	244806	X	• • Adjusting washer	TH = 1,64 MM
	244803	X	• • Adjusting washer	TH = 1,68 MM
	858905	X	• • Adjusting washer	TH = 1,70 MM
	846957	X	• • Adjusting washer	TH = 1,74 MM
	244812	X	• • Adjusting washer	TH = 1,76 MM
	846975	X	• • Adjusting washer	TH = 1,78 MM
	844328	X	• • Adjusting washer	TH = 1,80 MM
	6212420	X	• • Adjusting washer	TH = 1,82 MM
	846958	X	• • Adjusting washer	TH = 1,84 MM
	244813	X	• • Adjusting washer	TH = 1,88 MM
	844332	X	• • Adjusting washer	TH = 1,90 MM
	244795	X	• • Adjusting washer	TH = 1,92 MM
	846959	X	• • Adjusting washer	TH = 1,94 MM
	244796	X	• • Adjusting washer	TH = 1,96 MM
	846980	X	• • Adjusting washer	TH = 1,98 MM
9	1699768	1	• • Spring	
10	844337	1	• • Push rod	
11	844338	1	• • Washer	
12	844339	2	• • • Locating pin	
13	860979	1	• • Cap nut	
14	860949	1	• Nozzle	