


D13B-B MP, D13B-C MP, D13B-D MP, D13B-G MP, D13B-H MP

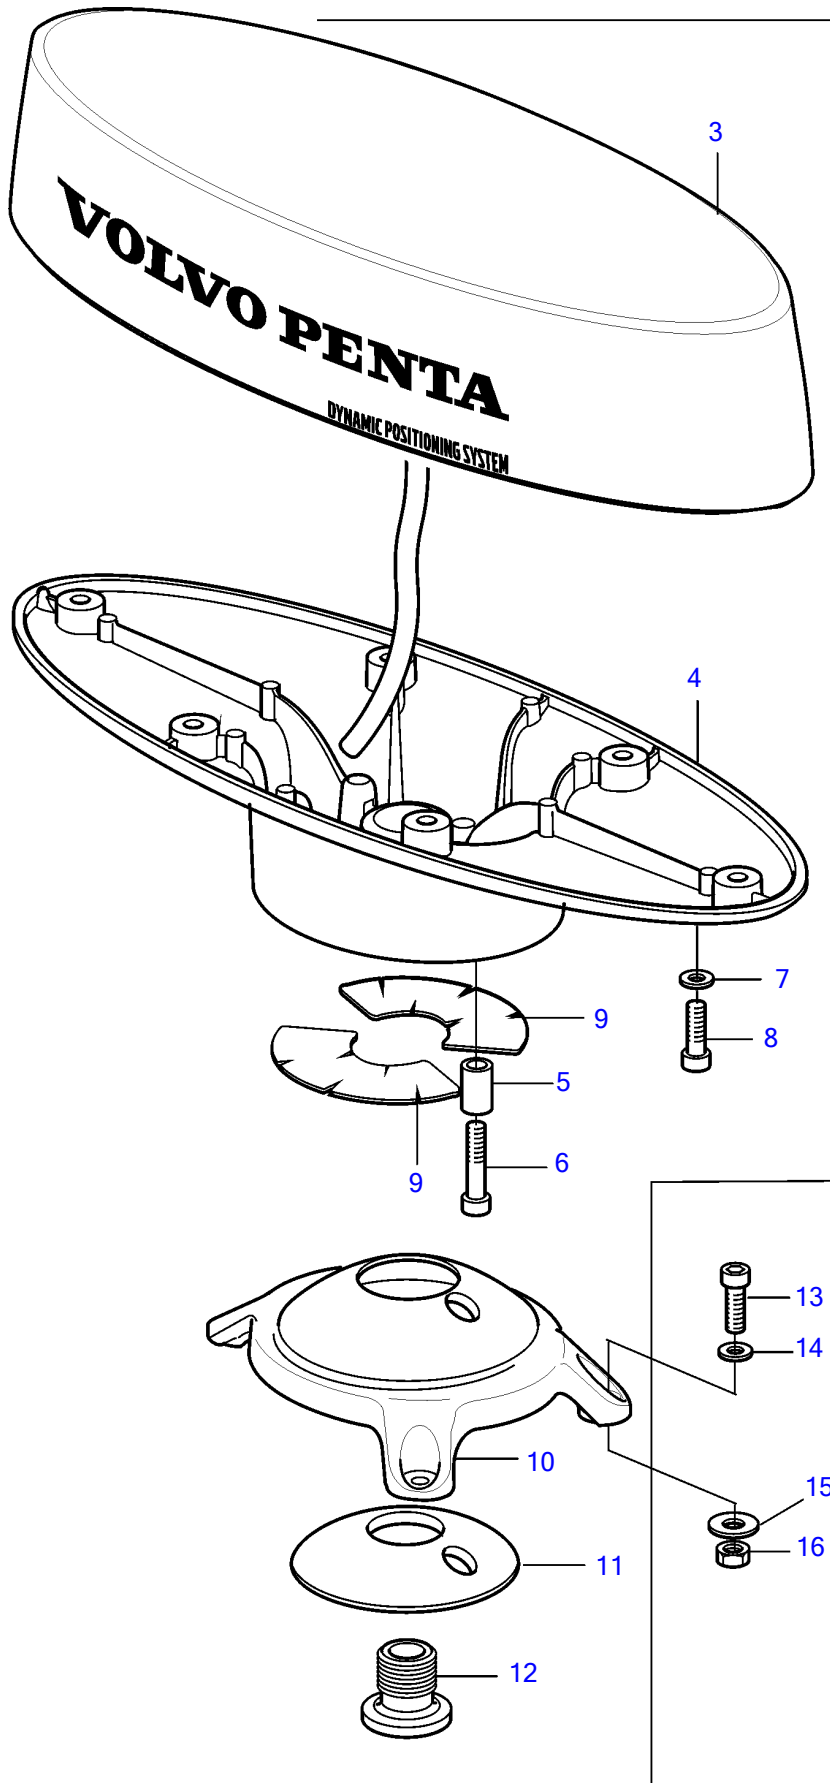

23

WARNING

Do not stand on the motor platform when the propeller is spinning. Do not enter the water while the engine is running. Read the owner's manual for more information.

24

WARNING

When DPS is in Use Boats Underway

Maintain proper LOOKOUT. STAY OUT of water spinning propellers. HOLD ON to prevent the boat from moving suddenly. READ the owner's manual. Failure to observe warnings may result in SEVERE INJURY or DEATH.

1

2

22

24857

D13B-B MP, D13B-C MP, D13B-D MP, D13B-G MP, D13B-H MP

REF	PART NO.	QTY	DESCRIPTION	NOTES
1	21300833	1	Antenna kit	
2	(21300831)	1	• Antenna	Obsolete part
3	21231832	1	• • Sensor	
4	21395738	1	• • Antenna base	
5	478344	2	• • Spacer sleeve	
6	994153	2	• • Hex. socket screw	
7	941670	6	• • Washer	
8	994138	6	• • Hex. socket screw	
9	21328699	2	• • Decal	
10	21300823	1	• • Antenna base	
11	21300829	1	• • Tensioning ring	
12	21330777	1	• • Hollow screw	
13	994153	3	• Hex. socket screw	
14	941670	3	• Washer	
15	993419	3	• Washer	
16	946330	3	• Hexagon nut	
17	21303890	1	• Cable grommet	
18	961314	1	• Cross recessed screw	
19	874960	1	• Insulator	
20	874961	1	• Coding key	
21	8397660	1	• Plug	
22	21231837	1	• Converter	
23	21318999	1	• Decal	
24	21325536	1	• Label	