


D6-310D-B, D6-310D-C, D6-310D-D, D6-330D-B, D6-330D-C, D6-330D-D, D6-370D-B, D6-370D-C, D6-370D-D, D6-310D-E, D6-330D-E, D6-370D-E, D6-435D-A, D6-435D-D, D6-435D-C, D6-435D-E

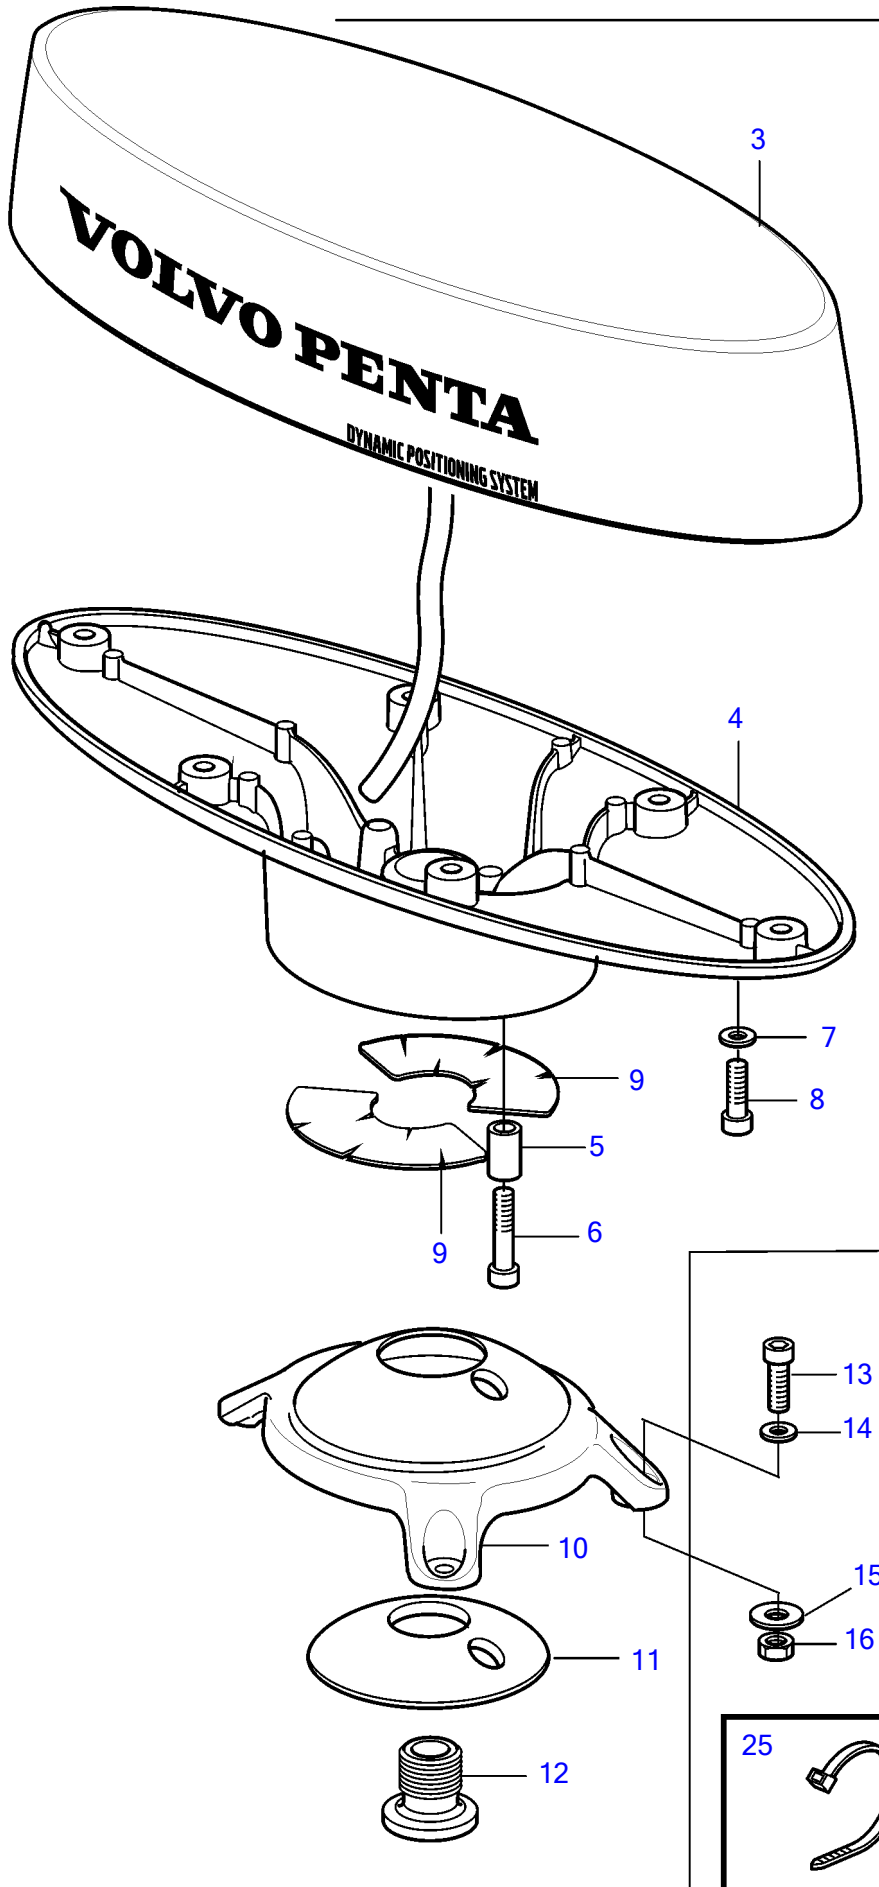

23

**WARNING**

▲ Avoid severe injury or death due to drowning, falls or proper use of correct.

Do not stay on the swim platform when engine is running.

Do not enter the water while engine are running. Boat can move suddenly.

Hold on while on the swim platform.

24

**WARNING**

When DPS is in Use Boats Underway



Maintain proper LOOKOUT. HOLD ON to prevent fall a boat can move suddenly.

STAY OUT of water spinning propellers. READ the owner's manual.

Failure to observe warnings may result in SEVERE INJURY or DEATH.

1

2

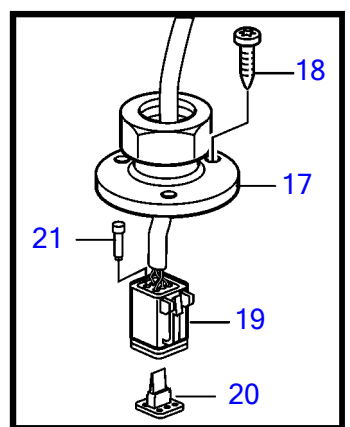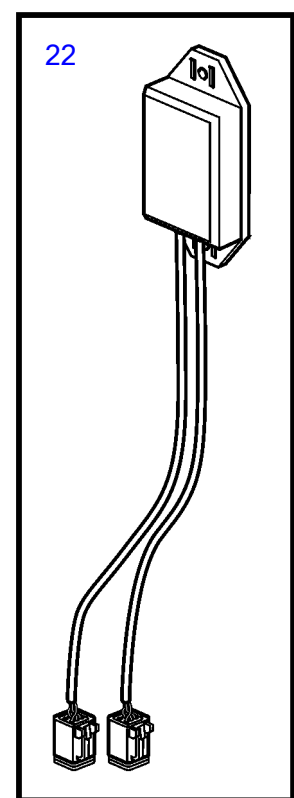

26397

D6-310D-B, D6-310D-C, D6-310D-D, D6-330D-B, D6-330D-C, D6-330D-D, D6-370D-B, D6-370D-C, D6-370D-D, D6-310D-E, D6-330D-E, D6-370D-E, D6-435D-A, D6-435D-D, D6-435D-C, D6-435D-E

REF	PART NO.	QTY	DESCRIPTION	NOTES
1	21300833	1	Antenna kit	
2	(21300831)	1	• Antenna	Obsolete part
3	21231832	1	• • Sensor	
4	21395738	1	• • • Antenna base	
5	478344	2	• • • Spacer sleeve	
6	994153	2	• • • Hex. socket screw	
7	941670	6	• • • Washer	
8	994138	6	• • • Hex. socket screw	
9	21328699	2	• • • Decal	
10	21300823	1	• • • Antenna base	
11	21300829	1	• • • Tensioning ring	
12	21330777	1	• • • Hollow screw	
13	994153	3	• Hex. socket screw	
14	941670	3	• Washer	
15	993419	3	• Washer	
16	946330	3	• Hexagon nut	
17	21303890	1	• Cable grommet	
18	961314	1	• Cross recessed screw	
19	874960	1	• Housing	
20	874961	1	• Wedge	
21	8397660	1	• Plug	
22	21231837	1	• Converter	
23	21318999	1	• Decal	
24	21325536	1	• Label	
25	948211	3	• Cable tie	