
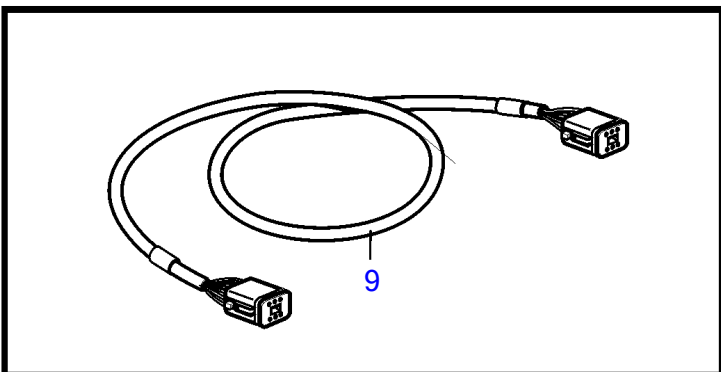
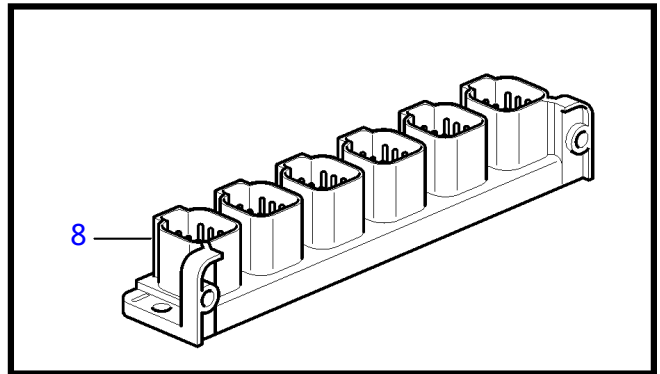
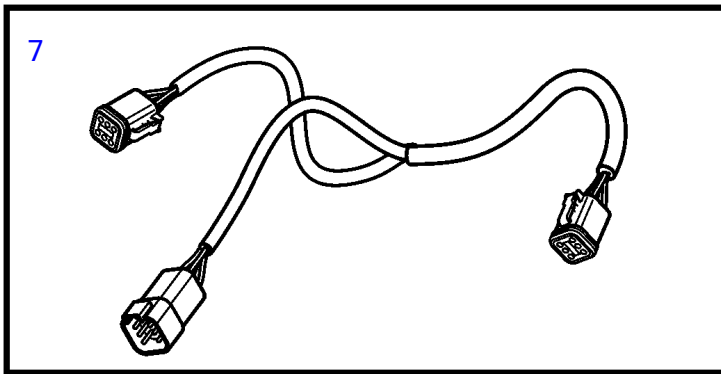


D6-280A-E, D6-280I-E, D6-310A-E, D6-310D-E, D6-310I-E, D6-330A-E, D6-330D-E, D6-330I-E, D6-370A-E, D6-370D-E, D6-370I-E, D6-400A-E, D6-435D-E, D6-435I-E

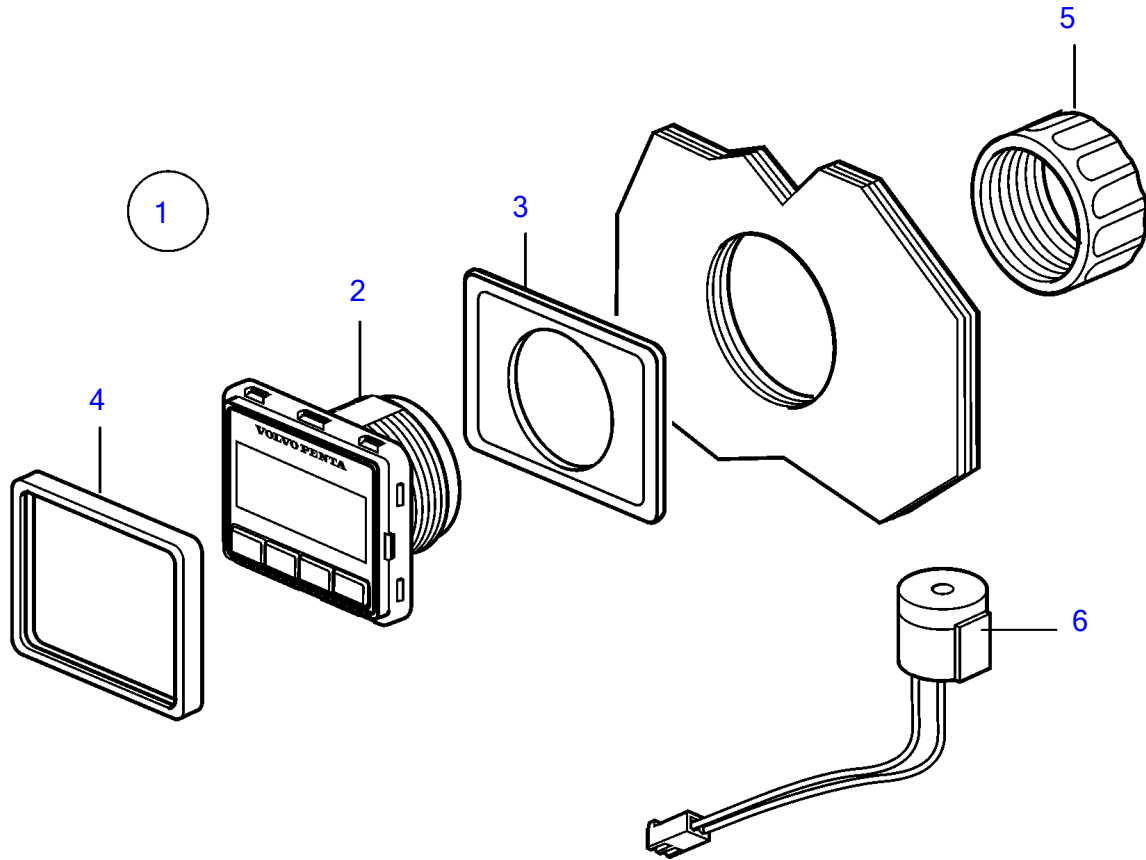

25294

D6-280A-E, D6-280I-E, D6-310A-E, D6-310D-E, D6-310I-E, D6-330A-E, D6-330D-E, D6-330I-E, D6-370A-E, D6-370D-E,
D6-370I-E, D6-400A-E, D6-435D-E, D6-435I-E

REF	PART NO.	QTY	DESCRIPTION	NOTES
1	21761722	1	Display	Flexidisplay button panel
2		1	▪ Display	
3	3808135	1	▪ Gasket	
4	21467057	1	▪ Frame	
5	874450	1	▪ Attaching ring	
6	21358227	1	▪ Buzzer	
7	3588972	1	Cable kit	
8	21469055	1	Connection block	
9	3886666	3	Cable	