



REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	833807	1	Hand start		
2		1	· HOUSING		
3	963014	1	· Set screw		
4	951991	1	· Spring pin		
5	833553	1	· Spacer sleeve		
6	833759	1	· Sealing ring	IK	
7	955990	1	· O-ring	IK	
8	181119	2	· Ball bearing		
9	833552	1	· Spacer sleeve		
10	833555	1	· Shaft		
11	840370	1	· Gear		(803344)
12	941906	3	· Spring washer		
13	942001	3	· Screw		
14	944441	1	O-ring	IK	
15	418954	1	Vent cover		02A-1850
16	940096	1	Gasket	IK	02A-1850
17	833829	1	Oil filling		
18	18806	3	Washer		
19	955249	2	Screw		L = 25 MM
	955252	1	Screw		L = 45 MM
21		1	REV. COUNTER SENDER		SEE GROUP 3
22	955305	2	Screw		L = 75 MM. MD11C/HD-BT.
23	11992	1	Gasket	IK	S.B
	941907	1	Spring washer		P
24	803361	X	Gasket	IK	TH = 0,5 MM
25	833562	1	Bracket		
30	833797	1	Starter crank		
31	833468	1	Hose		
39	833521	1	Plug		