



REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1		1	ALTERNATOR WITH INSTALLATION COMPONENTS		14V 38A, 28V 25A
				030-0500	
		1	ALTERNATOR WITH INSTALLATION COMPONENTS		28V 60A
				030-0650	
2		1	CHARGING RELAY		12V 38A, 24V 25A
				030-0500	
	823766	1	Charge regulator		24V 60A
				030-1350	
3	844737	1			12V
				030-1850	
3	844738	1	Instrument panel		24V
				030-1850	
4	837993	1	Instrument panel		12V. FOR MS3B REVERSE GEAR.
				030-1550	
	837994	1	Instrument panel		24V. FOR MS3B REVERSE GEAR.
				030-1550	
5	837995	1	Instrument panel		12V. NOT INCLUDED IN ALTERNATOR 841765.
				030-1600	
	837996	1	Instrument panel		24V. NOT INCLUDED IN ALTERNATOR 841765.
				030-1600	
6	844758	1			12V. REPLACED BY 1 ALTERATOR 841765 AND 1 CABLE UNIT 841822.
				030-1900	
	844757	1			24V. REPLACED BY 1 ALTERATOR 841765 AND 1 CABLE UNIT 841822.
				030-1900	
7	870998	1	Starter motor		24V REPL BY 847308
				030-1400	
	847308	1	Starter motor		24V
			COMPONENTS NOT SPEC.		
8	953486	3	Stud		
9	942336	3	Spring washer		
10	955827	3	Nut		
11			STOP SOLENOID AND INSTALLATION COMPONENTS		SEE GROUP 2D
12	843365	1	Bracket		LATE TYPE
13	940133	1	Screw		L = 16 MM
	940114	1	Screw		L = 22 MM
14	942336	2	Spring washer		
15	955561	1	Screw		L = 32 MM
16	940280	1	Spring washer		
17	837791	2	Clutch housing		GROUND CABLE-STARTER.
18	837829	1	Terminal block		
19	88578	1	Fuse box		
20	943905	2	Fuse, BLUE		25A
21	837796	4	Screw		
22	17602	8	Nut		
23	941616	4	Screw		
24	77796	2	Fuse		50A
	239148	2	Fuse		80A
25	1501832	1	Relay		12V (839367)
	1501833	1	Relay		24V (839434)
26	950060	3	Screw		

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
27	941907	3	Spring washer		
28	842402	1	Cable trunk		BB225B MO 20394-, BB260B MO 20364-.
29	842397	1			12V 38A. BB225B MO 20325-20393, BB260B MO 20325-20363.
	842394	1	Cable trunk		24V 25A. BB225B MO 20325-20393, BB260B MO 20325-20363.
	842398	1	Cable trunk		24V 60A. BB225B MO 20325-20393, BB260B MO 20325-20363.
30	837836	1	Cable trunk		
31	354671	1	Tachometer sensor		(837783)
32	925059	1	O-ring	IK	
33	843231	1	Oil pressure sensor		
34	843812	1	Switch		(881348)
			ALARM		
35	942490	1	T-nipple		
36	827150	1	Temperature sensor		
37	822858	1	Thermo monitor, ALARM		
38	880281	1	Pressure monitor, HOUR INDICATOR		
39	837781	1	Pressure sensor, REVERSE GEAR		SEE GROUP 4A
40	957181	1	Gasket		SEE GROUP 4A
41	825738	X	Cable trunk		L = 2500 MM
	820419	X	Cable		L = 7000 MM
42	941269	1	Cable grommet		
43			CABLE HOLDER		
44	950158	2	Screw		
45	955588	1	Screw		
46	941912	1	Spring washer		
47	950160	1	Screw		
48	837782	1	Pressure sensor		SEE GROUP 2B
49	957181	1	Gasket		SEE GROUP 2B
50	837772	1	Rudder position sens		
51	837999	1	Tank sensor		
52	956078	4	· Screw		L = 16 MM
	956081	1	· Screw		L = 25 MM
53	834481	5	· Gasket		
54	89865	1	· Gasket		
55	834448	1			
56	233933	1	Switch		12V-24V
57		1	STARTING HEATER WITH INSTALLATION COMPONENTS	030-1000	
		1	EL. EQUIPMENT FOR STARTING HEATER	030-1025	
58	844589	1	Flow indicator		
59	18817	1	Gasket		
60	947626	1	Gasket		
61		1	EMERGENCY STOP	030-0975	