



6597

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1		1	ALTERNATOR AND INSTALLATION COMPONENTS	030-0480	
					28V 55A
		1	ALTERNATOR AND INSTALLATION COMPONENTS	030-0630	
					28V 60A
2	823766	1	Charge regulator		28V 60A
				030-1350	
3	842567	1	Instrument panel		24V
				030-1800	
	846804	1			24V
				030-1937	
4	846803	1	Instrument panel		24V. NOT INCLUDED IN ALTERNATOR 841765.
				030-1932	
	837996	1	Instrument panel		24V. NOT INCLUDED IN ALTERNATOR 841765.
				030-1600	
5	870998	1	Starter motor		24V REPL BY 847308
				030-1400	
	847308	1	Starter motor		24V
			COMPONENTS NOT SPEC.		
6	953486	3	Stud		
7	942336	3	Spring washer		
8	955827	3	Nut		
9		1	STOP SOLENOID AND INSTALLATION COMPONENTS		SEE GROUP 2D
10		1	ELECTRICAL BOX AND INSTALLATION COMPONENTS	030-0235	
11	846616	1	Cable trunk		SPEC. 867494, 867648.
12	843231	1	Oil pressure sensor		
13	843812	1	Switch		ALARM (881348)
14	942490	1	T-nipple		
15	827150	1	Temperature sensor		
16	822858	1	Thermo monitor		ALARM
17	837781	1	Pressure sensor		SEE GROUP 4A
18	947624	1	Gasket		
19	837782	1	Pressure sensor		SEE GROUP 2B
20	947624	1	Gasket		
21	837772	1	Rudder position sens		
22	837999	1	Tank sensor		
23	956078	4	• Screw		L = 16 MM
	956081	1	• Screw		L = 25 MM
24	834481	5	• Gasket		
25	89865	1	• Gasket		
26	834448	1			
27	846648	1	Extension cable		L = 3000 MM
	846649	1	Extension cable		L = 5000 MM
	846650	1	Extension cable		L = 7000 MM
28		X	• CABLES AND TERMINALS	030-1950	
29	354671	1	Tachometer sensor		SEE GROUP 2A
30	925059	1	O-ring		
31		1	EMERGENCY STOP	030-0990	
32		X	CABLE IRON		